

**Amazon Basics K001575**

# Amazon Basics LCD Computer Monitor Stand Riser User Manual

Model: K001575 | Brand: Amazon Basics

## 1. INTRODUCTION

This user manual provides comprehensive instructions for the assembly, operation, maintenance, and troubleshooting of your Amazon Basics LCD Computer Monitor Free-Standing Desk Stand Riser. Designed to enhance your ergonomic workspace, this stand allows for flexible adjustment of your monitor to achieve optimal viewing angles and comfort.



*Figure 1.1: Front view of the Amazon Basics LCD Computer Monitor Stand Riser.*

## 2. FEATURES

---

- **Height Adjustment:** Set the height of your LCD for a comfortable computing experience.
- **Multi-directional Movement:** With fingertip effort, raise or lower your display, pan left/right, tilt, and rotate.
- **Weight Capacity:** Supports monitors weighing between 6-16 pounds.

- **Screen Size Compatibility:** Designed for screens up to 24 inches.
- **Vertical Height Adjustment:** Offers 5 inches of monitor height adjustability.
- **Rotation:** Monitor can be used in portrait or landscape orientation (360° rotation).
- **Tilt Range:** +25/-5 degree tilt capability.
- **Pan Range:** 270° right/left pan from the base.
- **VESA Compatibility:** Supports VESA 100 x 100 mm and 75 x 75 mm mounting patterns.
- **Cable Management:** Integrated cable pass-through channel near the base keeps cables organized.

### 3. PACKAGE CONTENTS

---

Please ensure all components are present before beginning assembly:

- Monitor Stand Base and Arm Assembly
- VESA Mounting Plate
- Mounting Screws (various sizes for VESA 75x75mm and 100x100mm)
- Allen Key (for adjustments and assembly)



*Figure 3.1: Typical components included with the monitor stand.*

## 4. SETUP INSTRUCTIONS

---

1. **Prepare the Stand:** Place the monitor stand base on a stable, flat surface. Ensure the Allen key is accessible, often stored at the bottom of the base.
2. **Attach VESA Plate to Monitor:** Carefully lay your monitor face down on a soft, clean surface to prevent scratches. Align the VESA mounting plate with the screw holes on the back of your monitor. Use the appropriate mounting screws (M4 or M5, depending on your monitor) to secure

the plate to the monitor. Do not overtighten.

3. **Mount Monitor to Stand:** With the VESA plate attached to your monitor, carefully lift the monitor and slide the VESA plate onto the arm of the stand. Ensure it clicks securely into place.
4. **Adjust Tension (if necessary):** If the monitor sags or is too stiff to adjust, use the included Allen key to adjust the tension screws on the arm. These are typically located near the VESA plate attachment point or along the arm's pivot points. Turn clockwise to increase tension (stiffer movement) and counter-clockwise to decrease tension (looser movement).



*Figure 4.1: Allen key storage on the underside of the stand base.*

## 5. OPERATING INSTRUCTIONS

---

The Amazon Basics LCD Monitor Riser offers a range of adjustments for optimal viewing comfort:

- **Height Adjustment:** Gently push or pull the monitor up or down to your desired height. The stand is designed to hold its position once released.
- **Tilt Adjustment:** Grasp the top and bottom edges of your monitor and gently tilt it forward or backward to achieve the perfect viewing angle.
- **Pan Adjustment:** Rotate the entire stand base left or right on your desk for horizontal viewing adjustments.
- **Rotation (Portrait/Landscape):** Rotate the monitor 360 degrees to switch between landscape and portrait orientations. Ensure no cables are tangled during rotation.



*Figure 5.1: Monitor on stand in landscape orientation.*



*Figure 5.2: Monitor on stand in portrait orientation, side view.*

## 5.1. Official Product Video

Your browser does not support the video tag.

*Video 5.1: An official product video demonstrating the features and adjustments of the Amazon Basics LCD Monitor Stand Adjustable Riser.*

## 6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to wipe down the stand. For stubborn marks, a slightly damp cloth with mild soap can be used, followed by drying. Avoid abrasive cleaners or solvents.
- **Regular Checks:** Periodically check all screws and connections to ensure they are secure. Retighten if necessary using the provided Allen key.
- **Cable Management:** Ensure cables are routed neatly through the cable pass-through channel to prevent strain or damage.

## 7. TROUBLESHOOTING

- **Monitor Sags or Won't Stay Up:**

This indicates that the tension on the arm is too loose. Use the Allen key to tighten the tension screws on the arm until the monitor holds its position securely. Refer to Section 4, Step 4 for guidance.

- **Monitor is Too Stiff to Adjust:**

The tension on the arm may be too tight. Use the Allen key to loosen the tension screws slightly until movement is smooth but still holds position.

- **Monitor Wobbles:**

Ensure the stand is placed on a stable, flat surface. Check that all assembly screws are tightened securely, including those attaching the VESA plate to the monitor and the monitor to the stand.

- **Cables are Tangled:**

Utilize the integrated cable pass-through channel at the base of the stand to route cables neatly. This prevents tangling and keeps your workspace tidy.

## 8. SPECIFICATIONS

Attribute	Value
Model Number	K001575
Brand	Amazon Basics
Material	Aluminum
Color	Black
Item Weight	5 pounds (2.27 kg)
Product Dimensions (LxWxH)	12 x 10.2 x 15.8 inches (30.5 x 25.9 x 40.1 cm)
Max Screen Size Supported	24 Inches
Weight Adjustable Range	6-16 pounds (2.7-7.2 kg)
Height Adjustability	5 inches (12.7 cm)
Tilt Angle	+25/-5 degrees
Pan Angle	270 degrees (right/left from base)
Rotation	360 degrees (portrait/landscape)
VESA Compatibility	75x75mm, 100x100mm



## 9. WARRANTY AND SUPPORT

---

This product is backed by an Amazon Basics 1-Year Limited Warranty. For detailed warranty information or technical support, please refer to the official Amazon Basics website or contact Amazon customer service directly.

**Online Support:** Visit [Amazon Customer Service](#)