

[Manuals.plus](#) /

› [Hamilton Beach](#) /

› Hamilton Beach Digital Countertop Toaster Oven with Easy Reach Roll-Top Door (Model 31128) - Instruction Manual

Hamilton Beach 31128

Hamilton Beach Digital Countertop Toaster Oven with Easy Reach Roll-Top Door

MODEL 31128 - INSTRUCTION MANUAL

Product Overview

The Hamilton Beach Digital Countertop Toaster Oven, Model 31128, features an innovative Easy Reach Roll-Top Door designed for convenient access to food and to maximize countertop space. This appliance offers versatile cooking functions including Toast, Bake, Broil, Pizza, and Convection settings, all controlled via a digital interface.



Image: The Hamilton Beach Digital Countertop Toaster Oven, Model 31128, shown with a pizza on a cutting board, highlighting its capacity.

Key Features

- **Easy Reach Roll-Top Door:** Provides convenient access to food and saves countertop space by rolling up and over the oven.
- **Digital Control Display:** Offers precise control for various cooking functions.
- **Five Cooking Settings:** Includes Convection, Toast, Bake, Broil, and Pizza for diverse cooking needs.
- **Capacity:** Accommodates up to 6 slices of toast or a 12-inch pizza.
- **Two Rack Positions:** Allows for cooking a wider variety of foods by adjusting the rack height.
- **Easy to Clean:** The design minimizes spills on the door, simplifying cleanup.

Setup

1. **Unpacking:** Carefully remove all packaging materials, including any protective films or inserts from inside the oven.
2. **Placement:** Place the toaster oven on a stable, heat-resistant surface, ensuring adequate clearance (at least 4 inches) from walls or other appliances for proper ventilation.
3. **First Use:** Before first use, wipe down the interior with a damp cloth. It is recommended to run the oven empty on the Bake setting at 400°F (200°C) for approximately 10-15 minutes to burn off any manufacturing residues. Some smoke or odor may be present during this initial use; this is normal.
4. **Power Connection:** Plug the appliance into a standard electrical outlet.

Operating Instructions

Digital Control Panel

The toaster oven features a digital control panel for selecting cooking functions, temperature, and time. The display will show the selected settings.



Image: Detailed view of the digital control panel with buttons for various functions and temperature/time adjustments.

To operate:

- Press the **Power** button to turn on the oven.
- Select your desired cooking function (e.g., **BAKE**, **TOAST**, **BROIL**, **PIZZA**, **CONVECTION**).
- Use the **Temperature** (🕒) and **Time** (🕒) adjustment buttons to set your desired cooking parameters. Press and hold the buttons for faster adjustment.
- Press the **Start/Stop** button to begin cooking.
- To activate Convection mode, select a cooking function (e.g., Bake) and then press the **CONVECTION** button.

Rack Positions

The oven includes two rack positions to accommodate different food sizes and cooking requirements. The upper position is ideal for broiling or toasting, while the lower position is suitable for baking larger items like roasts or pizzas.



Image: The toaster oven with its roll-top door fully open, revealing the interior and a rack with six slices of toast.

Roll-Top Door Operation

The unique roll-top door lifts up and back, providing full, unobstructed access to the oven interior. This design helps prevent spills on the door and makes it easier to place and remove food.

Your browser does not support the video tag.

Video: A comparison video demonstrating the digital controls and the roll-top door feature of the Hamilton Beach Toaster Oven, Model 31128.

Maintenance and Cleaning

Regular cleaning ensures optimal performance and longevity of your toaster oven.

- **Before Cleaning:** Always unplug the toaster oven and allow it to cool completely before cleaning.
- **Exterior:** Wipe the exterior surfaces with a damp cloth and mild detergent. Do not use abrasive cleaners or scouring pads.

- **Interior:** The interior is designed for easy cleaning. Wipe down the interior walls and heating elements with a damp cloth. For stubborn food residue, a non-abrasive cleaner can be used sparingly.
- **Crumb Tray:** The removable crumb tray should be emptied and cleaned regularly. Slide out the tray, discard crumbs, and wash with warm, soapy water. Rinse and dry thoroughly before replacing.
- **Racks and Bake Pan:** Wash the wire rack and bake pan in warm, soapy water. These are generally dishwasher-safe, but hand washing is recommended for best results.

Specifications

Brand	Hamilton Beach
Model Number	31128
Model Name	Hamilton Beach Digital Countertop Toaster Oven with Easy Reach
Color	Stainless Steel
Material	Stainless Steel
Capacity	6-Slice (or 12-inch pizza)
Special Feature	Programmable, Digital Control Display, Convection
Power Source	Electric
Item Weight	13.4 Pounds
Included Components	Bake Pan, Wire Rack

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B01IHNV95G>

More documents and user manuals: <https://manuals.plus/>