 



- Manuals.plus /
- › Simple Houseware /
  - › Simple Houseware Heavy Duty Double Rail Clothing Garment Rack (Model BO-008-1) Instruction Manual

Simple Houseware BO-008-1



# Simple Houseware Heavy Duty Double Rail Clothing Garment Rack

 Model: BO-008-1  
Brand: Simple Houseware



## 1. INTRODUCTION

This instruction manual provides detailed guidance for the assembly, operation, and maintenance of your Simple Houseware Heavy Duty Double Rail Clothing Garment Rack. Designed for durability and versatility, this rack offers substantial storage capacity and mobility for various clothing organization needs.



Figure 1: Fully assembled Simple Houseware Heavy Duty Double Rail Clothing Garment Rack.

## 2. PARTS LIST

Before beginning assembly, ensure all components listed below are present. If any parts are missing or damaged, please contact customer support.

- Base Frame (A)
- Vertical Support Poles (B, C)
- Lower Horizontal Support Bars (D, E)
- Upper Horizontal Rods (F, G)
- Extendable Rods (H, J)
- Bottom Wire Grid (N)
- Heavy Duty Casters/Wheels (1, 2)
- Assembly Screws (Q)

- Allen Wrench (Tool)



Figure 2: Exploded view of all components included in the package.

### 3. SETUP (ASSEMBLY INSTRUCTIONS)

Follow these steps to assemble your garment rack. An assembly video is provided for visual guidance.

1. **Assemble the Base:** Connect the lower horizontal support bars (D, E) to the base frame (A) using the provided screws (Q). Ensure all connections are secure.
2. **Attach Vertical Supports:** Insert the vertical support poles (B, C) into the designated slots on the base frame.
3. **Install Bottom Wire Grid:** Place the bottom wire grid (N) onto the lower horizontal support bars, ensuring it sits securely.
4. **Attach Casters/Wheels:** Screw the heavy-duty casters/wheels (1, 2) into the bottom of the base frame. Ensure two locking casters are installed diagonally for stability.
5. **Install Upper Horizontal Rods:** Insert the upper horizontal rods (F, G) into the top of the vertical support poles. These rods feature spring-loaded buttons for height adjustment.
6. **Insert Extendable Rods:** Slide the extendable rods (H, J) into the ends of the upper horizontal rods. These can be pulled out to increase hanging space.

Video 1: Step-by-step assembly guide for the double rod clothes rack. This video demonstrates how to connect the various components and secure them properly.



Figure 3: The extendable horizontal rods provide additional hanging capacity.

## 4. OPERATING INSTRUCTIONS

### 4.1 Adjusting Rod Length

The horizontal rods are extendable from 42.75 inches to 67.75 inches. To extend, simply pull the inner rod outwards from the main rod. To retract, push the inner rod back in until it is flush with the main rod. This allows for flexible hanging space depending on your needs.

### 4.2 Adjusting Upper Rod Height

The upper horizontal rods can be adjusted vertically. Locate the spring-loaded buttons on the vertical support poles. Press these buttons and slide the upper rod assembly up or down to your desired height. Ensure the buttons click securely into place at the chosen height setting.

### 4.3 Using Casters/Wheels

The garment rack is equipped with heavy-duty 4-inch casters for easy mobility. Two of these casters include locking mechanisms. To lock a wheel, press down on the lever located on the caster. To unlock, lift the lever. It is recommended to lock at least two wheels when the rack is stationary to prevent unintended movement.



Figure 4: Detail of a heavy-duty caster with its locking lever.

## 5. MAINTENANCE

- **Cleaning:** Wipe down the chrome metal surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that may damage the finish.
- **Regular Inspection:** Periodically check all screws and connections to ensure they remain tight. Tighten any loose fasteners to maintain stability and safety.
- **Caster Care:** Keep the casters free of debris (hair, lint, etc.) to ensure smooth rolling.

## 6. TROUBLESHOOTING

- **Rack is Unstable:** Ensure all screws are tightened securely. Verify that the vertical support poles are fully inserted and locked into place.
- **Wheels Not Rolling Smoothly:** Check casters for accumulated debris and remove if present. Ensure the locking mechanisms are disengaged.
- **Rods Not Extending/Retracting:** Ensure there is no obstruction within the rods. Apply a small amount of silicone-based lubricant if movement is stiff.

## 7. SPECIFICATIONS

|                                  |                                              |
|----------------------------------|----------------------------------------------|
| Brand                            | Simple Houseware                             |
| Model Number                     | BO-008-1                                     |
| Color                            | Chrome                                       |
| Material                         | Metal                                        |
| Product Dimensions (D x W x H)   | 21.25"D x 67.75"W x 61.75"H (fully extended) |
| Extendable Horizontal Rod Length | 42.75" to 67.75"                             |
| Load Capacity                    | 200 Pounds                                   |

|                 |                                                      |
|-----------------|------------------------------------------------------|
| Item Weight     | 15.6 Pounds                                          |
| Special Feature | Heavy Duty, Collapsible, Extendable, Rolling Casters |

## 8. WARRANTY AND SUPPORT

For warranty information, product support, or to inquire about replacement parts, please refer to the contact information provided with your purchase or visit the official Simple Houseware website. Please retain your proof of purchase for any warranty claims.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

#### Name

#### Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

#### Question

#### Details

Submit question

Open the live page

<https://manuals.plus/asin/B01IIXR06C>

More documents and user manuals: <https://manuals.plus/>