

[Manuals.plus](#) /

› [Absaar](#) /

› ABSAAR AB100-1275 Standard Battery Charger User Manual

Absaar AB100-1275

ABSAAR AB100-1275 Standard Battery Charger User Manual

Model: AB100-1275

1. INTRODUCTION

The ABSAAR AB100-1275 is a high-quality and robust battery charger designed for problem-free charging of starter batteries. Its advanced technology ensures reliable operation. This charger is suitable for charging all 6V and 12V starter batteries, including lead-acid, AGM, and gel types.

With a maximum charging current of 7.5 Amperes, it can efficiently charge batteries up to 80Ah. The charger features automatic voltage detection and will automatically stop the charging process once the battery is fully charged, providing overcharge and overheating protection.



Figure 1: ABSAAAR AB100-1275 Standard Battery Charger with insulated clamps.

2. IMPORTANT SAFETY INSTRUCTIONS

Please read and understand all safety instructions before operating the charger. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always wear eye protection and protective clothing when working with batteries.
- Ensure the charging area is well-ventilated.
- Never charge a frozen battery.
- Keep the charger away from flammable materials.
- Do not expose the charger to rain or wet conditions.
- Disconnect the AC power before making or breaking connections to the battery.
- Keep out of reach of children.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- ABSAAR AB100-1275 Battery Charger Unit
- Integrated Power Cable
- Integrated Charging Cables with Insulated Clamps (Red for positive, Black for negative)
- User Manual (this document)



Figure 2: Insulated battery clamps for safe connection.

4. PRODUCT FEATURES

- **Automatic Voltage Detection:** Automatically detects 6V or 12V battery systems.
- **Multiple Charging Currents:** Selectable charging currents of 2A, 4A, and 7.5A.
- **Versatile Battery Compatibility:** Charges lead-acid, AGM, and gel batteries.
- **Wide Application:** Suitable for 6V motorcycle and classic car batteries, and 12V batteries (20-80Ah) for mid-range cars, lawnmowers, and scooters.
- **LED Display:** Clear LED indicators for charging status, voltage (6V/12V), and full charge.
- **Safety Protections:** Includes overcharge and overheating protection.
- **Compact and Portable:** Compact design with an ergonomic carrying handle for easy transport.



Figure 3: Close-up of the control panel showing LED display and MODE button.

5. SETUP

1. **Prepare the Battery:** Ensure the battery terminals are clean and free of corrosion. If necessary, clean them with a wire brush.
2. **Position the Charger:** Place the charger on a stable, dry, and non-flammable surface, away from the battery to be charged. Ensure adequate ventilation.
3. **Connect to Battery:**
 - Connect the **RED** positive (+) clamp to the positive (+) terminal of the battery.
 - Connect the **BLACK** negative (-) clamp to the negative (-) terminal of the battery.
 - For batteries installed in a vehicle, connect the negative (-) clamp to the vehicle chassis or engine block, away from the battery and fuel line.
4. **Connect to Power:** Plug the charger's AC power cord into a standard electrical outlet (230V AC, 50Hz).

6. OPERATING INSTRUCTIONS

Once connected, the charger will automatically detect the battery voltage (6V or 12V) and display it on the LED screen. The "Charging" indicator will illuminate.

1. **Select Charging Current:** Press the **MODE** button to cycle through the available charging currents: 2A, 4A, and 7.5A. Select the appropriate current for your battery size and type.
 - **2A:** For smaller batteries (e.g., motorcycles, scooters).
 - **4A:** For medium-sized batteries.
 - **7.5A:** For larger batteries (e.g., car batteries up to 80Ah).

2. **Monitor Charging:** The LED display will show the charging progress. The "Charging" light will remain on during the charging process.
3. **Full Charge Indication:** Once the battery is fully charged, the "Full" indicator light will illuminate, and the charger will automatically stop the charging process to prevent overcharging.
4. **Disconnecting the Charger:**

◦ First, unplug the AC power cord from the electrical outlet.

◦ Then, disconnect the negative (-) black clamp from the battery terminal or chassis.

◦ Finally, disconnect the positive (+) red clamp from the battery terminal.

7. MAINTENANCE

- **Cleaning:** Clean the charger casing with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Cable Inspection:** Regularly inspect the charging cables and clamps for any signs of damage, fraying, or corrosion. Replace if damaged.
- **Storage:** Store the charger in a cool, dry place when not in use. Ensure cables are neatly coiled and not kinked.
- **Battery Terminals:** Keep battery terminals clean to ensure good contact and efficient charging.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Charger not turning on / No display	No AC power; Loose connection; Faulty outlet.	Check power cord connection; Try a different outlet; Ensure power is available.
"Charging" light not illuminating	Incorrect battery connection (reversed polarity); Battery too deeply discharged; Faulty battery.	Verify correct clamp connection (red to +, black to -); Battery may be beyond recovery; Have battery tested by a professional.
Charger stops charging prematurely	Battery fully charged; Overheating protection activated.	Check "Full" indicator; Ensure adequate ventilation around charger; Allow charger to cool down.
Charger gets hot during operation	Normal operation; Insufficient ventilation; Overload.	Some heat is normal; Ensure charger is in a well-ventilated area; Check battery capacity is within charger's limits.

9. TECHNICAL SPECIFICATIONS

Feature	Specification
Model Number	AB100-1275
Input Voltage	230V AC, 50Hz (Typical for EU)
Output Voltage	6V / 12V DC (Automatic Detection)
Charging Current	2A / 4A / 7.5A (Selectable)

Feature	Specification
Battery Capacity	20-80Ah
Compatible Battery Types	Lead-acid, AGM, Gel
Protection Features	Overcharge, Overheating, Reverse Polarity
Dimensions (Approx.)	18.8 x 15.4 x 10.4 cm
Weight (Approx.)	460 g
Manufacturer	MSA International S.A.

10. WARRANTY AND SUPPORT

ABSAAR products are manufactured to high-quality standards. For warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official ABSAAR website. Please retain your proof of purchase for warranty claims.

For further assistance, you may contact your retailer or the manufacturer directly. Always provide the model number (AB100-1275) when seeking support.

© 2024 Absaar. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B01IN9OGUO>

More documents and user manuals: <https://manuals.plus/>