## Manuals+

Q & A | Deep Search | Upload

#### manuals.plus /

- Transcend /
- > Transcend 8GB microSDHC Memory Card with SD Adapter User Manual

## Transcend U818A HD-U09371

# Transcend 8GB microSDHC Memory Card with SD Adapter User Manual

Model: U818A HD-U09371

## 1. Introduction

This manual provides instructions for the proper use and maintenance of your Transcend 8GB microSDHC Memory Card with SD Adapter. Please read this manual thoroughly before using the product to ensure optimal performance and data integrity.

#### 2. PRODUCT OVERVIEW

The Transcend 8GB microSDHC Memory Card is a high-capacity, high-performance storage solution designed for various compatible devices such as smartphones, drones, digital cameras, and other portable electronics. It comes with an SD adapter for broader compatibility with devices that accept standard SD cards.



Image 1: A microSDHC card and its accompanying SD adapter. Note: The branding shown in this image may differ from the Transcend product.

## 3. SETUP AND INSTALLATION

# 3.1 Inserting the microSDHC Card into the SD Adapter

- 1. Locate the microSDHC card slot on the side of the SD adapter.
- 2. Align the microSDHC card with the slot, ensuring the gold contacts face the same direction as the adapter's contacts.
- 3. Gently push the microSDHC card into the slot until it clicks into place. Do not force the card.

## 3.2 Inserting the Card (or Adapter) into a Device

- 1. Identify the memory card slot on your compatible device (e.g., smartphone, drone, camera, computer card reader).
- 2. If using the microSDHC card directly, insert it into the device's microSD slot. If using the SD adapter, insert the adapter into the device's standard SD card slot.
- 3. Ensure the card or adapter is fully seated. Refer to your device's manual for specific insertion instructions.



Image 2: Illustrates inserting a microSD card into a laptop's card reader for data transfer. Note: The branding shown in this image may differ from the Transcend product.

## 3.3 Initial Formatting (If Required)

Most new memory cards come pre-formatted. However, if your device prompts you to format the card, or if you experience issues, follow these steps:

- **Backup Data:** Formatting will erase all data on the card. Ensure any important data is backed up before proceeding.
- **Device Formatting:** It is recommended to format the card using the device it will primarily be used with (e.g., camera, drone). This ensures optimal compatibility and performance.
- **Computer Formatting:** If formatting via a computer, use the exFAT or FAT32 file system for best compatibility with most devices.

## 4. OPERATING INSTRUCTIONS

## 4.1 Storing Data

Once the memory card is inserted and recognized by your device, it will function as an available storage location. You can save photos, videos, documents, and other files directly to the card through your device's

interface. Refer to your device's user manual for specific instructions on how to select the memory card as the default storage or how to move files to it.

## 4.2 Accessing and Transferring Data

To access data stored on the card or transfer it to another device (e.g., a computer):

- 1. **Using a Card Reader:** Insert the microSDHC card (either directly or via the SD adapter) into a compatible card reader connected to your computer. The card will appear as a removable drive.
- 2. **Direct Device Connection:** Connect your device (e.g., smartphone, camera) to your computer using a USB cable. The device's internal storage and the memory card will typically be accessible.
- 3. **File Management:** Use your computer's file explorer (Windows) or Finder (macOS) to browse, copy, move, or delete files on the memory card.



Image 3: Demonstrates the wide compatibility of microSD cards with devices like DSLR cameras. Note: The branding shown in this image may differ from the Transcend product.

### 5. Maintenance and Care

Proper care extends the life of your memory card and protects your data:

- Handle with Care: Avoid bending, dropping, or applying excessive force to the card or adapter.
- Protect Contacts: Do not touch the gold contacts on the card or adapter. Keep them clean and free
  from dust or debris.
- Safe Removal: Always safely eject the memory card from your computer or device before physically removing it. This prevents data corruption.
- **Storage:** Store the card in its protective case or a suitable storage solution when not in use to prevent physical damage and exposure to extreme temperatures or moisture.
- Cleaning: If necessary, gently wipe the contacts with a soft, lint-free cloth. Do not use harsh chemicals or abrasive materials.

## 6. TROUBLESHOOTING

#### 6.1 Card Not Detected

- Re-insert: Remove and re-insert the card or adapter, ensuring it is fully seated in the slot.
- Check Compatibility: Verify that your device supports microSDHC cards and the specified capacity (8GB).
- Try Another Device/Adapter: Test the card in a different compatible device or with another SD adapter to rule out a device or adapter issue.
- Check Lock Switch: If using the SD adapter, ensure the lock switch on the side is in the unlocked (up) position.

#### 6.2 Read/Write Errors or Slow Performance

- Free Space: Ensure there is sufficient free space on the card.
- **Device Performance:** The speed of data transfer can also be limited by the device or card reader being used.
- Reformat: If issues persist and you have backed up your data, try reformatting the card using your device or a computer.
- Card Health: If the card continues to exhibit issues after troubleshooting, it may be damaged or nearing the end of its lifespan.

### 7. SPECIFICATIONS

Feature	Specification
Brand	Transcend
Model Number	U818A HD-U09371
Memory Storage Capacity	8 GB
Flash Memory Type	Micro SDHC, SD
Hardware Interface	microSDHC
Compatible Devices	Smartphone (and other compatible devices like drones, cameras)
Item Weight	2.08 ounces

Feature	Specification
Product Dimensions	2 x 2 x 2 inches
UPC	724327599312
Date First Available	July 12, 2016

## 8. WARRANTY AND SUPPORT

## 8.1 Manufacturer's Warranty

Transcend products are typically covered by a manufacturer's warranty. For detailed information regarding the warranty period, terms, and conditions for your 8GB microSDHC Memory Card, please refer to the official Transcend website or the warranty documentation included with your purchase.

## **8.2 Customer Support**

If you encounter issues that cannot be resolved using the troubleshooting steps in this manual, or if you require further assistance, please contact Transcend customer support. Support contact information can typically be found on the official Transcend website.

© 2023 Transcend. All rights reserved.

# Related Documents - U818A HD-U09371



## Transcend Micro Software User Guide

User guide for the Transcend Micro CPAP device software, detailing configuration, compliance management, data reporting, and contact information for Transcend Inc.



## Transcend Micro CPAP Machine Quick Guide

A quick guide to setting up and using the Transcend Micro Continuous Positive Airway Pressure (CPAP) device, including information on its features, operation, and maintenance.

