

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Transcend](#) /

› [Transcend 128GB SDXC Memory Card User Manual](#)

Transcend Q8 Handy Video Recorder-KSD128GB

Transcend 128GB SDXC Memory Card User Manual

Model: Q8 Handy Video Recorder-KSD128GB

PRODUCT OVERVIEW

The Transcend 128GB Secure Digital Class 10 Extreme Capacity (SDXC) Memory Card is designed for high-performance storage in compatible devices such as digital cameras, camcorders, and other devices requiring high-speed data transfer.

Transcend

LOCK

30MB/s 200x

 TM
⑩ **XC I**

128GB

Image: Front view of the Transcend 128GB SDXC Memory Card, showing the Transcend logo, 128GB capacity, SDXC, Class 10, and 30MB/s 200x speed ratings.

Key Features:

- **128GB Storage Capacity:** Provides ample space for high-resolution photos and Full HD videos.

- **Class 10 Speed Rating:** Ensures fast data transfer rates for smooth recording and playback.
- **Optimized Performance:** Ideal for rapid-fire photo bursts and high-resolution video recording.
- **SDXC Compatibility:** Designed for devices supporting the SDXC standard.

SETUP GUIDE

Before using your Transcend 128GB SDXC Memory Card, ensure your device is compatible with SDXC cards and supports the required capacity.

Inserting the Memory Card:

1. **Locate the SD Card Slot:** Identify the memory card slot on your camera, camcorder, or other compatible device. Refer to your device's manual if unsure.
2. **Orient the Card:** Hold the Transcend SDXC card with the label facing up (or as indicated by your device's slot) and the metal contacts facing into the device.
3. **Insert Gently:** Slide the card into the slot until it clicks into place. Do not force the card, as this may damage the card or the device.
4. **Format (Optional/Recommended):** For first-time use or if experiencing issues, it is recommended to format the card using your device's internal formatting function. *Note: Formatting will erase all data on the card.*

Removing the Memory Card:

1. **Safely Eject:** Always ensure the device is powered off or that the card is safely ejected through the device's menu before physical removal to prevent data corruption.
2. **Press to Release:** Gently push the card further into the slot until it springs out slightly.
3. **Pull Out:** Carefully pull the card out of the slot.

OPERATING INSTRUCTIONS

Once the Transcend SDXC card is properly inserted and recognized by your device, it is ready for use.

Recording and Storing Data:

- **Photo Capture:** When taking photos, your device will automatically save them to the SDXC card. The Class 10 speed ensures quick saving of high-resolution images and continuous shooting.
- **Video Recording:** For video recording, especially Full HD or higher resolutions, the card's high write speed (95 MB/s) supports smooth, uninterrupted capture.
- **Data Transfer:** To transfer files to a computer, insert the card into a compatible card reader or connect your device directly to the computer. Drag and drop files or use your device's software.

Understanding Speed Ratings:

The card features a Class 10 speed rating, indicating a minimum write speed of 10 MB/s. It also boasts read and write speeds of up to 95 MB/s, ensuring efficient performance for demanding applications.

MAINTENANCE AND CARE

Proper care of your Transcend SDXC memory card will extend its lifespan and protect your data.

- **Handle with Care:** Avoid bending, dropping, or subjecting the card to excessive force.

- **Protect Contacts:** Do not touch the metal contacts on the card, as oils and dirt can interfere with performance. Keep the card in a protective case when not in use.
- **Temperature and Humidity:** Store the card in a cool, dry place, away from extreme temperatures, direct sunlight, and high humidity.
- **Data Backup:** Regularly back up important data from your memory card to a computer or other storage device to prevent data loss.
- **Cleaning:** If necessary, gently clean the metal contacts with a soft, lint-free cloth. Do not use abrasive materials or harsh chemicals.

TROUBLESHOOTING

If you encounter issues with your Transcend 128GB SDXC Memory Card, try the following solutions:

- **Card Not Recognized:**

- Ensure the card is fully inserted into the slot.
- Check if your device supports SDXC cards and the 128GB capacity.
- Try the card in another compatible device or card reader to rule out a device issue.
- Clean the card's metal contacts.

- **Slow Performance/Errors:**

- Ensure the card is not full. Delete unnecessary files or transfer them to another storage device.
- Format the card using your device's formatting function. (*Warning: This will erase all data.*)
- Verify that your device's firmware is up to date.

- **Data Corruption:**

- Always safely eject the card before removal.
- Avoid removing the card during data transfer or recording.
- If data is corrupted, data recovery software may be an option, but success is not guaranteed.

If problems persist, contact Transcend customer support.

TECHNICAL SPECIFICATIONS

Feature	Value
Brand	Transcend
Model Number	Q8 Handy Video Recorder-KSD128GB
Flash Memory Type	SDXC
Memory Storage Capacity	128 GB
Secure Digital Association Speed Class	Class 10
Read Speed	95 Bytes Per Second
Write Speed	95
Hardware Interface	SDXC, Secure Digital Card

Feature	Value
Product Dimensions	2 x 2 x 2 inches
Item Weight	1.58 ounces
Compatible Devices	Camera

WARRANTY AND SUPPORT

Transcend provides a warranty for its products to ensure customer satisfaction.

Warranty Information:

This Transcend memory card comes with a **3 Year Warranty**. Please retain your proof of purchase for warranty claims. For detailed terms and conditions, refer to the official Transcend website or contact their customer service.

Customer Support:

For further assistance, technical support, or warranty inquiries, please contact Transcend directly. You can find more information and contact details on the official [Transcend Store](#).

© 2024 Transcend. All rights reserved.

Related Documents - Q8 Handy Video Recorder-KSD128GB

<p>User's Manual DrivePro Car Video Recorder</p>  <p>Transcend</p>	<p>Transcend DrivePro Car Video Recorder User Manual</p> <p>Comprehensive user manual for the Transcend DrivePro Car Video Recorder, covering installation, operation, features, app usage, file transfer, troubleshooting, specifications, warranty, and legal information.</p>
<p>User's Manual DrivePro 220 Car Video Recorder</p>  <p>Transcend</p>	<p>Transcend DrivePro 220 User's Manual: Car Video Recorder Guide</p> <p>Comprehensive user manual for the Transcend DrivePro 220 car video recorder. Learn about installation, features, operation, settings, app connectivity, troubleshooting, and specifications.</p>

 <p>Manuel de l'utilisateur DrivePro 220 Enregistreur vidéo pour véhicule</p>	<p>Transcend DrivePro 220 Vehicle Video Recorder User Manual</p> <p>Comprehensive user manual for the Transcend DrivePro 220 vehicle video recorder (dashcam), detailing its features, installation, operation, mobile app integration, troubleshooting, specifications, warranty, and legal information.</p>
 <p>Manual de Usuario JetFlash® Vault 100</p>	<p>Transcend JetFlash Vault 100 User Manual - Secure USB Flash Drive</p> <p>Official user manual for the Transcend JetFlash Vault 100, detailing how to set up passwords, use the device on Windows and Mac, access settings, and find support. Learn about secure portable storage.</p>
 <p>User's Manual Dashcam DrivePro 10</p>	<p>Transcend DrivePro 10 Dashcam User Manual</p> <p>Comprehensive user manual for the Transcend DrivePro 10 dashcam, covering installation, operation, app usage, software features, troubleshooting, specifications, and warranty information.</p>
 <p>Benutzerhandbuch Dashcam DrivePro 550</p>	<p>Transcend DrivePro 550 Dashcam User Manual</p> <p>Comprehensive user manual for the Transcend DrivePro 550 dashcam, covering setup, operation, features, troubleshooting, and specifications.</p>