



[Manuals.plus](#) /

> [Golf Buddy](#) /

> GOLFBUDDY Voice 2S+ Talking GPS Rangefinder User Manual

Golf Buddy Voice 2S+

GOLFBUDDY Voice 2S+ Talking GPS Rangefinder User Manual

Model: Voice 2S+

INTRODUCTION

The GOLFBUDDY Voice 2S+ is a compact talking GPS rangefinder designed to assist golfers with accurate distance measurements on the course. This device provides distances to the front, center, and back of the green, along with shot distance measurement and automatic course and hole recognition. It features both audio and screen updates for convenience and is preloaded with over 40,000 courses worldwide.



Figure 1: Front view of the GOLFBUDDY Voice 2S+ displaying distances.

SETUP

1. Charging the Device

Before initial use, fully charge the GOLFBUDDY Voice 2S+. Connect the device to a USB power source using the provided USB cable. A full charge provides up to 18 hours of battery life in golf mode with GPS enabled, sufficient for approximately 3 rounds of golf.





Figure 2: Side view illustrating the USB charging port and control buttons.

2. Powering On/Off

To power on the device, press and hold the main button until the screen illuminates. To power off, press and hold the main button again until the device shuts down.

3. Course Updates

The device comes preloaded with 40,000 courses worldwide. For the latest course data and software updates, visit the official GOLFBUDDY website and follow the instructions for updating your device. Regular updates ensure accuracy and optimal performance.

4. Language Selection


The GOLFBUDDY Voice 2S+ supports multiple languages. To change the language, navigate through the settings menu using the control buttons until the language option is displayed. Select your preferred language from the available options.

by GOLFBUDDY

GB VOICE 2

EASY-TO-USE **TALKING GOLF GPS**


-  • Simple one-button push to speak distances
-  • Displays distances to front, center, and back of green
-  • Up to 14-hour battery life (GPS Mode)

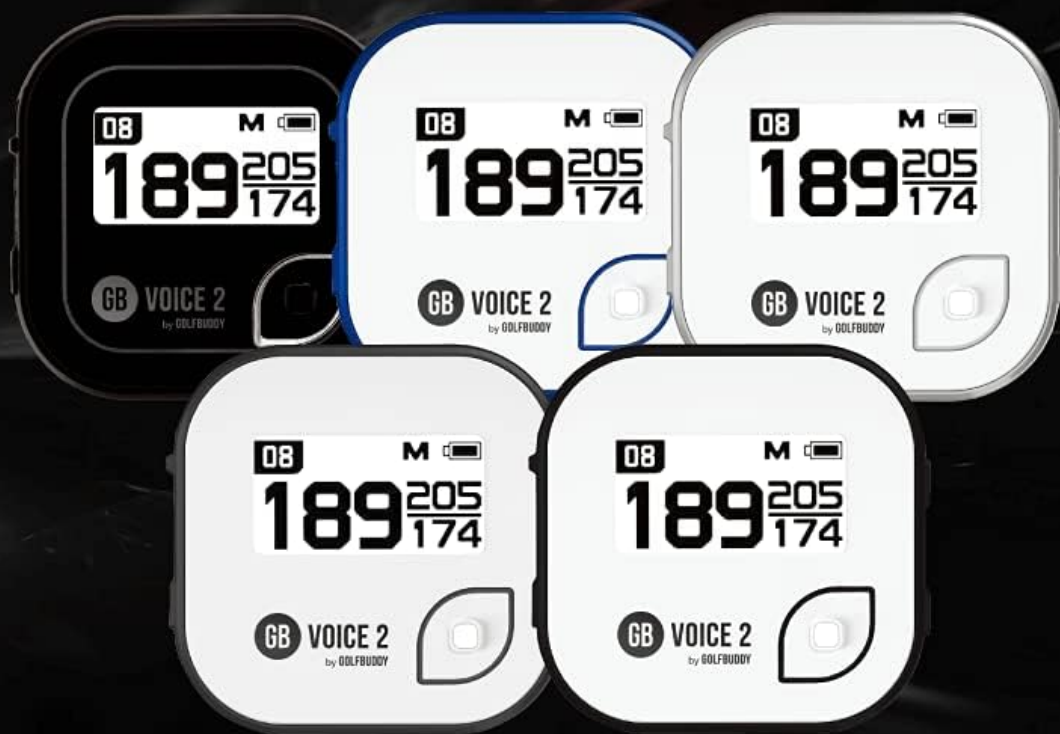

Play Mode



Language

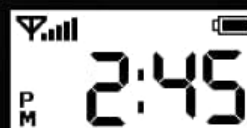

Watch

Figure 3: Language selection interface on the device screen.

OPERATING INSTRUCTIONS

1. Acquiring GPS Signal

Once powered on, the device will automatically search for a GPS signal. Ensure you are in an open area with a clear view of the sky for faster signal acquisition. The device will automatically recognize the course and hole you are playing.

2. Getting Distances

Press the main button once to hear the distance to the center of the green. The screen simultaneously displays distances to the front, center, and back of the green. Repeated presses may cycle through additional information or repeat the distance.



Figure 4: Device displaying current distances to the green.

3. Audio Guidance and Volume Adjustment

The device provides convenient voice guidance for distances. You can adjust the audio guide volume from 0 to 5 using the side buttons to suit your preference.



Figure 5: Golfer using the device for audio distance guidance.

4. Shot Distance Measurement

To measure your shot distance, press a designated button (refer to the device's specific button layout) at your starting point. Walk to your ball, and the device will display the distance traveled. Press the button again to reset for the next shot.

5. Slope Mode

The GOLFBUDDY Voice 2S+ includes a slope mode feature. Consult the device's on-screen menu or specific button combinations to enable or disable this function as required by local rules or personal preference.

6. Mounting Options

The device is designed for versatile use. It can be clipped onto your hat or belt for hands-free convenience. A wristband accessory is also available (sold separately) for wearing the device like a watch.



Figure 6: Various ways to wear and use the GOLFBUDDY Voice 2S+.

MAINTENANCE

1. Cleaning

To clean the device, use a soft, dry cloth. Avoid using abrasive cleaners or solvents that could damage the screen or casing.

2. Water Resistance

The GOLFBUDDY Voice 2S+ has an IPX3 level waterproofing rating, meaning it is protected against spraying water. It is not designed for submersion. Avoid exposing the device to heavy rain or submerging it in water.

3. Battery Care

To prolong battery life, charge the device regularly and avoid fully discharging it frequently. Store the device in a cool, dry place and avoid extreme temperatures.

TROUBLESHOOTING

1. No GPS Signal or Inaccurate Distances

- Ensure you are in an open area with a clear view of the sky.
- Wait a few minutes for the device to acquire a satellite signal.
- Verify that the device has the latest course updates installed from the GOLFBUDDY website.

2. Short Battery Life

- Ensure the device is fully charged before each use.

- Reduce the audio guide volume or frequency of audio prompts to conserve power.
- Battery performance may degrade over time with extensive use.

3. Device Not Responding

- Attempt a soft reset by pressing and holding the power button for an extended period (e.g., 10-15 seconds).
- Ensure the device is charged. If the issue persists, contact GOLFBUDDY customer support.

SPECIFICATIONS

Feature	Detail
Brand	Golf Buddy
Model Name	Voice 2S+
Screen Size	1.2 Inches
Special Feature	Waterproof (IPX3)
Connectivity Technology	USB
Map Type	Worldwide (40,000+ courses)
Battery Life (Golf Mode)	Up to 18 Hours
Audio Output Mode	Stereo
Mounting Type	Clip, Wrist Mount (wristband sold separately)
Display Type	LCD
Human-Interface Input	Buttons
Control Method	Voice, Buttons
Supported Satellite Navigation System	QZSS
Item Dimensions (L x W x H)	1.9" x 1.8" x 0.5"
Item Weight	1.1 oz (0.19 Kilograms)

WARRANTY AND SUPPORT

The GOLFBUDDY Voice 2S+ is covered by a manufacturer's warranty. For detailed warranty information, product registration, and technical support, please visit the official GOLFBUDDY website or contact their customer service department. Keep your proof of purchase for warranty claims.

Online Support: www.golfbuddyamerica.com