

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Minka Lavery](#) /

› [Minka Lavery Camden Square Mini Chandelier \(Model 4875-283\) Instruction Manual](#)

Minka Lavery 4875-283

Minka Lavery Camden Square Mini Chandelier (Model 4875-283) Instruction Manual

Aged Charcoal Finish with Clear Seeded Glass

IMPORTANT SAFETY INFORMATION

Please read these instructions carefully before beginning installation. Failure to follow these instructions could result in electrical shock, fire, or other hazards that could cause injury or property damage.

- Always disconnect power at the main fuse or circuit breaker box before installing, servicing, or cleaning this fixture.
- Consult a qualified electrician if you are unsure about the installation process.
- This fixture is designed for indoor use only. Do not install in wet or damp locations.
- Ensure all electrical connections comply with local codes and ordinances, as well as the National Electrical Code (NEC).
- The fixture operates on 120 Volts.
- This product is ETL approved for safety in the US and Canada.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly. If any part is missing or damaged, do not attempt to assemble or install the fixture.

- Chandelier Fixture (1)
- Mounting Hardware Kit (1)
- 72-inch Chain (1)
- 120-inch Electrical Wire (pre-attached)
- Clear Seeded Glass Panels (pre-installed)

Note: Light bulbs are not included. This fixture requires four (4) B10.5 Candelabra Base (E12) bulbs, maximum 60 watts each.

INSTALLATION INSTRUCTIONS

Follow these steps carefully to install your Minka Lavery Camden Square Mini Chandelier.

1. Prepare for Installation

1. Turn off the electrical power at the main fuse or circuit breaker box.
2. Clear the work area and gather necessary tools (screwdriver, wire strippers, electrical tape, ladder).
3. Carefully unpack the fixture and its components.

2. Mount the Fixture

1. Attach the mounting bracket from the hardware kit to the junction box in the ceiling. Ensure it is securely fastened.
2. Determine the desired hanging height for the chandelier. The fixture's height can be adjusted from 23.5 inches to 94 inches. Adjust the chain length accordingly by removing links if necessary.
3. Thread the electrical wire through the chain and the canopy.
4. Connect the chain to the fixture loop and the canopy loop.

3. Wire the Fixture

1. Connect the fixture's bare copper or green ground wire to the house supply ground wire (usually bare copper or green) using a wire connector.
2. Connect the fixture's white wire to the house supply white (neutral) wire using a wire connector.
3. Connect the fixture's black wire to the house supply black (hot) wire using a wire connector.
4. Carefully tuck all wires into the junction box.
5. Secure the canopy to the mounting bracket, ensuring it sits flush against the ceiling.

4. Install Light Bulbs

1. Screw four (4) B10.5 Candelabra Base (E12) bulbs (not included) into the sockets. Do not exceed the maximum wattage of 60 watts per bulb.

5. Restore Power

1. Turn the electrical power back on at the main fuse or circuit breaker box.
2. Test the fixture to ensure proper operation.



Figure 1: Minka Lavery Camden Square Mini Chandelier (Model 4875-283) installed.

OPERATING INSTRUCTIONS

Once installed and powered, the Minka Lavery Camden Square Mini Chandelier operates via a standard wall switch connected to the fixture's circuit. Ensure the correct type and wattage of bulbs are used for optimal performance and safety.

- Use four (4) B10.5 Candelabra Base (E12) bulbs.
- Do not exceed 60 watts per bulb, for a total maximum wattage of 240 watts for the fixture.

MAINTENANCE

Regular maintenance will help preserve the appearance and functionality of your chandelier.

- Cleaning:** To clean the fixture, ensure power is off. Wipe with a soft, dry cloth. Do not use abrasive cleaners, polishes, or solvents as they may damage the finish or glass.
- Bulb Replacement:** Before replacing bulbs, turn off the power to the fixture. Allow bulbs to cool completely. Unscrew old bulbs and replace with new B10.5 Candelabra Base (E12) bulbs, not exceeding 60 watts each.

TROUBLESHOOTING

If you experience issues with your chandelier, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Light does not turn on.	No power to the fixture. Loose wire connections. Defective bulb(s). Faulty wall switch.	Check circuit breaker or fuse. Verify all wire connections are secure (ensure power is off before checking). Replace bulb(s). Test wall switch or consult an electrician.
Light flickers.	Loose bulb. Loose wire connection. Incorrect bulb type or wattage.	Tighten bulb(s). Check wire connections (ensure power is off before checking). Ensure bulbs are B10.5 Candelabra Base (E12) and do not exceed 60 watts.

If problems persist after attempting these solutions, contact a qualified electrician for assistance.

SPECIFICATIONS

Model Number	4875-283
Brand	Minka Lavery
Dimensions (Fixture)	19.5" High x 15.5" Wide
Weight	Approximately 14.57 lbs
Ceiling Cover Dimensions	5" Wide x 0.75" High
Adjustable Height Range	23.5" to 94"
Number of Lights	4
Max Wattage per Bulb	60 Watts
Total Max Wattage	240 Watts
Bulb Base Type	B10.5 Candelabra Base (E12)
Voltage	120 Volts
Finish	Aged Charcoal

Shade Material	Clear Seeded Glass
Chain Length	72 inches
Wire Length	120 inches
Indoor/Outdoor Use	Indoor Only
Certifications	ETL Approved (US and Canada)
Assembly Required	Yes

WARRANTY AND SUPPORT

Minka Lavery products are manufactured to high-quality standards and are backed by a manufacturer's warranty. For specific warranty details, claims, or technical support, please refer to the warranty card included with your purchase or visit the official Minka Lavery website.

For further assistance, you may contact Minka Lavery customer service directly. Keep your purchase receipt and model number (4875-283) handy for quicker service.

Online Resources: [Visit the Minka Lavery Store on Amazon](#)