

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Minka Lavery](#) /
- › [Minka Lavery 71163-143C Nautical Wall Mount Light Instruction Manual](#)

Minka Lavery 71163-143C

Minka Lavery 71163-143C Nautical Wall Mount Light Instruction Manual

Model: 71163-143C

IMPORTANT SAFETY INSTRUCTIONS

Please read and understand all instructions before beginning installation. Failure to do so may result in electric shock, fire, or other injuries that could be fatal or cause property damage.

- **WARNING:** To avoid electric shock, disconnect power at the main fuse box or circuit breaker panel before starting installation.
- All electrical connections must be in accordance with local codes, ordinances, or the National Electric Code (NEC). Contact a qualified electrician if you are unfamiliar with proper electrical wiring connections.
- This fixture is intended for outdoor use. Ensure all connections are properly sealed to prevent water intrusion.
- Do not exceed the maximum wattage specified for this fixture.
- Always use bulbs of the correct type and wattage.
- Keep combustible materials away from the light fixture when in operation.

PACKAGE CONTENTS

Verify that all components are present before beginning installation. If any part is missing or damaged, do not attempt to assemble or install the product.



Image: Minka Lavery 71163-143C Nautical One Light Wall Mount fixture, featuring an oil rubbed bronze finish and clear glass shade.

- One (1) Minka Lavery 71163-143C Nautical Wall Mount Light Fixture
- Mounting Plate
- Mounting Screws
- Wire Nuts
- Glass Shade
- Instruction Manual

SPECIFICATIONS

- **Brand:** Minka Lavery
- **Model:** 71163-143C
- **Dimensions:** 11.5"L x 8.5"W x 13"H
- **Material:** Aluminum, Glass

- **Finish:** Oil Rubbed Bronze / Gold
- **Light Source Type:** Incandescent
- **Number of Light Sources:** 1
- **Bulb Type:** A-19 (Not Included)
- **Bulb Base:** E26
- **Maximum Wattage:** 100 watts
- **Voltage:** 120 Volts
- **Usage:** Outdoor
- **Installation Type:** Wall Mount
- **Water Resistance Level:** Water Resistant
- **Certification:** ETL Listed

INSTALLATION

Professional installation is recommended. If you are not comfortable with electrical wiring, consult a qualified electrician.

1. **Turn Off Power:** Locate the circuit breaker or fuse box that supplies power to the desired installation location. Turn off the power completely.
2. **Prepare Mounting Surface:** Ensure the wall surface is clean, dry, and structurally sound to support the fixture.
3. **Install Mounting Plate:** Attach the mounting plate to the junction box using the provided screws. Ensure it is securely fastened.
4. **Wire Connections:**
 - Connect the **green or bare copper ground wire** from the fixture to the **ground wire** from the junction box (usually bare copper or green). Secure with a wire nut.
 - Connect the **white (neutral) wire** from the fixture to the **white (neutral) wire** from the junction box. Secure with a wire nut.
 - Connect the **black (hot) wire** from the fixture to the **black (hot) wire** from the junction box. Secure with a wire nut.

Ensure all wire nuts are tightly secured and no bare wire is exposed.

5. **Attach Fixture:** Carefully align the fixture with the mounting plate and secure it using the provided screws.
6. **Install Bulb:** Insert one (1) A-19 type bulb (E26 base, max 100W) into the socket. Do not overtighten.
7. **Attach Glass Shade:** Secure the glass shade to the fixture according to the specific design. Ensure it is firmly in place to prevent water entry.
8. **Restore Power:** Turn the power back on at the circuit breaker or fuse box. Test the light fixture.

OPERATION

This Minka Lavery wall mount light is designed for simple operation via a standard wall switch (toggle type) connected to its electrical circuit.

- **Turning On/Off:** Use the connected wall switch to turn the light fixture on or off.
- **Bulb Replacement:** To replace the bulb, first ensure the power is turned off at the circuit breaker. Allow

the bulb to cool completely. Carefully remove the glass shade, unscrew the old bulb, and screw in a new A-19 type bulb (E26 base, max 100W). Reattach the glass shade securely.

MAINTENANCE

Regular maintenance will help preserve the appearance and functionality of your light fixture.

- **Cleaning:** Disconnect power before cleaning. Wipe the fixture with a soft, damp cloth. Do not use abrasive cleaners, solvents, or polishes as they may damage the finish. Clean the glass shade with a mild glass cleaner.
- **Bulb Replacement:** Refer to the 'Operation' section for instructions on safe bulb replacement.
- **Inspection:** Periodically inspect the fixture for any signs of wear, loose connections, or damage. If any issues are found, disconnect power and consult a qualified electrician.

TROUBLESHOOTING

If you experience issues with your light fixture, try the following steps:

- **Light Does Not Turn On:**
 - Ensure the power supply is on at the circuit breaker.
 - Check that the wall switch is in the 'ON' position.
 - Verify the bulb is securely screwed into the socket and is not burnt out. Replace if necessary.
 - Check wire connections for proper contact. (Turn off power before checking connections).
- **Light Flickers:**
 - Ensure the bulb is fully tightened.
 - Replace the bulb with a new one to rule out a faulty bulb.
 - Check wire connections for any loose contacts. (Turn off power before checking connections).

If these steps do not resolve the issue, consult a qualified electrician.

WARRANTY AND SUPPORT

This Minka Lavery 71163-143C Nautical Wall Mount Light comes with a **Limited 1-year warranty**.

For warranty claims or technical support, please refer to the contact information provided with your purchase documentation or visit the official Minka Lavery website.