

Legrand 050678

Legrand 050678 LED Dimmable Socket Emergency Lamp User Manual

Model: 050678 | Brand: Legrand

1. INTRODUCTION

Thank you for choosing the Legrand 050678 LED Dimmable Socket Emergency Lamp. This device is designed to provide convenient and reliable illumination, functioning as both a standard socket-integrated light and an emergency lamp during power outages. Its compact design allows for seamless integration into any standard wall socket, offering both warm and cold light options.

Please read this manual carefully before using the product to ensure safe and optimal operation.

2. SAFETY INSTRUCTIONS

- This product is designed for **indoor use only**. Do not expose it to water, moisture, or extreme temperatures.
- Do not attempt to open, modify, or repair the device. Refer all servicing to qualified personnel.
- Ensure the socket is in good condition and properly grounded before plugging in the lamp.
- Keep out of reach of children.
- Unplug the device from the socket before cleaning.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1x Legrand 050678 LED Dimmable Socket Emergency Lamp
- Integrated rechargeable battery



Image: The Legrand 050678 LED lamp unit displayed alongside its retail packaging.

4. SETUP

1. **Unpack:** Carefully remove the lamp from its packaging.
2. **Plug In:** Insert the lamp directly into a standard wall socket. Ensure it is firmly seated.
3. **Initial Charge:** For optimal performance, allow the lamp to charge for several hours upon first use. The integrated battery will charge automatically when plugged into a live socket.



Image: Visual instructions on the product packaging illustrating how to plug the lamp into a socket.

5. OPERATING INSTRUCTIONS

5.1. Turning On/Off

To turn the lamp ON or OFF, simply press the button located on the front of the lamp. Each press will toggle the light state.

5.2. Dimming and Light Mode Selection

To adjust the brightness or switch between warm and cold light modes, press and hold the button for approximately 5 seconds. The lamp will cycle through its available settings (dimming levels and color temperatures). Release the button when the desired setting is achieved.

5.3. Emergency Function

When plugged into a live socket, the lamp's integrated battery remains charged. In the event of a power outage, the lamp will automatically illuminate, providing emergency lighting. The battery life in emergency mode is approximately 1 hour and 30 minutes.



Image: Operational diagrams from the product packaging, detailing button presses for power, dimming, and the emergency light feature.

6. MAINTENANCE

- **Cleaning:** To clean the lamp, unplug it from the socket and wipe it with a soft, dry cloth. Do not use abrasive cleaners

or solvents.

- **Battery Care:** To maintain battery health, avoid prolonged periods of complete discharge. If the lamp is stored for an extended time, recharge it periodically.
- **Storage:** Store the lamp in a cool, dry place when not in use.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Lamp does not turn on.	No power to the socket. Lamp not fully inserted. Battery fully discharged.	Check the power supply to the socket. Ensure the lamp is fully plugged in. Allow the lamp to charge for several hours.
Light is too dim.	Dimming mode activated. Low battery charge.	Press and hold the button for 5 seconds to cycle through brightness settings. Allow the lamp to charge.
Emergency light does not activate during power outage.	Battery not charged. Faulty unit.	Ensure the lamp has been plugged in and charging. If the issue persists, contact customer support.

8. SPECIFICATIONS

- **Model Number:** 050678
- **Brand:** Legrand
- **Light Source:** LED
- **Power:** 0.06W
- **Voltage:** 230V
- **Battery Life (Emergency Mode):** Approximately 1 hour 30 minutes
- **Material:** Plastic
- **Color:** White
- **Special Features:** Rechargeable, Dimmable, Warm/Cold Light Selection
- **Usage:** Indoor only
- **Package Dimensions:** 11.5 x 4.5 x 4.5 cm
- **Package Weight:** 200 g

9. WARRANTY

This Legrand product comes with a **2-year guarantee** from the date of purchase. Please retain your proof of purchase for warranty claims. The warranty covers manufacturing defects under normal use conditions. It does not cover damage caused by misuse, accidents, unauthorized modifications, or improper installation.

10. SUPPORT

For technical assistance, warranty claims, or further information, please contact Legrand Consumer Service:

- **Address:** Pro & Consumer Service, BP 30076 / F - 87002 Limoges Cedex 1, France
- **Website:** www.legrand.com

- **Product Information Link (QR Code):** <http://qk.gs/1m2b2>

© Legrand. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B01IPIG8EK>

More documents and user manuals: **<https://manuals.plus/>**