

Panasonic TH-24D305

Panasonic VIERA TH-24D305 24V LCD TV Instruction Manual

Model: TH-24D305 | Brand: Panasonic

1. INTRODUCTION

Thank you for purchasing the Panasonic VIERA TH-24D305 24V LCD TV. This manual provides essential information for the safe and efficient use of your television. Please read it thoroughly before operating the unit and retain it for future reference.

2. SAFETY INFORMATION

Observe the following safety precautions to prevent electric shock, fire, or damage to the unit:

- Do not expose the TV to rain or moisture.
- Ensure proper ventilation; do not block ventilation openings.
- Use only the power cord supplied with the unit.
- Do not open the TV cabinet; refer all servicing to qualified personnel.
- Keep the TV away from heat sources and direct sunlight.
- Place the TV on a stable, level surface to prevent tipping.

3. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Remote Control

- AAA Batteries (x2)
- Power Cord
- B-CAS Card
- Integrated Stand
- Anti-tip/Fall Prevention Parts (integrated)
- Instruction Manual (this document)
- Warranty Card

4. SETUP

4.1 Unpacking and Placement

Carefully remove the TV and all accessories from the packaging. Place the TV on a sturdy, flat surface or mount it securely according to VESA standards (mounting hardware sold separately). Ensure adequate space around the TV for ventilation.



Image: Front view of the Panasonic VIERA TH-24D305 24V LCD TV.

4.2 Connecting Cables

1. **Power Connection:** Connect the supplied power cord to the TV's power input and then to a wall outlet.
2. **Antenna Connection:** Connect your terrestrial or satellite antenna cable to the appropriate input on the TV.
3. **HDMI Devices:** Connect external devices such as Blu-ray players or game consoles to the HDMI ports. This

model features 2 HDMI ports.

4. **USB Devices:** For USB HDD recording, connect a compatible USB hard drive to the USB port. This model features 1 USB port.

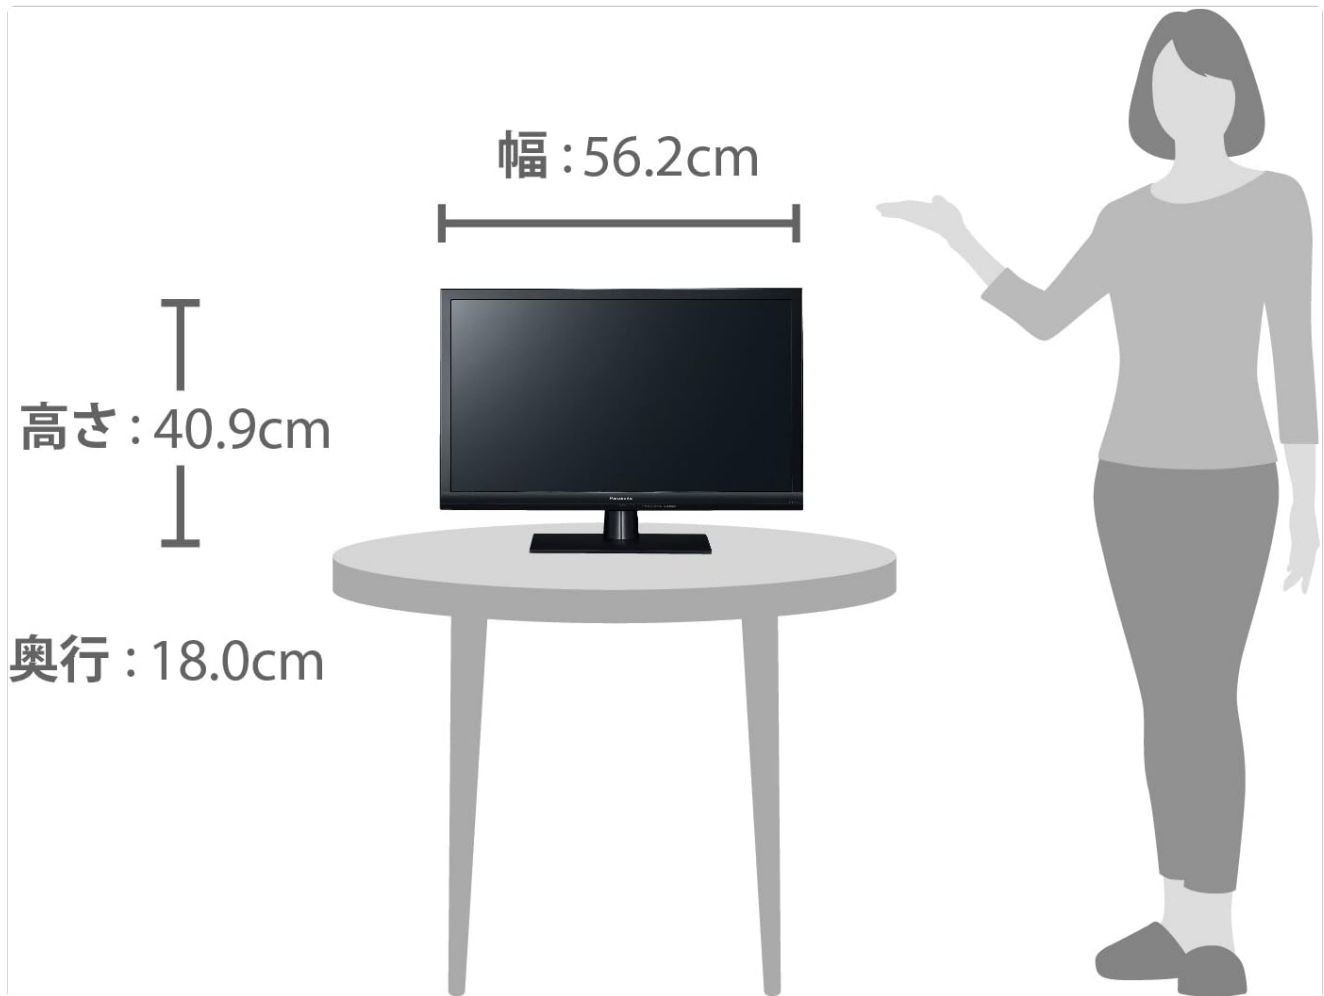


Image: Diagram showing the dimensions of the Panasonic VIERA TH-24D305 TV (Width: 56.2cm, Height: 40.9cm, Depth: 18.0cm).

4.3 Initial Setup

Upon first power-on, the TV will guide you through the initial setup process. This includes language selection, channel tuning, and network settings (if applicable). Follow the on-screen instructions.



24Vテレビの視聴距離目安

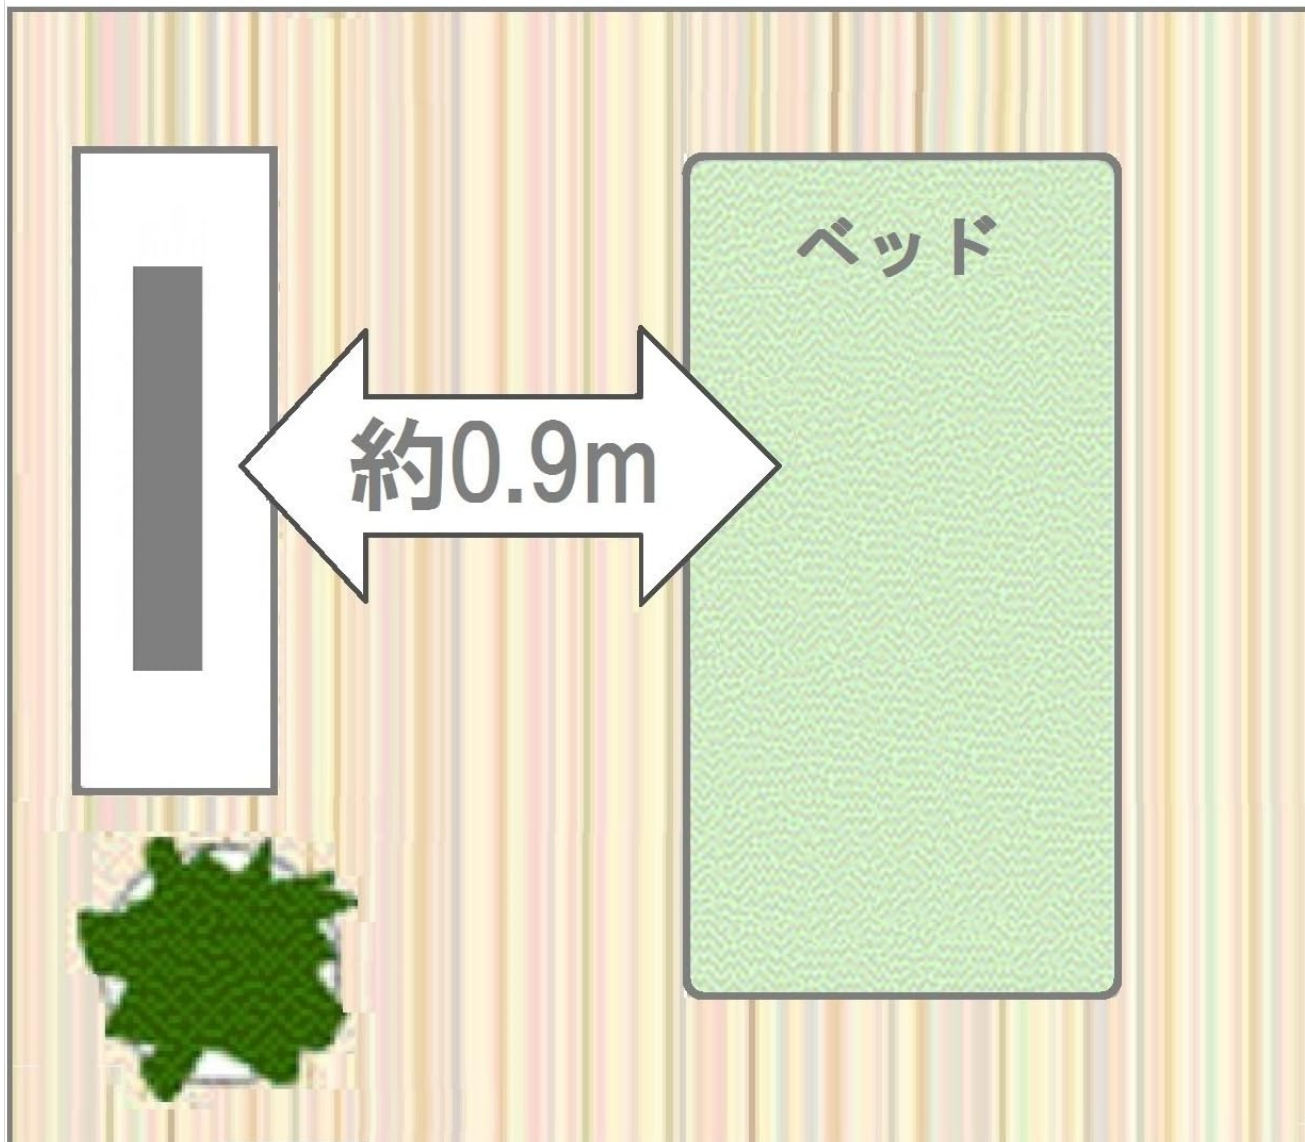


Image: Illustration indicating a recommended viewing distance of approximately 0.9 meters for a 24V TV.

5. OPERATING

5.1 Remote Control Functions

The supplied remote control allows you to access all TV functions. Insert the two AAA batteries into the remote control, ensuring correct polarity.

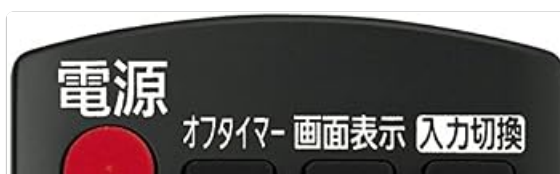






Image: Layout of the Panasonic TV remote control, showing buttons for power, channel, volume, input, menu, and recording functions.

- **Power Button:** Turns the TV on or off.
- **Channel Buttons:** Changes TV channels.
- **Volume Buttons:** Adjusts the sound level.
- **Input Button:** Selects external input sources (HDMI, AV).
- **Menu Button:** Accesses the TV's main menu for settings adjustments.
- **Directional Pad and OK Button:** Navigates menus and confirms selections.

5.2 USB HDD Recording

This TV supports recording programs to an external USB Hard Disk Drive (HDD). Connect a compatible USB HDD to the TV's USB port. You can schedule recordings (timed recording) for programs you wish to watch later.

5.3 ARC (Audio Return Channel)

The TV's HDMI ARC feature allows you to send audio from the TV to a compatible home theater system or soundbar using a single HDMI cable. Connect your audio system to the HDMI port labeled 'ARC' on the TV.

5.4 Oheya Jump Link

The 'Oheya Jump Link' feature enables you to enjoy programs recorded on a compatible Panasonic DIGA recorder located in another room. Refer to the DIGA recorder's manual for specific setup and usage instructions for this feature.

6. MAINTENANCE

6.1 Cleaning the Screen

Gently wipe the screen with a soft, dry, lint-free cloth. For stubborn marks, slightly dampen the cloth with water or a specialized screen cleaner, then wipe dry immediately. Avoid using harsh chemicals or abrasive materials.

6.2 Cleaning the Cabinet

Wipe the TV cabinet with a soft, dry cloth. Do not use liquid cleaners directly on the TV.

7. TROUBLESHOOTING

If you encounter issues with your TV, refer to the following common problems and solutions:

Problem	Possible Solution
No power	Check if the power cord is securely connected to both the TV and the wall outlet. Ensure the outlet has power.
No picture, but sound is present	Verify the correct input source is selected. Check antenna or HDMI cable connections.
No sound, but picture is present	Check the volume level and ensure the TV is not muted. If using external audio, check its connections and settings.
Remote control not working	Replace the batteries. Ensure there are no obstructions between the remote and the TV's sensor.
Cannot record to USB HDD	Ensure the USB HDD is properly connected and formatted for the TV. Check available storage space.

8. SPECIFICATIONS

Feature	Specification
Screen Size	24 inches (24V type)
Display Technology	LCD
Resolution	High Definition
Aspect Ratio	16:9
Dimensions (W x H x D)	56.2 cm x 40.9 cm x 18.0 cm
Weight	5.0 Kg
HDMI Ports	2
USB Ports	1
Tuner Type	Terrestrial Digital x1, BS Digital x1, CS Digital x1
Special Features	USB HDD Recording, ARC, Oheya Jump Link
Model Year	2016
Power Consumption	32 kWh/year
Included Components	Remote control, AAA batteries x2, Power cord, B-CAS card, Stand, Anti-tip parts, Instruction manual, Warranty card

9. WARRANTY AND SUPPORT

Your Panasonic VIERA TH-24D305 TV comes with a manufacturer's warranty. Please refer to the included warranty card for details regarding coverage period and terms. For technical support, service, or additional information, please visit the official Panasonic website or contact their customer service department.

Online Support: www.panasonic.com/global/consumer/support.html

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question