

Bosch MUZ9VLP1

Bosch Lifestyle Set Veggie Love Plus MUZ9VLP1 Instruction Manual

For OptiMUM Food Processors

1. INTRODUCTION

This instruction manual provides essential information for the safe and efficient use of your Bosch Lifestyle Set Veggie Love Plus (Model MUZ9VLP1) attachment. This accessory set is designed to expand the capabilities of your Bosch OptiMUM kitchen machine, offering versatile functions for preparing various ingredients. Please read these instructions carefully before first use and keep them for future reference.

2. SAFETY INSTRUCTIONS

- Always ensure the OptiMUM kitchen machine is switched off and unplugged before attaching or removing accessories.
- Handle sharp blades and discs with extreme care to prevent injury. Store them safely.
- Never reach into the feed tube or the processing bowl while the appliance is operating. Always use the pusher provided.
- Do not overload the attachment. Follow recommended quantities for ingredients.
- Ensure all parts are correctly assembled and securely locked before starting the machine.
- Keep hands, hair, clothing, and utensils away from moving parts during operation.
- This appliance is intended for household use only.

3. PACKAGE CONTENTS

The Bosch Lifestyle Set Veggie Love Plus includes the following components:

- Universal Chopper Bowl with Lid and Pusher
- Multi-function Chopping Blade
- Citrus Press Attachment (cone and sieve)
- Grating Disc (fine)

- Grating Disc (coarse)
- Slicing Disc



Figure 1: Overview of all included components in the Bosch Lifestyle Set Veggie Love Plus. This image displays the universal chopper bowl, lid, pusher, various stainless steel discs, the multi-function chopping blade, and the citrus press attachment.

4. SETUP AND ASSEMBLY

The Veggie Love Plus set is designed for easy assembly with color-coded indicators on the accessories and the corresponding OptiMUM appliance connector.

4.1 Attaching the Universal Chopper

1. Ensure your OptiMUM kitchen machine is unplugged.
2. Locate the high-speed drive connection on your OptiMUM machine.
3. Place the universal chopper bowl onto the drive, aligning the color-coded markers. Turn clockwise until it locks securely into place.
4. Insert the desired stainless steel disc or the multi-function chopping blade onto the drive shaft inside the bowl.
5. Place the lid onto the bowl, ensuring it is correctly aligned and locked. The machine will not operate if the lid is not secured.

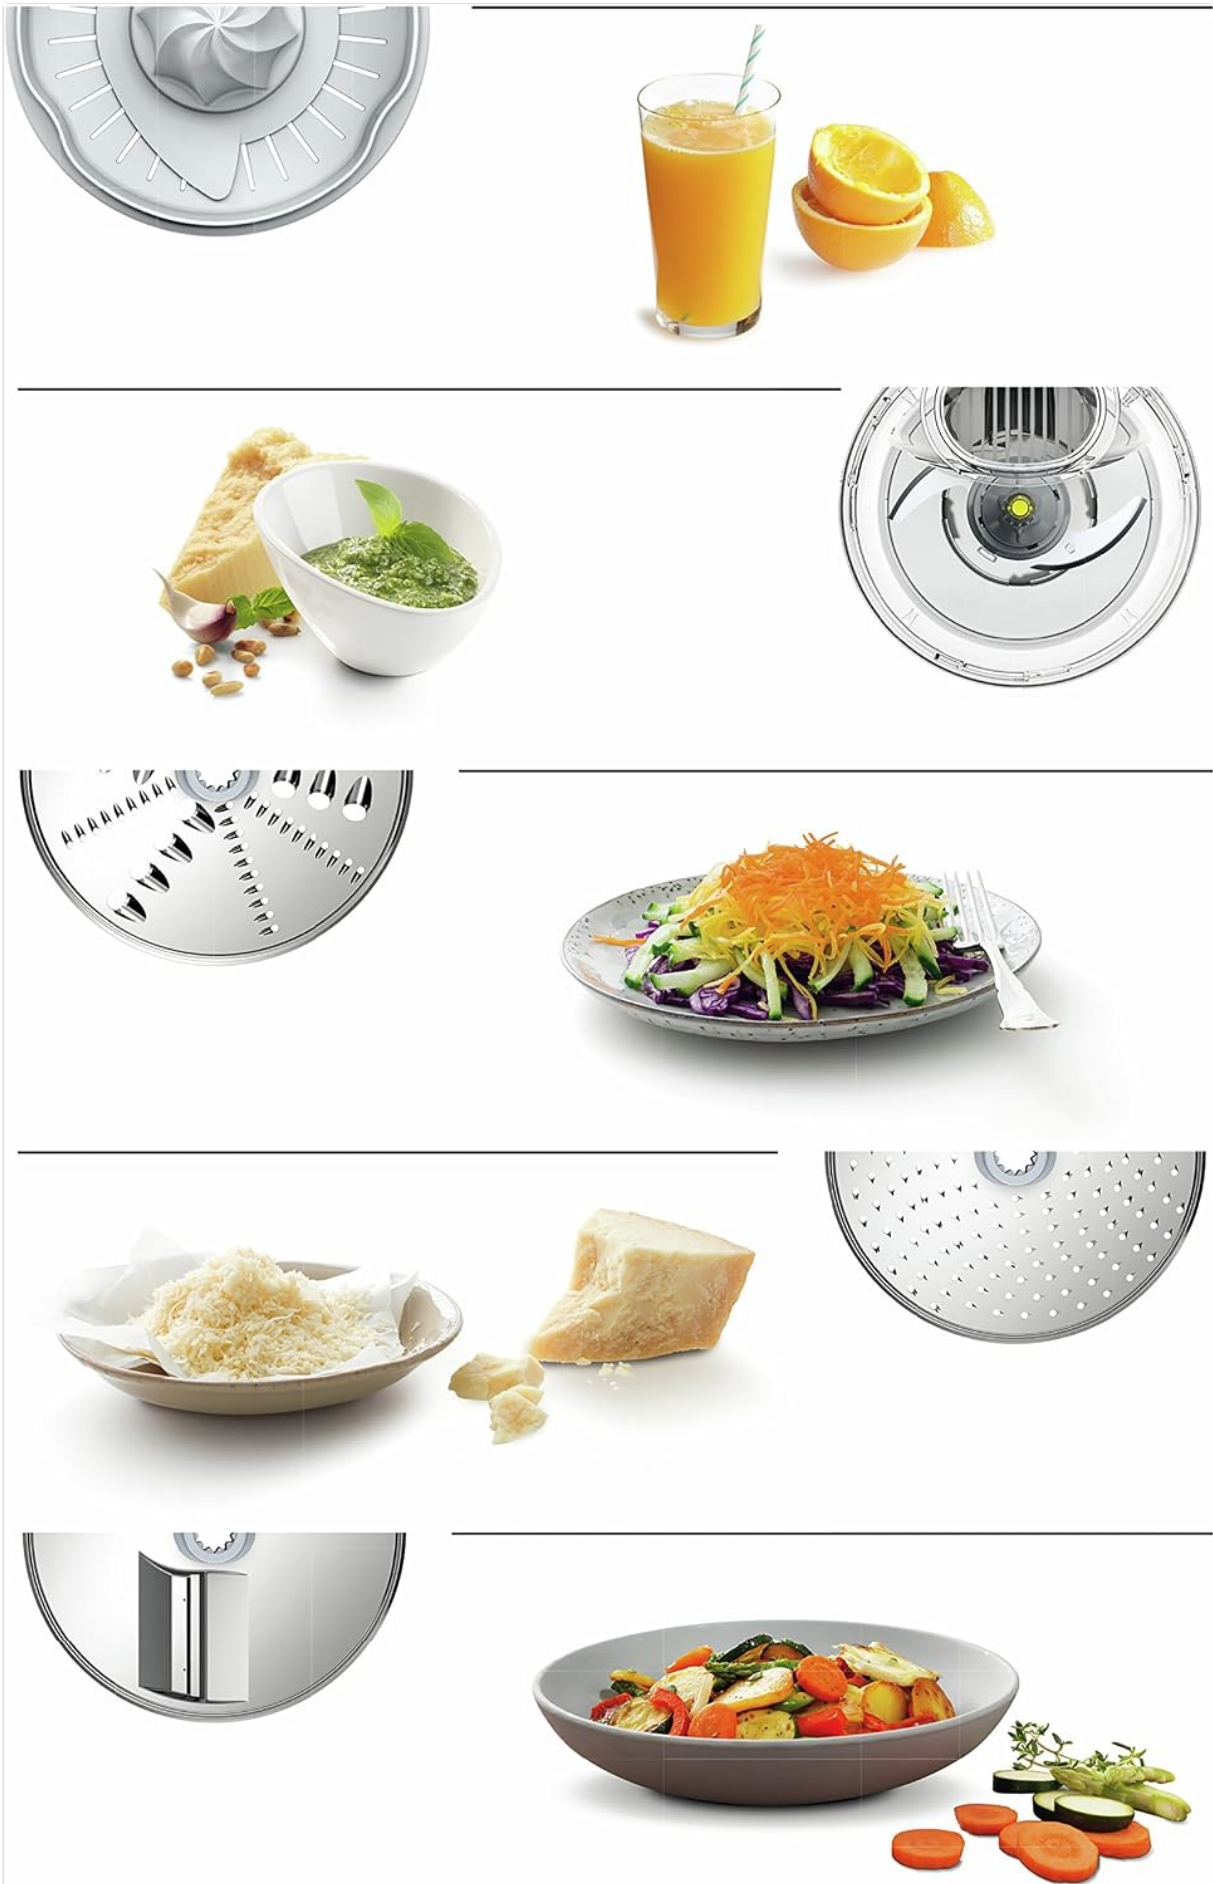


Figure 2: The universal chopper attachment securely mounted on a Bosch OptiMUM kitchen machine, demonstrating its use for processing ingredients like herbs and onions.

4.2 Attaching the Citrus Press

1. Ensure your OptiMUM kitchen machine is unplugged.
2. Place the citrus press sieve onto the drive connection.
3. Place the citrus press cone onto the sieve.
4. Ensure both parts are firmly seated.

5. OPERATING INSTRUCTIONS

5.1 Using the Universal Chopper with Discs

The set includes three stainless steel discs for various preparations:

- **Fine Grating Disc:** Ideal for fine grating of hard cheese, nuts, chocolate, or breadcrumbs.
- **Coarse Grating Disc:** Suitable for coarse grating of vegetables like carrots, potatoes, or cheese.
- **Slicing Disc:** For uniform slicing of fruits and vegetables such as cucumbers, potatoes, or apples.

1. Assemble the universal chopper as described in Section 4.1, inserting the desired disc.
2. Cut ingredients into pieces that fit comfortably into the feed tube.
3. Switch on the OptiMUM machine to the appropriate speed setting (refer to your OptiMUM manual for recommended speeds).
4. Feed ingredients into the tube using the pusher. Apply gentle, even pressure.
5. Once processing is complete, switch off the machine and unplug it before disassembling.



Figure 3: Detailed view of the different stainless steel discs and their resulting food preparations, including finely grated cheese, coarsely grated vegetables, and uniform slices.

5.2 Using the Multi-function Chopping Blade

The chopping blade is suitable for processing herbs, nuts, onions, and other soft to medium-hard ingredients.

1. Assemble the universal chopper with the multi-function chopping blade.
2. Add ingredients to the bowl. Do not overfill.
3. Secure the lid.
4. Switch on the OptiMUM machine. Use pulse function for coarse chopping or continuous operation for finer results.
5. Switch off and unplug before removing ingredients.

5.3 Using the Citrus Press

The citrus press is designed for extracting juice from citrus fruits like oranges, lemons, and grapefruits.

1. Assemble the citrus press as described in Section 4.2.
2. Place a suitable container under the juice outlet.
3. Switch on the OptiMUM machine to a low speed.
4. Press halved citrus fruits onto the rotating cone.
5. Once juicing is complete, switch off the machine and unplug it before disassembling.

6. MAINTENANCE AND CLEANING

Proper cleaning ensures the longevity and hygiene of your Veggie Love Plus set.

- Always unplug the OptiMUM machine before cleaning.
- Disassemble all parts of the attachment.
- Wash all removable parts (bowl, lid, pusher, blades, discs, citrus press components) by hand using warm soapy water.
- The stainless steel discs are taste-neutral and easy to clean. Exercise caution when handling sharp edges.
- Rinse thoroughly and dry immediately to prevent water spots or corrosion.
- Do not immerse the main OptiMUM machine unit in water. Wipe it clean with a damp cloth.

7. TROUBLESHOOTING

- **Appliance does not start:** Ensure the attachment is correctly assembled and locked, and the lid is securely closed. Check if the OptiMUM machine is plugged in and switched on.
- **Poor processing results (e.g., uneven grating):** Ensure ingredients are cut to an appropriate size. Do not apply excessive pressure with the pusher. Check if the correct disc is installed for the desired result.
- **Loud noise during operation:** Stop the machine immediately. Check for any foreign objects in the bowl or if parts are incorrectly assembled.

8. SPECIFICATIONS

Brand	Bosch
Model Number	MUZ9VLP1
Color	Silver
Product Dimensions (L x W x H)	30 x 22.4 x 21.4 cm
Item Weight	1.5 Kilograms
Material	Stainless Steel
Compatibility	Bosch OptiMUM (MUM9 series)

Care Instructions	Hand wash
-------------------	-----------

9. WARRANTY AND SUPPORT

This product is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase or visit the official Bosch website for detailed warranty terms and conditions specific to your region.

Spare parts availability for this product is typically 1 year from the date of purchase. For technical assistance, spare parts, or service inquiries, please contact Bosch customer support in your country. Contact details can usually be found in your OptiMUM kitchen machine's main manual or on the Bosch official website.