

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Bosch](#) /

› [Bosch TastyMoments MUZ9TM1 5-in-1 Accessory Kit for OptiMUM Food Processor User Manual](#)

Bosch MUZ9TM1

Bosch TastyMoments MUZ9TM1 5-in-1 Accessory Kit User Manual

MODEL: MUZ9TM1

Introduction

This manual provides comprehensive instructions for the safe and efficient use of your Bosch TastyMoments MUZ9TM1 5-in-1 Accessory Kit. This versatile kit is designed to enhance the functionality of your Bosch OptiMUM food processor (MUM9xxx series), offering solutions for grinding, chopping, mixing, and convenient storage. Please read these instructions carefully before first use and keep them for future reference.

Safety Instructions

- Always ensure the food processor is switched off and unplugged before attaching or detaching accessories.
- Handle blades with extreme care as they are very sharp.
- Never operate the appliance with damaged parts.
- Do not exceed the maximum fill levels indicated on the containers.
- Keep hands and utensils away from moving parts during operation.
- This appliance is intended for household use only.

Components Overview

The Bosch TastyMoments MUZ9TM1 kit includes the following components:

- Grinder/Chopper Base:** The main attachment unit with integrated blades.
- Grinding Container:** For dry ingredients like coffee beans, spices, nuts.
- Chopping Container:** For wet or larger ingredients like herbs, vegetables, cheese.
- Blender Attachment:** For mixing liquids, soups, and smoothies.
- ToGo Cup:** A portable cup for blended drinks.

- **Storage Lids:** Airtight lids for all containers, allowing for convenient storage of processed ingredients.



Image: The grinder/chopper base shown with various ingredients such as chocolate, hazelnuts, ground coffee, fresh herbs, and chopped red onion, illustrating its versatility for different food preparations.

Setup and Assembly

1. Attaching to the Food Processor:

- Ensure your Bosch OptiMUM food processor is unplugged and switched off.
- Locate the high-speed drive on your food processor (usually at the front or top).
- Align the accessory kit's base with the drive and twist until it locks securely into place.

2. Preparing the Grinder/Chopper:

- Select the appropriate container (grinding or chopping) for your ingredients.
- Place the ingredients into the container. Do not overfill.
- Attach the blade unit to the container by twisting it firmly until sealed.
- Mount the assembled container (with blade unit) onto the accessory kit's base, twisting to lock.

3. Preparing the Blender Attachment:

- Place desired liquids and soft ingredients into the blender jug.
- Secure the lid onto the blender jug.
- Attach the blender jug to the accessory kit's base, twisting to lock.

Operating Instructions

Once the accessory is securely attached to your OptiMUM food processor, you can begin operation.

1. Grinding (e.g., coffee beans, spices, nuts):

- Use the grinding container.
- Add dry ingredients.
- Turn on the food processor to a medium speed. Process in short bursts for optimal results and to prevent overheating.
- Monitor consistency and stop when desired fineness is achieved.

2. Chopping (e.g., herbs, vegetables, hard cheese):

- Use the chopping container.
- Add ingredients, ensuring they are cut into manageable pieces if large.
- Turn on the food processor to a medium speed. Use pulse function for coarse chopping or continuous operation for finer results.
- Do not overload the container.

3. Mixing (e.g., smoothies, soups, sauces):

- Use the blender attachment.
- Add liquids first, then softer ingredients, and finally harder ingredients (if any).
- Start at a low speed and gradually increase to desired blending speed.
- For the ToGo cup, simply attach it to the blade unit and blend directly.



Image: Various containers from the TastyMoments kit displayed on a wooden surface. One container holds a red paste, another holds ground nuts, and a ToGo cup contains a green smoothie, demonstrating the kit's ability to prepare and store different food items.

Maintenance and Cleaning

Proper cleaning ensures the longevity and hygiene of your accessory kit.

- **Before Cleaning:** Always unplug the food processor and detach the accessory kit.
- **Containers and Lids:** The containers and storage lids are generally dishwasher-safe, but hand washing is recommended for best care.
- **Blade Units:** Wash blade units carefully by hand using warm soapy water. Use a brush to clean around the blades. **Exercise extreme caution due to sharp blades.**

- **Base Unit:** Wipe the main accessory base unit with a damp cloth. Never immerse it in water.
- **Drying:** Ensure all parts are thoroughly dry before reassembling or storing.
- **Storage:** Store the components in a dry place, away from direct sunlight.

Troubleshooting

Problem	Possible Cause	Solution
Accessory not attaching securely.	Incorrect alignment or obstruction.	Ensure the accessory is correctly aligned with the food processor's drive and twist firmly until it clicks into place. Check for any food debris blocking the connection.
Appliance not starting.	Accessory not properly locked or food processor not powered.	Verify the accessory is fully locked onto the food processor. Check if the food processor is plugged in and switched on. Ensure safety interlocks are engaged.
Ingredients not processing effectively.	Overfilling, incorrect speed, or ingredients too large.	Reduce the quantity of ingredients. Adjust the speed setting. Cut larger ingredients into smaller pieces before processing.
Leakage from containers.	Lid or blade unit not sealed correctly.	Ensure the blade unit is tightly twisted onto the container and the container is securely locked onto the base. Check seals for damage.

Specifications

- **Brand:** Bosch
- **Model Number:** MUZ9TM1
- **Color:** Multicolour
- **Product Dimensions (L x W x H):** 25.8 x 24.2 x 21.5 cm
- **Item Weight:** 1.6 Kilograms
- **Material:** Stainless Steel (blades), Plastic (containers)
- **Compatibility:** Bosch OptiMUM Food Processors (MUM9xxx series)
- **Special Features:** Automatic shut-off, Safety lock (features of the main food processor, not the accessory kit itself, but relevant for operation)
- **Recommended Uses:** Chopping, Grinding, Slicing (implied by functions)
- **Care Instructions:** Hand wash recommended for blades, containers may be dishwasher safe.
- **Components Included:** Herb/spice grinder, universal chopper, mixer, ToGo cup, additional work containers, and matching sealing lids.

Warranty and Support

For warranty information, please refer to the documentation provided with your original Bosch OptiMUM food processor or visit the official Bosch website. Bosch offers customer support for product inquiries, spare parts, and service. Please have your model number (MUZ9TM1) and food processor model number (MUM9xxx) ready when contacting support.

You can find more information and contact details on the official Bosch website www.bosch-home.com

