

Bosch TAT6A113

Bosch TAT6A113 Two-Slice Electric Toaster User Manual

Model: TAT6A113

1. INTRODUCTION

Thank you for choosing the Bosch TAT6A113 Two-Slice Electric Toaster. This manual provides important information for the safe and efficient use of your appliance. Please read these instructions carefully before first use and keep them for future reference.

The Bosch TAT6A113 toaster is designed for even toasting of bread slices, featuring automatic bread centering, an integrated fold-away warming rack, High-Lift function, defrost and reheat settings, multiple browning controls, an illuminated cancel button, and a safety shut-off mechanism.

2. SAFETY INSTRUCTIONS

Always observe the following safety precautions to prevent personal injury or damage to the appliance:

- Read all instructions before operating the toaster.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical hazards, do not immerse the cord, plug, or toaster in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, turn any control to "off", then remove the plug from the wall outlet.
- Do not use the appliance for other than intended use.
- Oversize foods, metal foil packages, or utensils must not be inserted into a toaster as they may create a fire or risk of electric shock.

- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not attempt to dislodge food when the toaster is plugged in.
- Do not operate the toaster unattended.
- Do not toast pastries with runny fillings or frosted items.

3. PRODUCT COMPONENTS

Familiarize yourself with the parts of your Bosch TAT6A113 toaster:

1. Toasting Slots (2)
2. Browning Control Dial (with 6 settings)
3. Cancel Button (illuminated)
4. Defrost Button
5. Reheat Button
6. Toasting Lever (with High-Lift function)
7. Integrated Fold-Away Warming Rack
8. Removable Crumb Tray
9. Cable Storage (underneath the unit)



Image: Main view of the Bosch TAT6A113 two-slice electric toaster, showcasing its sleek black design and controls.

4. SETUP

Before using your toaster for the first time:

1. Unpack the toaster and remove all packaging materials, including any protective films or stickers.
2. Place the toaster on a stable, heat-resistant surface, away from flammable materials.
3. Ensure the crumb tray is correctly inserted.
4. Plug the power cord into a suitable electrical outlet.
5. For the first use, operate the toaster without bread on the highest browning setting (6) for a few cycles to burn off any manufacturing residues. A slight odor or smoke may occur; this is normal and will dissipate. Ensure good ventilation during this process.



Image: The Bosch TAT6A113 toaster positioned on a kitchen counter, ready for use, alongside breakfast items.

5. OPERATING INSTRUCTIONS

5.1 Toasting Bread

1. Insert up to two slices of bread into the toasting slots. The automatic bread centering feature will position the bread for even toasting.
2. Select your desired browning level using the browning control dial. Settings range from 1 (lightest) to 6 (darkest).
3. Press the toasting lever down until it locks into place. The toasting process will begin, and the cancel button will illuminate.
4. Once the selected browning level is reached, the toast will automatically pop up, and the toaster will switch off.
5. If the toast is too small to retrieve easily, use the High-Lift function by gently lifting the toasting lever further upwards.



Image: The Bosch TAT6A113 toaster in operation, with two slices of bread being toasted and rising from the slots.



Image: A top-down view of the Bosch TAT6A113 toaster's two slots, showing bread slices inserted for toasting.

5.2 Using the Cancel Button

To stop the toasting process at any time, press the illuminated cancel button. The toast will pop up immediately.

5.3 Defrosting Frozen Bread

Insert frozen bread slices into the slots. Press the defrost button (usually marked with a snowflake symbol). Then, press the toasting lever down. The toaster will automatically adjust the toasting time for frozen bread.

5.4 Reheating Cold Toast

Insert cold, already toasted bread slices into the slots. Press the reheat button (usually marked with a croissant or reheat symbol). Then, press the toasting lever down. The toaster will gently warm the toast without further browning.

5.5 Using the Warming Rack

The integrated fold-away warming rack is ideal for warming rolls, croissants, or pastries.

1. Push the lever on the side of the toaster upwards to deploy the warming rack.
2. Place the items to be warmed on the rack.
3. Set the browning control to a low setting (e.g., 1 or 2).
4. Press the toasting lever down. Monitor the items closely to prevent burning.
5. Once warmed, press the cancel button to stop the process and carefully remove the items.
6. Push the lever back down to fold away the warming rack when not in use.



Image: The Bosch TAT6A113 toaster with its integrated warming rack extended, holding two buns for warming.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your toaster.

6.1 Crumb Tray

The removable crumb tray should be emptied regularly to prevent crumb buildup and potential fire hazards.

1. Ensure the toaster is unplugged and completely cool.
2. Pull out the crumb tray located at the bottom of the toaster.
3. Discard the crumbs.
4. Wipe the tray clean with a damp cloth, if necessary.

5. Slide the crumb tray back into place until it clicks securely.

6.2 Exterior Cleaning

- 1. Ensure the toaster is unplugged and completely cool.
- 2. Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as they may scratch the finish.
- 3. Do not immerse the toaster in water or any other liquid.

6.3 Interior Cleaning

Never insert metal objects into the toasting slots to clean them. If food becomes lodged, unplug the toaster and carefully turn it upside down to dislodge the item.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outlet malfunction.	Ensure the toaster is securely plugged into a working outlet.
Bread is not toasting.	Toasting lever not fully depressed; appliance not powered.	Push the toasting lever down until it locks. Check power supply.
Bread is stuck in the slots.	Overly thick bread; safety shut-off activated.	Unplug the toaster. Carefully remove the bread using non-metallic tongs. The safety shut-off prevents operation if bread jams.
Uneven toasting.	Inconsistent bread thickness; crumb buildup.	Ensure bread slices are of uniform thickness. Clean the crumb tray regularly.
Smoke coming from toaster.	Food particles or crumbs burning; first use residue.	Press the cancel button immediately. Unplug and allow to cool. Clean the crumb tray. If it's the first use, this is normal.

8. SPECIFICATIONS

Feature	Detail
Brand Name	Bosch
Model Number	TAT6A113
Color	Black
Material	Multi
Power	915-1090 Watts
Number of Slots	2
Special Features	Cancel Function, Warming Rack, Defrost Setting, Reheat Setting, High-Lift Function, Automatic Bread Centering, Safety Shut-off
Item Weight	1.9 kg

Feature	Detail
Voltage	240 Volts
Manufacturer	Bosch
Global Trade Item Number (GTIN)	04242002879505
Number of Programs (Browning Levels)	6

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Bosch website for your region. Keep your purchase receipt as proof of purchase for any warranty claims. If you experience any issues not covered in this manual, please contact Bosch customer service for assistance.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question