

VINABTY JX8036A

VINABTY Replacement Remote Control for Element TV (Model JX8036A)

Instruction Manual

INTRODUCTION

This manual provides instructions for the VINABTY Replacement Remote Control, designed for use with various Element TV models. This remote offers a direct replacement solution, requiring no complex programming.

PACKAGE CONTENTS

- 1 x VINABTY Replacement Remote Control (Model JX8036A)

Note: Batteries and a separate manual are not included in the package.

SETUP

1. **Insert Batteries:** Open the battery compartment cover on the back of the remote control. Insert two (2) AAA alkaline batteries, ensuring correct polarity (+/-). Close the battery compartment cover.
2. **No Setup Required:** This remote control is pre-programmed for compatible Element TV models. No additional setup or programming is required.



7.09 inch



Image: The VINABTY Replacement Remote Control, showing its overall design and dimensions.

OPERATING INSTRUCTIONS

The VINABTY Replacement Remote Control functions identically to your original Element TV remote. Point the remote

directly at your television's infrared receiver.

- **Power Button:** Press the red power button to turn the TV on or off.
- **Number Buttons (0-9):** Use these buttons to directly enter channel numbers.
- **Channel Up/Down (CH+/CH-):** Navigate through channels sequentially.
- **Volume Up/Down (VOL+/VOL-):** Adjust the television's volume level.
- **Mute Button:** Mute or unmute the television's audio.
- **Source/Input Button:** Cycle through available input sources (HDMI, AV, etc.).
- **Menu Button:** Access the TV's main menu.
- **Navigation Buttons (Up, Down, Left, Right, OK):** Use these to navigate menus and confirm selections.
- **Exit Button:** Exit current menus or on-screen displays.
- **Sleep Button:** Activate the TV's sleep timer function.
- **Aspect Button:** Adjust the screen aspect ratio.
- **Other Function Buttons:** Utilize specific buttons for features like Freeze, Auto, MTS, Info, CC (Closed Captioning), USB, Repeat, FAV (Favorites), Add/Erase, and V-Chip as supported by your Element TV model.



Image: The VINABTY Replacement Remote Control positioned next to an Element television, demonstrating typical usage distance.

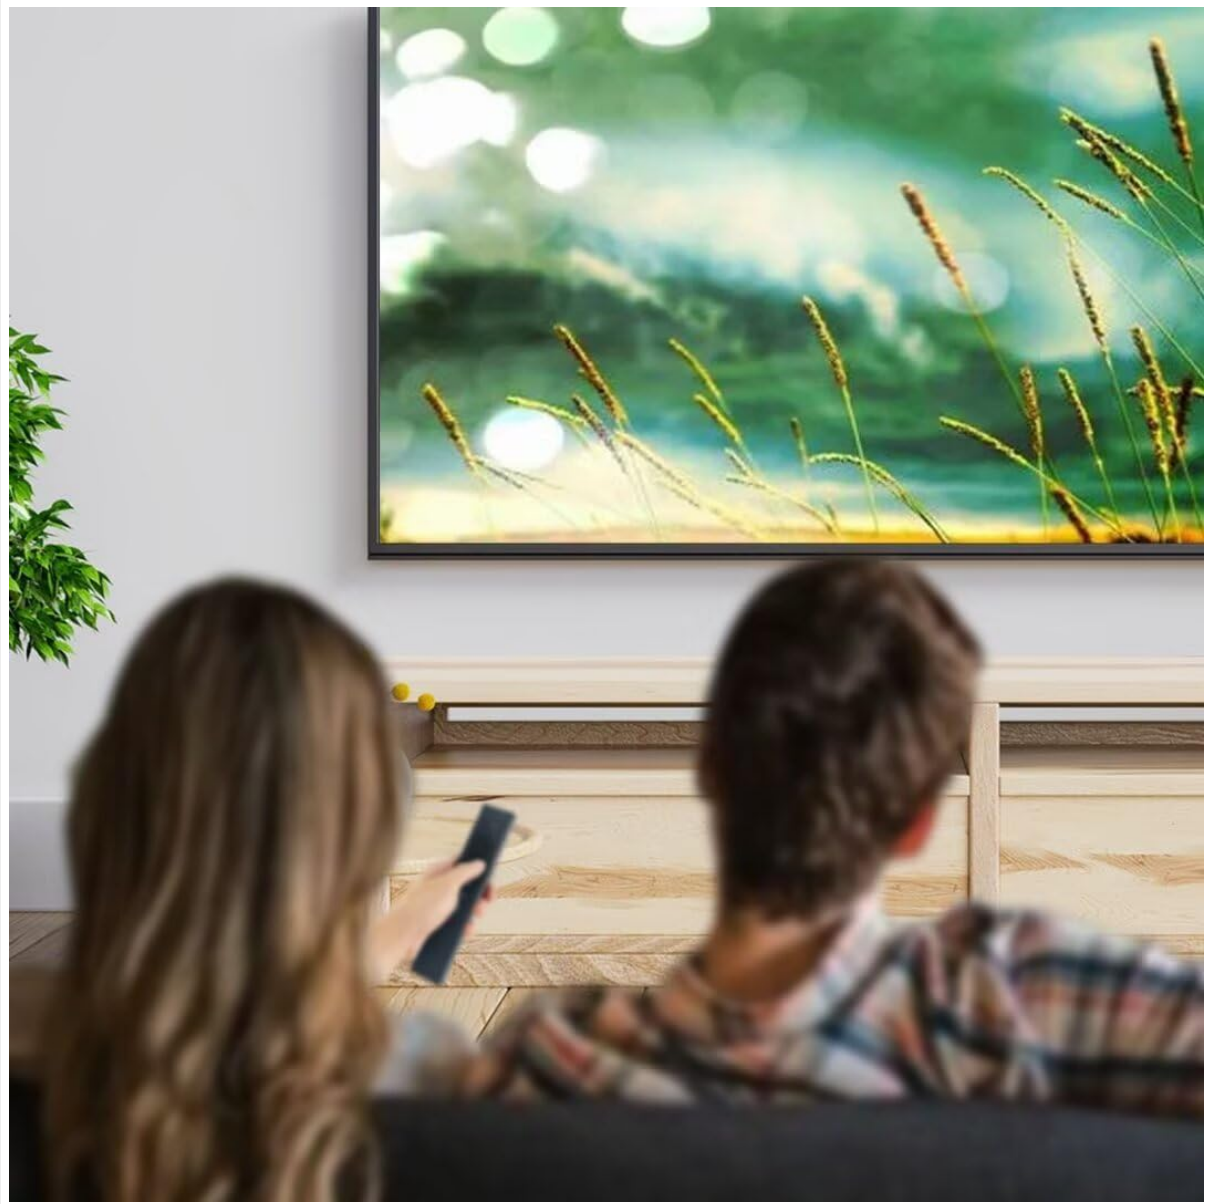


Image: A user operating the VINABTY Replacement Remote Control while watching television.

COMPATIBLE ELEMENT TV MODELS

This remote control is compatible with a wide range of Element TV models. Please refer to the list below to confirm compatibility with your specific television:

- ELEFW504A
- ELEFW328
- ELEFJ321
- ELEFJ391
- ELEFQ391J
- ELEFQ501J
- ELEFT193
- ELEFT405
- ELEFW264
- ELEFW401A
- ELGFT551
- ELGFT554

- ELGFW601
- ELCFW324
- ELCFW329
- ELDFC322
- ELDFC601JA
- ELDFQ322
- ELDFQ501J
- ELDFQ395J
- ELCFW326
- ELDFQ404
- ELDFQ465J
- ELDFW322
- ELDFW374
- ELDFW407
- ELDFW464
- ELDFW501
- ELEFC461
- ELEFC463JA
- ELEFJ191
- ELEFJ243
- ELEFW408
- ELEFW606
- ELEFW605
- ELDFW406
- ELCFT262
- ELCFW328
- ELEFW193
- ELEFT195

TROUBLESHOOTING

Remote Not Responding:

- **Check Batteries:** Ensure batteries are inserted correctly with proper polarity and are not depleted. Replace with fresh AAA alkaline batteries if necessary.
- **Line of Sight:** Verify there is a clear line of sight between the remote control's infrared emitter and the TV's IR receiver. Obstructions can block the signal.
- **Distance:** Ensure you are within the maximum operating range of 33 feet (approximately 10 meters) from the television.
- **TV IR Receiver:** Check if the TV's IR receiver is clean and unobstructed.

Specific Buttons Not Working:

- Some advanced functions may not be supported by all Element TV models. Refer to your TV's original manual for specific feature compatibility.
- If multiple buttons are unresponsive, try replacing the batteries.

SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Brand	VINABTY
Model Number	JX8036A (RE-8036-0)
Connectivity Technology	Infrared
Compatible Devices	Element Televisions
Number of Buttons	30
Maximum Range	33 Feet (approximately 10 meters)
Battery Type	2 x AAA Alkaline Batteries (not included)
Item Weight	2.3 Ounces (approximately 65 grams)
Dimensions (L x W x H)	5" x 1.9" x 0.5" (approximately 12.7 cm x 4.8 cm x 1.3 cm)
Special Feature	Ergonomic Design

WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your VINABTY Replacement Remote Control, please contact the seller directly. Refer to your purchase documentation for specific warranty information.