

WALPLUS WC2053

WALPLUS Chiming Cuckoo Clock Instruction Manual

Model: WC2053

INTRODUCTION

Thank you for choosing the WALPLUS Chiming Cuckoo Clock. This manual provides detailed instructions for setting up, operating, and maintaining your new cuckoo clock. Designed with a vintage aesthetic and modern features like adjustable volume, this battery-operated pendulum clock will add a charming touch to your home, living room, or office. Please read this manual thoroughly before use to ensure proper function and longevity of your clock.






A full front view of the WALPLUS Chiming Cuckoo Clock, showcasing its detailed vintage design with carved leaves, birds, and pinecone pendulums.

WHAT'S INCLUDED

Your WALPLUS Cuckoo Clock package includes the following components:

- 1x WALPLUS Cuckoo Clock unit
- 1x Quick Start Guide
- 1x Magnetic Cuckoo Bird
- 1x Pendulum

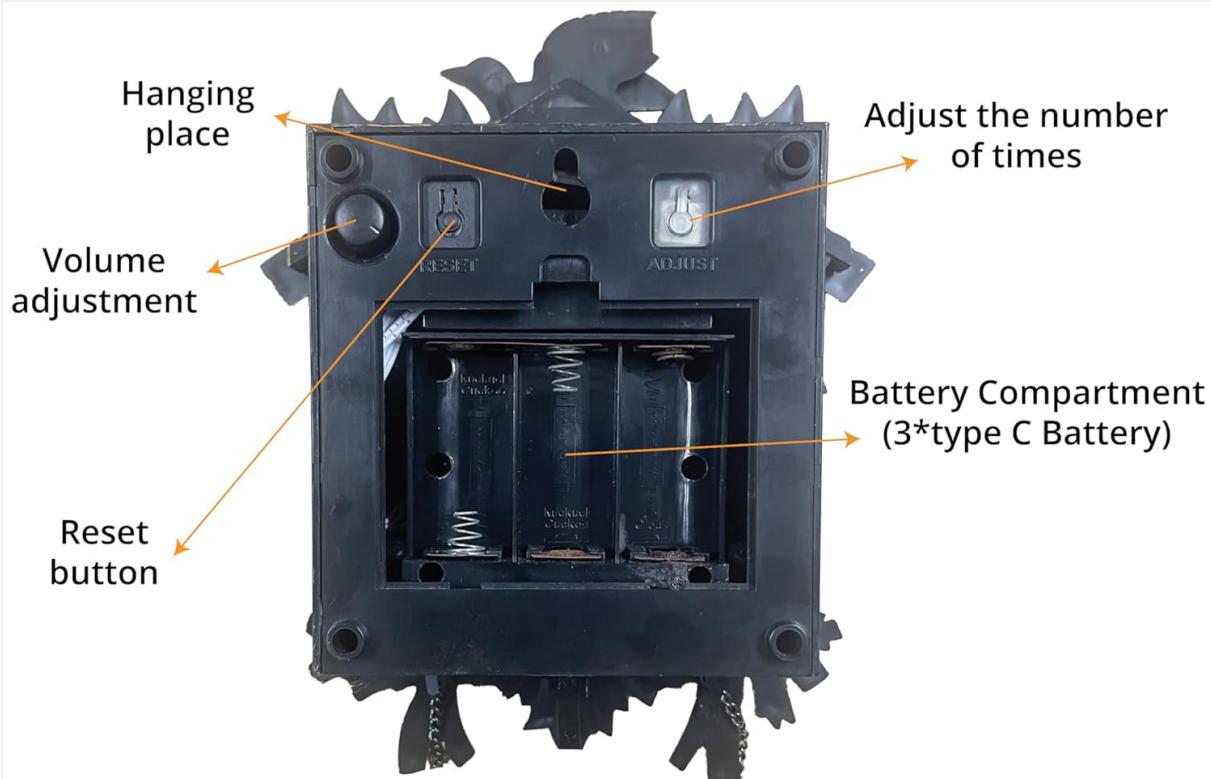

Pendulum suspended at the bottom



The pendulum can be inserted into the hanger for installation

The back panel of the cuckoo clock, illustrating the battery compartment, volume adjustment knob, reset button, and adjust button.

SETUP INSTRUCTIONS

Follow these steps to set up your WALPLUS Cuckoo Clock:

- Insert Batteries:** Open the battery compartment cover on the back of the clock. Insert three (3) C-type batteries (not included) into the designated slots. Ensure correct polarity (+/-). The third battery is optional and operates the chime function only.
- Attach Pendulum:** Locate the pendulum. Carefully attach the pendulum to the hanger at the bottom of the clock mechanism.
- Insert Cuckoo Bird:** Place the magnetic cuckoo bird into the window at the front of the clock. Ensure it is securely seated.
- Set Initial Time:** Set the clock's time to 7:00 AM by rotating the minute hand clockwise.
- Reset Mechanism:** Press the 'RESET' button located on the back of the clock. Immediately after, press the 'ADJUST' button. This synchronizes the cuckoo mechanism with the 7 AM setting.
- Set Correct Time:** Gently rotate the minute hand clockwise to set the clock to the current time. The cuckoo will chime for each hour it passes.

7. **Adjust Volume:** Use the volume adjustment knob on the back of the clock to set your preferred cuckoo sound level. You can also remove the third battery to silence the cuckoo entirely.

Your browser does not support the video tag.

Official video demonstrating the setup process for the WALPLUS Cuckoo Clock, including battery installation, pendulum and bird attachment, and time setting.

OPERATING INSTRUCTIONS

Your WALPLUS Cuckoo Clock is designed for ease of use and features a specific chiming schedule:

- **Chiming Schedule:** The cuckoo bird will emerge and chime once every hour between 7:00 AM and 9:00 PM.
- **Silent Hours:** The clock is programmed to be silent between 9:00 PM and 7:00 AM to ensure undisturbed sleep.
- **Timekeeping:** The clock operates on a 1.5V C LR14 battery for accurate timekeeping.
- **Volume Control:** The volume of the cuckoo sound can be adjusted using the dedicated button on the back of the clock.



The WALPLUS Cuckoo Clock displayed on a wall in a home setting, illustrating its decorative appeal.

MAINTENANCE

To ensure the longevity and optimal performance of your cuckoo clock, follow these maintenance guidelines:

- **Cleaning:** Gently wipe the clock with a soft, dry cloth to remove dust. Avoid using abrasive cleaners or solvents, as they may damage the finish.
- **Battery Replacement:** Replace batteries promptly when the clock's performance diminishes or the cuckoo sound becomes weak. Always replace all batteries at once.
- **Placement:** Place the clock on a stable surface or hang it securely on a wall. Avoid direct sunlight or extreme temperature changes, which can affect the clock's mechanism.

TROUBLESHOOTING

If you encounter any issues with your WALPLUS Cuckoo Clock, refer to the following common problems and solutions:

Problem	Possible Cause / Solution
Cuckoo does not chime or chimes weakly.	<p>Check if batteries are correctly installed or need replacement.</p> <p>Ensure the third battery (for chime) is inserted if you desire the cuckoo sound.</p> <p>Verify the volume adjustment knob is not set to minimum.</p> <p>Confirm the time is not between 9 PM and 7 AM (silent hours).</p>
Time is incorrect or clock stops.	<p>Replace batteries with fresh ones.</p> <p>Ensure the clock hands are not obstructed.</p> <p>Re-set the time following the "Set Initial Time" and "Set Correct Time" steps in the Setup section.</p>
Pendulum is not swinging.	<p>Ensure the pendulum is correctly attached to its hanger.</p> <p>Check battery power.</p>

SPECIFICATIONS

Feature	Detail
Brand	WALPLUS
Model Number	WC2053
Color	Brown
Display Type	Analog
Style	Vintage
Special Feature	Adjustable Volume
Product Dimensions	8.86"W x 11.81"H
Power Source	Battery Powered (3 C batteries required, not included)
Material	Plastic

Feature	Detail
Mounting Type	Wall Mount
Item Weight	1.1 pounds (0.5 Kilograms)
Watch Movement	Quartz

WARRANTY AND SUPPORT

Your WALPLUS Cuckoo Clock comes with a **2-year manufacturer's warranty** to ensure peace of mind.

Please retain your receipt or e-receipt as proof of purchase to validate the warranty.

For further assistance or inquiries, please visit the [WALPLUS Store on Amazon](#) or contact customer support through your purchase platform.