

[Manuals.plus](#) /

› [Candy](#) /

› Candy CDI 1L38-02/T Built-in Dishwasher User Manual

Candy CDI 1L38-02/T

Candy CDI 1L38-02/T Built-in Dishwasher User Manual

Model: CDI 1L38-02/T

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your Candy CDI 1L38-02/T built-in dishwasher. Please read these instructions carefully before using the appliance and keep them for future reference.



Figure 1: Front view of the Candy CDI 1L38-02/T built-in dishwasher. The appliance is white with a silver handle, and the control panel is visible at the top, showing program indicators and buttons.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Ensure the appliance is properly grounded.
- Do not operate the dishwasher if it is damaged.
- Keep children away from the dishwasher, especially when the door is open.
- Use only detergents and rinse aids specifically designed for dishwashers.
- Do not touch the heating element during or immediately after use.

3. INSTALLATION AND SETUP

The Candy CDI 1L38-02/T is a fully integrated built-in dishwasher. Professional installation is recommended.

3.1 Unpacking

Carefully remove all packaging materials. Inspect the dishwasher for any damage during transit. Report any damage to your retailer immediately.

3.2 Positioning

The dishwasher should be placed on a level, stable surface. Ensure adequate space for water inlet and outlet hoses, and electrical connections. The dimensions of the product are 55 cm (depth) x 59.8 cm (width) x 82 cm (height).

3.3 Electrical Connection

Connect the appliance to a properly grounded electrical outlet. The dishwasher operates on 230 Volts.

3.4 Water Connection

Connect the water inlet hose to a cold water supply. Ensure the drain hose is properly connected to a suitable drain.

4. OPERATING INSTRUCTIONS

4.1 Control Panel Overview



Figure 2: Detail of the control panel. From left to right, it shows the Candy logo, model number CDI 1L38, X13 indicator, program indicators (P1-P5 with temperatures and symbols), On/Off button, Program selector, delay start options (3h, 6h, 9h), Express and Reset buttons, and a Start button.

The control panel is located on the top edge of the dishwasher door. It features program selection buttons, indicators, and function buttons.

4.2 Loading the Dishwasher

For optimal cleaning, ensure dishes are loaded correctly, allowing water to reach all surfaces. Scrape off large food particles before loading.

4.3 Adding Detergent and Rinse Aid

Fill the detergent dispenser with the appropriate amount of dishwasher detergent. Check the rinse aid level and refill if necessary.

4.4 Program Selection

The dishwasher offers 5 main programs:

Program	Temperature	Description
P1: Intensive	75°C	For heavily soiled dishes, pots, and pans. Provides extra hygiene.
P2: Universal	60°C	Standard program for normally soiled dishes.
P3: ECO	45°C	Economical program for normally soiled dishes, optimizing water and energy consumption.
P4: Quick	50°C	Quick wash for lightly soiled dishes, completing in 29 minutes.
P5: Pre-wash	45°C	Pre-wash cycle for rinsing dishes that will be washed later.

Additionally, there is a "Dishwasher Cleaner" program (P3+Express) at 70°C for appliance maintenance.

4.5 Delay Start Function

You can delay the start of a wash cycle by 3, 6, or 9 hours. Select your desired program, then press the delay start button repeatedly to choose the delay time.

4.6 Starting a Cycle

Close the dishwasher door firmly. Press the "Start" button to begin the selected program.

5. MAINTENANCE AND CLEANING

5.1 Exterior Cleaning

Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners.

5.2 Interior Cleaning and Filter Maintenance

Regularly clean the dishwasher interior, including the spray arms and filters. The "Dishwasher Cleaner" program (P3+Express at 70°C) is designed for this purpose, ensuring optimal performance and hygiene.

5.3 Salt Indicator

If your model has a salt indicator, refill the salt dispenser when the indicator light illuminates. This helps prevent limescale buildup, especially in hard water areas.

6. TROUBLESHOOTING

Before contacting customer service, refer to the following common issues and their solutions:

- **Dishwasher does not start:** Check if the door is fully closed, the power cord is plugged in, and the circuit breaker has not tripped.
- **Dishes are not clean:** Ensure spray arms are not blocked, filters are clean, and detergent dispenser is filled correctly. Check water pressure.
- **Excessive noise:** Check for foreign objects in the pump or spray arms. Ensure the dishwasher is level.
- **Water not draining:** Clean the filter system. Check the drain hose for kinks or blockages.

For issues not listed here, or if problems persist, contact Candy customer support.

7. TECHNICAL SPECIFICATIONS

Feature	Specification
Model Number	CDI 1L38-02/T (Internal: 32900563)
Type	Built-in, Fully Integrated
Place Settings	13
Dimensions (W x D x H)	59.8 cm x 55 cm x 82 cm
Weight	32.55 kg
Voltage	230 Volts
Water Consumption (per cycle)	11 Liters
Noise Level	53 dB
Energy Efficiency Class	F
Material	Stainless Steel (interior components)
Controls	Touch
Components Included	Main appliance body

8. WARRANTY AND SUPPORT

This product is covered by a manufacturer's warranty. For detailed warranty information and terms, please refer to the documentation provided with your purchase or visit the official Candy website.

For technical assistance, spare parts, or to schedule a service appointment, please contact Candy customer support. When contacting support, please have your model number (CDI 1L38-02/T) and serial number ready.

For returns within 14 days of receipt, please consult the retailer's return policy. If you received a defective or damaged product, refer to the retailer's help page for specific instructions.

© 2024 Candy. All rights reserved.
For more information, visit [Candy Official Store](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question