

Saved from manuals.plus.

Open the live page for links to other documents and user manuals.

[Manuals.plus](#) /

› [Crosley](#) /

› Crosley CR8005D-TU Cruiser Deluxe Vintage 3-Speed Bluetooth Suitcase Vinyl Record Player Turntable, Aqua User Manual

Crosley CR8005DTU

Crosley CR8005D-TU Cruiser Deluxe Turntable User Manual

Model: CR8005DTU

PRODUCT OVERVIEW

The Crosley CR8005D-TU Cruiser Deluxe Vintage 3-Speed Bluetooth Suitcase Vinyl Record Player Turntable offers a portable and versatile way to enjoy your vinyl collection. Constructed from wood and bound in a durable leatherette material, its briefcase-style design makes it lightweight and easy to transport. It features built-in stereo speakers for immediate listening, adjustable pitch control for customized audio, and integrated Bluetooth for wireless streaming from your devices.



Image: The Crosley Cruiser Deluxe Turntable in Aqua, shown in its closed, portable suitcase form.

WHAT'S IN THE BOX

- Crosley CR8005D Cruiser Deluxe Turntable
- AC Adapter
- User Manual
- Rubber Turntable Mat
- 45 RPM Adapter

KEY FEATURES

- **Built-in Bluetooth Receiver:** Allows wireless streaming of music from your Bluetooth-enabled device to the turntable's dynamic full-range speakers.
- **Adjustable Pitch Control:** Fine-tune the playback speed for optimal audio quality.

- **Three-Speed Turntable:** Plays 33 1/3, 45, and 78 RPM records.
- **Dynamic Full-Range Stereo Speakers:** Integrated speakers provide clear audio without the need for external equipment.
- **RCA and Headphone Jack Outputs:** Connect to external speaker systems or enjoy private listening.
- **Portable Suitcase Design:** Lightweight and easy to transport with a convenient handle.

SETUP INSTRUCTIONS

1. **Unpack the Turntable:** Carefully remove all components from the packaging.
2. **Power Connection:** Connect the AC adapter to the turntable's power input port (located on the back) and plug it into a wall outlet.
3. **Open the Lid:** Unlatch the front clasps and lift the lid to reveal the turntable platter and controls.
4. **Remove Stylus Cover:** Gently remove the protective plastic cover from the stylus (needle) before playing any records.
5. **Unlock Tonearm:** Release the tonearm from its rest by moving the tonearm clip.



Image: The Crosley Cruiser Deluxe Turntable with its lid open, revealing the platter and controls.

OPERATING INSTRUCTIONS

Playing a Record (33 1/3 RPM)

1. **Place Record:** Carefully place your 33 1/3 RPM vinyl record onto the turntable platter.
2. **Select Speed:** Ensure the speed selector switch is set to 33 1/3.
3. **Power On:** Turn the VOLUME/ON/OFF knob clockwise to power on the unit.
4. **Lift Tonearm:** Use the tonearm lift lever to raise the tonearm.
5. **Position Tonearm:** Manually move the tonearm over the desired starting groove of the record.
6. **Lower Tonearm:** Gently lower the tonearm using the lift lever. The record will begin to play.
7. **Adjust Volume & Pitch:** Use the VOLUME knob to adjust the sound level and the PITCH knob to fine-tune the playback speed if needed.



Image: Close-up view of the turntable's control panel, showing the speed selector, pitch, volume, and power knobs.

Playing 45 RPM Records

1. **Insert 45 RPM Adapter:** Place the included 45 RPM adapter onto the center spindle of the turntable platter.
2. **Place Record:** Place your 45 RPM record onto the adapter.
3. **Select Speed:** Set the speed selector switch to 45.
4. Follow steps 3-6 from "Playing a Record (33 1/3 RPM)" to begin playback.

Bluetooth Operation

1. **Switch to Bluetooth Mode:** Locate the PHONO/BLUETOOTH switch and slide it to the BLUETOOTH position. The indicator light will begin to flash.
2. **Pair Device:** On your Bluetooth-enabled device (smartphone, tablet, etc.), enable Bluetooth and search for "Crosley Cruiser Deluxe". Select it to pair.
3. **Start Streaming:** Once paired, the indicator light will stop flashing. You can now play music from your device

through the turntable's speakers.

4. **Adjust Volume:** Control the volume using both your device's volume controls and the turntable's VOLUME knob.

Your browser does not support the video tag.

Video: Official product video demonstrating the features and operation of the Crosley Cruiser Deluxe Turntable, including Bluetooth connectivity.

CONNECTIONS

The Crosley Cruiser Deluxe offers several connection options:

- **RCA Output:** Located on the back panel, these red and white RCA jacks allow you to connect the turntable to an external amplifier or powered speakers for a more robust audio experience.
- **Headphone Jack:** A 3.5mm headphone jack is available on the control panel for private listening.
- **Auxiliary Input:** An auxiliary input port is also available, allowing you to connect external audio devices via a 3.5mm cable.



Image: Rear view of the turntable, showing the power input, RCA output jacks, and auxiliary input.

MAINTENANCE

- **Cleaning the Stylus:** Gently brush the stylus from back to front with a soft brush to remove dust and debris.
- **Cleaning the Turntable:** Use a soft, dry cloth to wipe down the turntable's exterior. Avoid harsh chemicals or abrasive cleaners.
- **Record Care:** Keep your records clean and free of dust to ensure optimal playback and prolong stylus life. Store records vertically in their sleeves.
- **Storage:** When not in use, ensure the tonearm is secured with its clip and the stylus cover is in place. Close the lid and latch the clasps to protect the unit.

TROUBLESHOOTING

If you encounter issues with your Crosley Cruiser Deluxe, consider the following common solutions:

- **No Power:** Ensure the AC adapter is securely connected to both the turntable and a working power outlet. Check the ON/OFF knob.
- **No Sound:** Verify the volume knob is turned up. If using external speakers, ensure they are properly connected and powered on. Check the PHONO/BLEETOOTH switch is in the correct position for your audio source.
- **Skipping or Distorted Sound:** Check if the record is clean and free of scratches. Ensure the turntable is on a stable, level surface. Gently clean the stylus.
- **Bluetooth Pairing Issues:** Make sure the turntable is in Bluetooth mode (flashing indicator light). Ensure your device's Bluetooth is on and "Crosley Cruiser Deluxe" is selected. Try unpairing and re-pairing the device.

SPECIFICATIONS

Brand	Crosley
Model Name	Cruiser Deluxe
Item Model Number	CR8005DTU
Product Dimensions	14 x 10.5 x 4.63 inches
Item Weight	5.5 Pounds
Material	Wood, Plastic
Connectivity Technology	Bluetooth
Maximum Rotational Speed	78 RPM
Output Wattage	6.0 watts

WARRANTY AND SUPPORT

For specific warranty information and customer support, please refer to the official Crosley website or contact their customer service directly. The included User Manual (PDF) also contains detailed warranty terms and contact information. You can find the User Manual (PDF) [here](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B01IWIBKGE>

More documents and user manuals: <https://manuals.plus/>