

[Manuals.plus](#) /

› [UPBRIGHT](#) /

› UPBRIGHT AC Power Cord for Cen-Tech 4-in-1 and 3-in-1 Portable Power Pack Jump Starters User Manual

UPBRIGHT UPBRIGHT AC Power Cord

UPBRIGHT AC Power Cord for Cen-Tech Portable Power Pack Jump Starters User Manual

1. INTRODUCTION

This manual provides essential information and instructions for the UPBRIGHT AC Power Cord. This cord is designed to provide AC input power for charging various Cen-Tech 4-in-1 and 3-in-1 Portable Power Pack Jump Starters. Please read this manual thoroughly before use to ensure proper operation and safety.

2. SAFETY INFORMATION

Always observe the following safety precautions when using electrical equipment:

- Ensure the power cord is fully inserted into both the wall outlet and the jump starter's AC input port.
 - Do not use the power cord if it is damaged, frayed, or has exposed wires.
 - Keep the power cord away from water, excessive heat, and sharp objects.
 - Do not attempt to modify or repair the power cord. Contact qualified personnel for assistance.
 - Always disconnect the power cord from the wall outlet before disconnecting it from the jump starter.
 - This is an AC power cord only. It is not designed for DC applications or direct battery charging without a compatible jump starter.
-

3. PRODUCT OVERVIEW

The UPBRIGHT AC Power Cord is a replacement or spare charging cable for compatible Cen-Tech Portable Power Pack Jump Starters. It features a standard two-prong AC plug for wall outlets and a female IEC C7 connector for the device's input.



Figure 1: The UPBRIGHT AC Power Cord, coiled for storage.

This power cord is compatible with various Cen-Tech models, including:

- **Cen-Tech 4-in-1 Portable Power Pack Jump Starter:** Item# 08884, 39954, 60666, 69401, NP7UA182C1
- **Cen-Tech 3-in-1 Portable Power Pack Jump Starter:** Item# 38391, 56349, 60657, 62306, 62376, 64083, NP7UA170C1

UpBright AC Power Cord Outlet Line Cable Plug Compatible with:



Figure 2: Examples of compatible Cen-Tech Portable Power Pack Jump Starters.

4. SETUP

To set up the UPBRIGHT AC Power Cord for charging your Cen-Tech Portable Power Pack Jump Starter:

1. Locate the AC input port on your Cen-Tech Portable Power Pack Jump Starter. This port is typically labeled for AC input or charging.
2. Connect the female end of the UPBRIGHT AC Power Cord to the AC input port on the jump starter. Ensure a firm connection.
3. Plug the two-prong male end of the UPBRIGHT AC Power Cord into a standard 120V AC wall outlet.
4. Verify that the charging indicator on your jump starter (if present) illuminates, indicating that charging has begun.

UpBright AC Power Cord Outlet Line Cable Plug Compatible with:

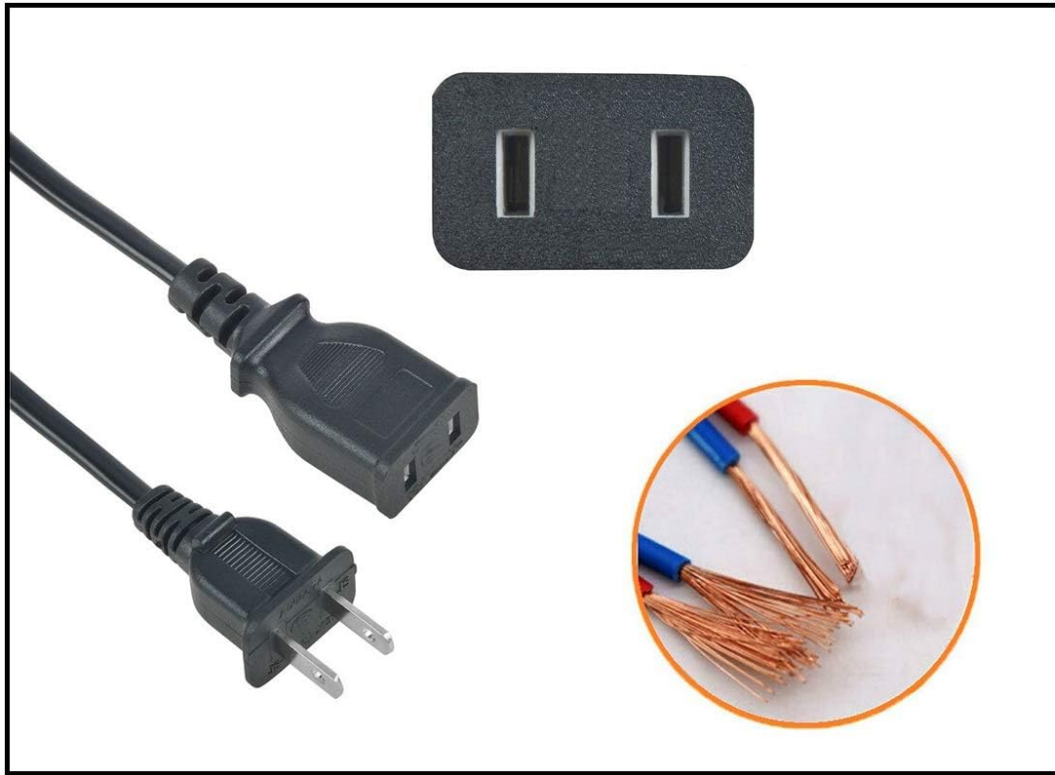


Figure 3: Illustration of the AC power cord's male and female connectors and a typical wall outlet.

5. OPERATING INSTRUCTIONS

Once connected, the UPBRIGHT AC Power Cord facilitates the charging process of your compatible Cen-Tech Portable Power Pack Jump Starter. The jump starter's internal charging circuit will manage the battery charging. Follow the specific charging instructions provided with your Cen-Tech jump starter for optimal battery life.

Important Considerations:

- This power cord is solely for providing AC power to the jump starter's charging system. It does not directly charge the battery.
- Rechargeable batteries have a finite lifespan, typically 1 to 3 years. If your jump starter's battery is old or faulty, it may not accept a charge, even with a functional power cord.
- If your jump starter has been in use for several years, ensure it is functioning correctly before assuming a charging issue is due to the power cord.

6. MAINTENANCE

Proper care of your UPBRIGHT AC Power Cord will ensure its longevity and safe operation:

- Store the cord in a cool, dry place when not in use.
- Avoid kinking, twisting, or bending the cord sharply.

- Do not place heavy objects on the cord.
- Regularly inspect the cord for any signs of damage, such as cuts, abrasions, or discolored insulation. Discontinue use immediately if damage is found.
- Clean the cord with a dry, soft cloth if necessary. Do not use liquid cleaners.

7. TROUBLESHOOTING

If your Gen-Tech Portable Power Pack Jump Starter is not charging when connected with the UPBRIGHT AC Power Cord, consider the following:

- **No Power Indicator:** Ensure the wall outlet is functional by testing it with another device. Check that both ends of the power cord are securely connected.
- **Jump Starter Not Charging:** If the power cord is connected and the outlet is working, the issue may lie with the jump starter's internal battery or charging circuit. Rechargeable batteries degrade over time (average 1-3 years) and may no longer accept a charge. This is typically a jump starter issue, not a power cord defect.
- **Cord Damage:** Visually inspect the power cord for any damage. A damaged cord should not be used.

8. SPECIFICATIONS

Product Dimensions	5 x 2 x 1 inches
Item Weight	2.82 ounces
Manufacturer	UpBright
Color	Black
Connector Gender	Male-to-Female (AC plug to IEC C7)
Voltage	12 Volts (for compatible device input)
Plug Format	Type A (US Standard)

9. WARRANTY AND SUPPORT

UPBRIGHT offers the following for this product:

- **Refund Policy:** 30 Days Refund
- **Exchange Policy:** 24 Months Exchange

For support or warranty claims, please refer to your purchase documentation or contact the seller directly.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B01IX0VY44>

More documents and user manuals: <https://manuals.plus/>