

[Manuals.plus](#) /

› [Snapper](#) /

› Snapper XD 82V MAX Cordless Electric 21" Push Lawn Mower (Model 1687884) Instruction Manual

Snapper 1687884

Snapper XD 82V MAX Cordless Electric 21" Push Lawn Mower

MODEL: 1687884

INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your Snapper XD 82V MAX Cordless Electric 21" Push Lawn Mower. Please read all instructions carefully before use and retain this manual for future reference.

SAFETY INFORMATION

WARNING: This product may contain chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. Always wear appropriate safety gear, including eye protection and sturdy footwear, when operating the lawn mower. Keep hands and feet away from moving parts. Ensure the area is clear of debris before mowing.

PACKAGE CONTENTS

Verify that all items are present in the package:

- Snapper XD 82V MAX Cordless Electric 21" Push Lawn Mower
- (2) Briggs & Stratton 82V MAX 2.0 Lithium-ion Batteries
- Rapid Charger
- Operator's Manual
- Quick Setup Guide

SETUP

1. Battery Charging and Installation

Before first use, fully charge both 82V MAX 2.0 Lithium-ion Batteries using the provided rapid charger. The charger indicates when the batteries are fully charged. To install, open the battery compartment cover on the mower deck and slide the battery into the slot until it clicks into place. Ensure the cover is securely closed before operation.

One Battery, Multiple Tools.



Image: Close-up of the 82V MAX 2.0 Lithium-ion Battery, showing its charge indicator lights.



Image: The battery compartment on the Snapper XD lawn mower, with a battery partially inserted.

2. Handle Assembly and Adjustment

Unfold the handle and secure it in position using the quick-release levers or knobs. Adjust the handle height to a comfortable operating position. Ensure all locking mechanisms are engaged before use.

3. Cutting Height Adjustment

The mower features a single-lever, 7-position height-of-cut adjustment. To adjust, pull the lever outwards and move it to the desired height setting. Release the lever to lock it in place. For optimal lawn health, avoid cutting more than one-third of the grass blade length at a time.

4. Bagger Attachment

To attach the 1.7 bushel bagger, lift the rear discharge door and hook the bagger onto the metal rod. Ensure it is securely seated to prevent grass clippings from escaping. For mulching or side-discharge, remove the bagger and install the appropriate accessory (mulch plug or side-discharge chute).



Image: The Snapper XD lawn mower with its grass bagger attached, ready for collecting clippings.

OPERATING INSTRUCTIONS

1. Starting the Mower

To start the mower, press and hold the push-button start, then pull the bail lever towards the handle. The blade will begin to spin. Release the bail lever to stop the mower.



Image: Close-up of the Snapper XD lawn mower's handle, showing the red push-button start and the black bail lever.

Video: Demonstrating the start-up procedure of the Snapper XD lawn mower.

2. Mowing Techniques

For best results, mow in overlapping rows. The mower's intelligent load-sensing technology automatically adjusts power levels to match cutting conditions, ensuring maximum efficiency. This 3-in-1 design allows for mulching, bagging, or side-discharge of grass clippings.



Image: The Snapper XD lawn mower being operated on a lush green lawn.

Video: A user demonstrating the Snapper XD lawn mower in action, highlighting its quiet operation.

MAINTENANCE

1. Battery Care

To prolong battery life, store batteries in a cool, dry place. Charge batteries at least once every two months, even during periods of non-use. Avoid storing batteries in extreme temperatures.

2. Cleaning the Mower

After each use, disconnect the battery and clean the underside of the mower deck to remove grass clippings and debris. Use a brush or scraper; avoid using water directly on electrical components. Clean the exterior with a damp cloth.

3. Blade Maintenance

Regularly inspect the mower blade for sharpness and damage. A dull blade can tear grass, leading to an unhealthy lawn. Refer to the full operator's manual for instructions on blade removal, sharpening, or replacement.

4. Storage

The Snapper XD mower features vertical storage capabilities, saving up to 70% of storage space. To store, remove the battery, fold the handle, and stand the mower upright. Ensure it is stored in a dry, protected area.



Image: The Snapper XD lawn mower in its vertical storage position, demonstrating its space-saving design.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Mower does not start	Battery not installed correctly or discharged; Safety bail not engaged.	Ensure battery is fully charged and properly seated. Engage the safety bail lever.
Reduced cutting performance	Dull blade; Grass too tall or wet; Deck clogged.	Sharpen or replace blade. Avoid mowing excessively tall or wet grass. Clean the mower deck.
Short battery runtime	Battery not fully charged; Mowing thick or tall grass; Battery degradation.	Fully charge battery. Mow in shorter passes or raise cutting height. Consider battery replacement if old.

SPECIFICATIONS

- Brand:** Snapper
- Model Number:** 1687884
- Power Source:** Battery Powered (82V MAX Lithium-ion)
- Cutting Width:** 21 Inches
- Cutting Height Positions:** 7
- Operation Mode:** Manual Push
- Deck Material:** Alloy Steel
- Item Weight:** 80 Pounds

Product Dimensions: 35.04"D x 24.21"W x 18.31"H

Included Components: Lawn mower, (2) 2Ah lithium ion batteries, rapid charger, operator's manual, quick setup guide

WARRANTY AND SUPPORT

For warranty information, technical support, or to order replacement parts, please refer to the contact details provided in your Quick Setup Guide or visit the official Snapper website. Keep your purchase receipt for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question