

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Risco](#) /

› [Risco RP432KPP000A LCD Keypad with Integrated Proximity Card Reader User Manual](#)

Risco RP432KPP000A

Risco RP432KPP000A LCD Keypad with Integrated Proximity Card Reader User Manual

Model: RP432KPP000A

INTRODUCTION

This manual provides essential instructions for the installation, operation, and maintenance of the Risco RP432KPP000A LCD Keypad with Integrated Proximity Card Reader. This device is designed to provide a user interface for security systems, allowing for system arming/disarming, status display, and access control via proximity cards. Please read this manual thoroughly before installation and use to ensure proper functionality and safety.

SAFETY INFORMATION

- Installation should only be performed by qualified personnel in accordance with local electrical codes and regulations.
- Disconnect power to the security system before performing any installation or maintenance.
- Do not expose the keypad to moisture, extreme temperatures, or direct sunlight.
- Use only specified power sources and wiring.
- Keep the device away from strong electromagnetic fields.

PACKAGE CONTENTS

Verify that all components are present before beginning installation. The package should typically include:

- Risco RP432KPP000A LCD Keypad with Integrated Proximity Card Reader
- Mounting screws and wall anchors
- Installation template
- Quick Start Guide (this manual provides detailed instructions)

SETUP

1. Mounting Location

Choose a suitable indoor location, typically near an entry/exit point, where the keypad is easily accessible and visible. Avoid locations exposed to direct sunlight, extreme temperatures, or high humidity. Ensure the mounting surface is flat and stable.

2. Physical Installation

1. Carefully open the keypad housing.
2. Use the provided template to mark drilling points on the wall.
3. Drill holes and insert wall anchors if necessary.
4. Secure the keypad backplate to the wall using the mounting screws.

3. Wiring and Connections

Connect the keypad to the security system control panel using the appropriate wiring terminals. Refer to the control panel's manual for specific wiring diagrams. Ensure all connections are secure and correctly polarized.

- **Power:** Connect to the system's regulated power supply (typically 12V DC).
- **Data Bus:** Connect to the security system's data communication bus (e.g., RS485).
- **Tamper:** Connect the tamper switch to a dedicated zone on the control panel.

4. Initial Power-Up

After all connections are made and verified, apply power to the security system. The keypad LCD should illuminate, and the system will typically perform a self-test. Follow the control panel's instructions for keypad enrollment and initial programming.



Image showing the front view of the Risco LCD Keypad, featuring a display screen and numerical buttons, along with the integrated proximity reader area.

OPERATING

1. Using the LCD Keypad

The LCD displays system status, zone information, and menu options. Use the numerical keys (0-9) to enter codes and navigate menus. Dedicated function keys (if present) provide quick access to common operations.

- **Arming:** Enter your user code followed by the arm button (e.g., "AWAY" or "STAY").
- **Disarming:** Enter your user code.
- **System Status:** The LCD will show messages like "SYSTEM READY," "ARMED," or "FAULT."
- **Menu Navigation:** Use arrow keys (if available) or specific function keys to scroll through options.

2. Using the Proximity Card Reader

The integrated proximity card reader allows for quick arming and disarming without entering a code.

1. Present your enrolled proximity card or tag to the designated reading area on the keypad.
2. The keypad will emit an audible confirmation (e.g., a beep) and the LCD will display the action performed (e.g., "SYSTEM DISARMED").
3. Ensure the card is held steadily over the reader for a brief moment until confirmation is received.

3. Programming User Codes and Cards

Refer to your security system's main control panel manual for detailed instructions on how to add, modify, or delete user codes and proximity cards. This process is typically performed through the keypad's programming menu by an authorized installer or administrator.

MAINTENANCE

1. Cleaning

To clean the keypad, gently wipe the surface with a soft, dry, or slightly damp cloth. Do not use abrasive cleaners, solvents, or spray liquids directly onto the keypad.

2. Regular Checks

Periodically check the keypad for any signs of physical damage or loose connections. Ensure the LCD display is clear and all buttons are responsive.

3. Firmware Updates

Firmware updates, if available, should only be performed by a qualified technician. Consult your security system provider for information on available updates and installation procedures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Keypad LCD is blank	No power, loose connection, or keypad fault.	Check power supply to the control panel. Verify keypad wiring connections. Consult a technician if the issue persists.
Keypad not responding to input	Keypad frozen, communication issue with control panel.	Try power cycling the security system (briefly disconnect and reconnect power). Check data bus wiring.
Proximity card not recognized	Card not enrolled, card damaged, or incorrect reading technique.	Ensure the card is properly enrolled in the system. Try a different enrolled card. Present the card steadily to the reader.
System displays "FAULT" message	Open zone, tamper, or system error.	Check the LCD for specific fault details (e.g., "Zone 3 Open"). Secure any open zones. Consult the control panel manual for error code interpretations.

For complex issues or if troubleshooting steps do not resolve the problem, contact your security system installer or Risco

technical support.

SPECIFICATIONS

Model: RP432KPP000A

Brand: Risco

Type: LCD Keypad with Integrated Proximity Reader

Power Supply: Typically 12V DC (supplied by control panel)

Manufacturer: Risco

Item Quantity: 1

Batteries Required: No

Batteries Included: No

ASIN: B01J3OGOXA

WARRANTY AND SUPPORT

The Risco RP432KPP000A LCD Keypad is covered by a manufacturer's warranty. For specific warranty terms and conditions, please refer to the documentation provided with your security system or contact your authorized Risco dealer. For technical support, installation assistance, or service inquiries, please contact your security system installer or visit the official Risco website for support resources and contact information.

[Visit Risco Official Website](#)