

[Manuals.plus](#) /

› [Smeg](#) /

› Smeg SC106-8 Oven Rack Instruction Manual

Smeg SC106-8

Smeg SC106-8 Oven Rack Instruction Manual

Original Oven Rack for Smeg Ovens and Cookers (460x355 mm)

1. INTRODUCTION

This instruction manual provides essential information for the safe and effective use of your new Smeg SC106-8 original oven rack. Please read this manual thoroughly before installation and use, and retain it for future reference. This rack is designed as a genuine replacement or additional accessory for compatible Smeg ovens and cookers.

2. SAFETY INFORMATION

- Always handle the oven rack with oven mitts or heat-resistant gloves when the oven is hot.
- Ensure the rack is correctly seated on the oven runners before placing items on it.
- Do not overload the oven rack; refer to your oven's main manual for weight limits.
- Keep children away from the oven and hot racks.

3. SETUP AND INSTALLATION

The Smeg SC106-8 oven rack is designed for easy installation into compatible Smeg ovens. No tools are required for this process.

1. **Unpack:** Carefully remove the oven rack from its packaging. Inspect for any signs of damage.
2. **Clean:** Before first use, wash the oven rack with warm soapy water, rinse thoroughly, and dry completely.
3. **Insert:** Open your oven door. Locate the desired rack level runners inside the oven cavity. Slide the oven rack into the runners, ensuring it is fully inserted and stable. The rack should sit level and securely on the supports.



Image 1: The Smeg SC106-8 oven rack, showing its metallic finish and grid structure. This image illustrates the general appearance of the rack before or after installation.

4. OPERATING AND USAGE

The oven rack is used to support cookware, baking sheets, and other items during cooking, baking, or grilling within your Smeg oven.

- **Placement:** Position the rack at the appropriate level for your recipe. For even cooking, avoid placing items too close to the oven walls or heating elements.
- **Loading:** Carefully place food items or cookware onto the rack. Distribute weight evenly to maintain stability.
- **Removal:** When cooking is complete, use oven mitts to carefully slide the rack out partially or remove it entirely to retrieve your food.

5. MAINTENANCE AND CLEANING

- Regular cleaning will prolong the life of your oven rack and ensure hygienic use.
- 1. **Daily Cleaning:** After each use, once the rack has cooled, wipe it down with a damp cloth and mild detergent to remove food residues. Rinse and dry.
 - 2. **Deep Cleaning:** For stubborn baked-on food, soak the rack in hot soapy water for several hours or overnight. Use a non-abrasive brush or sponge to scrub away residue. Avoid harsh chemical cleaners or abrasive pads, as these can damage the finish.
 - 3. **Storage:** Store the rack inside the oven or in a clean, dry place when not in use.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Rack does not slide smoothly.	Food debris or grease buildup on runners or rack.	Clean the oven runners and the rack thoroughly. Ensure no obstructions are present.
Rack appears discolored or stained.	Baked-on food or high heat exposure.	Perform a deep clean as described in Section 5. Some discoloration over time is normal.

7. SPECIFICATIONS

Model:	SC106-8
Brand:	Smeg
Dimensions:	460 x 355 mm
Material:	Steel
Color:	Silver/Grey
Manufacturer Part Number:	I561
ASIN:	B01J5KXLGU

8. WARRANTY AND SUPPORT

This Smeg original oven rack is manufactured to high-quality standards. For specific warranty information, please refer to the documentation provided with your original Smeg oven or contact Smeg customer support directly. Keep your purchase receipt as proof of purchase.

For further assistance or inquiries, please visit the official Smeg website or contact their authorized service centers.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B01J5KXLGU>

More documents and user manuals: <https://manuals.plus/>