

[Manuals.plus](#) /

> [VINABTY](#) /

> VINABTY BN59-01041A Replacement Remote Control for Samsung HDTVs Instruction Manual

VINABTY BN59-01041A

VINABTY BN59-01041A Replacement Remote Control for Samsung HDTVs

User Instruction Manual

1. INTRODUCTION

This manual provides instructions for the VINABTY BN59-01041A replacement remote control, designed for use with various Samsung HDTV models. This remote offers direct functionality without the need for complex programming.





Figure 1: Front view of the BN59-01041A Remote Control

The remote control is a direct replacement for the original Samsung BN59-01041A remote, ensuring compatibility with a wide range of Samsung HDTV models including, but not limited to, UN40C5000QF, LN32C550J1F, LN37C550J1F, LN40C610N1F, LN40C630K1F, LN60C630K1FXZA, PL50C550, PL50C550G1F, LN46D630M3FXZA, and LN46D630M3FXZC.

2. SETUP

2.1 Battery Installation

The remote control requires two (2) AAA batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the latch and slide the battery cover off.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.





Figure 2: Battery Compartment

2.2 Initial Use

No programming is required for this replacement remote control. Once batteries are correctly installed, the remote is ready for immediate use with compatible Samsung HDTV models.

3. OPERATING INSTRUCTIONS

This section outlines the primary functions of the buttons on your remote control.



Figure 3: Remote Control Button Layout

- **POWER (Red Button):** Turns the TV on or off.

- **ON/OFF (Orange Button):** Controls the TV's power state.
- **SOURCE:** Selects the input source (e.g., HDMI, AV, Component).
- **Number Buttons (0-9):** Directly selects TV channels.
- **PRE-CH:** Returns to the previous channel.
- **VOL (+/-):** Adjusts the volume level.
- **MUTE:** Mutes or unmutes the TV sound.
- **CH (Up/Down):** Changes TV channels sequentially.
- **CH LIST:** Displays the channel list.
- **MENU:** Opens the TV's main menu.
- **FAV.CH:** Accesses favorite channels.
- **TOOLS:** Provides quick access to common functions or settings.
- **INFO:** Displays information about the current program or input.
- **Directional Pad (Up/Down/Left/Right) & ENTER:** Navigates through menus and confirms selections.
- **RETURN:** Returns to the previous menu or screen.
- **EXIT:** Exits the current menu or function.
- **Color Buttons (A, B, C, D):** Used for specific functions within certain TV menus or applications.
- **S.MODE (Sound Mode):** Selects different sound modes.
- **SLEEP:** Sets the sleep timer.
- **MTS (Multi-channel Television Sound):** Selects audio tracks.
- **P.MODE (Picture Mode):** Selects different picture modes.
- **P.SIZE (Picture Size):** Adjusts the picture aspect ratio.
- **CC (Closed Caption):** Toggles closed captions on or off.
- **Media Playback Controls (Rewind, Play/Pause, Fast Forward, Stop):** Controls media playback functions.

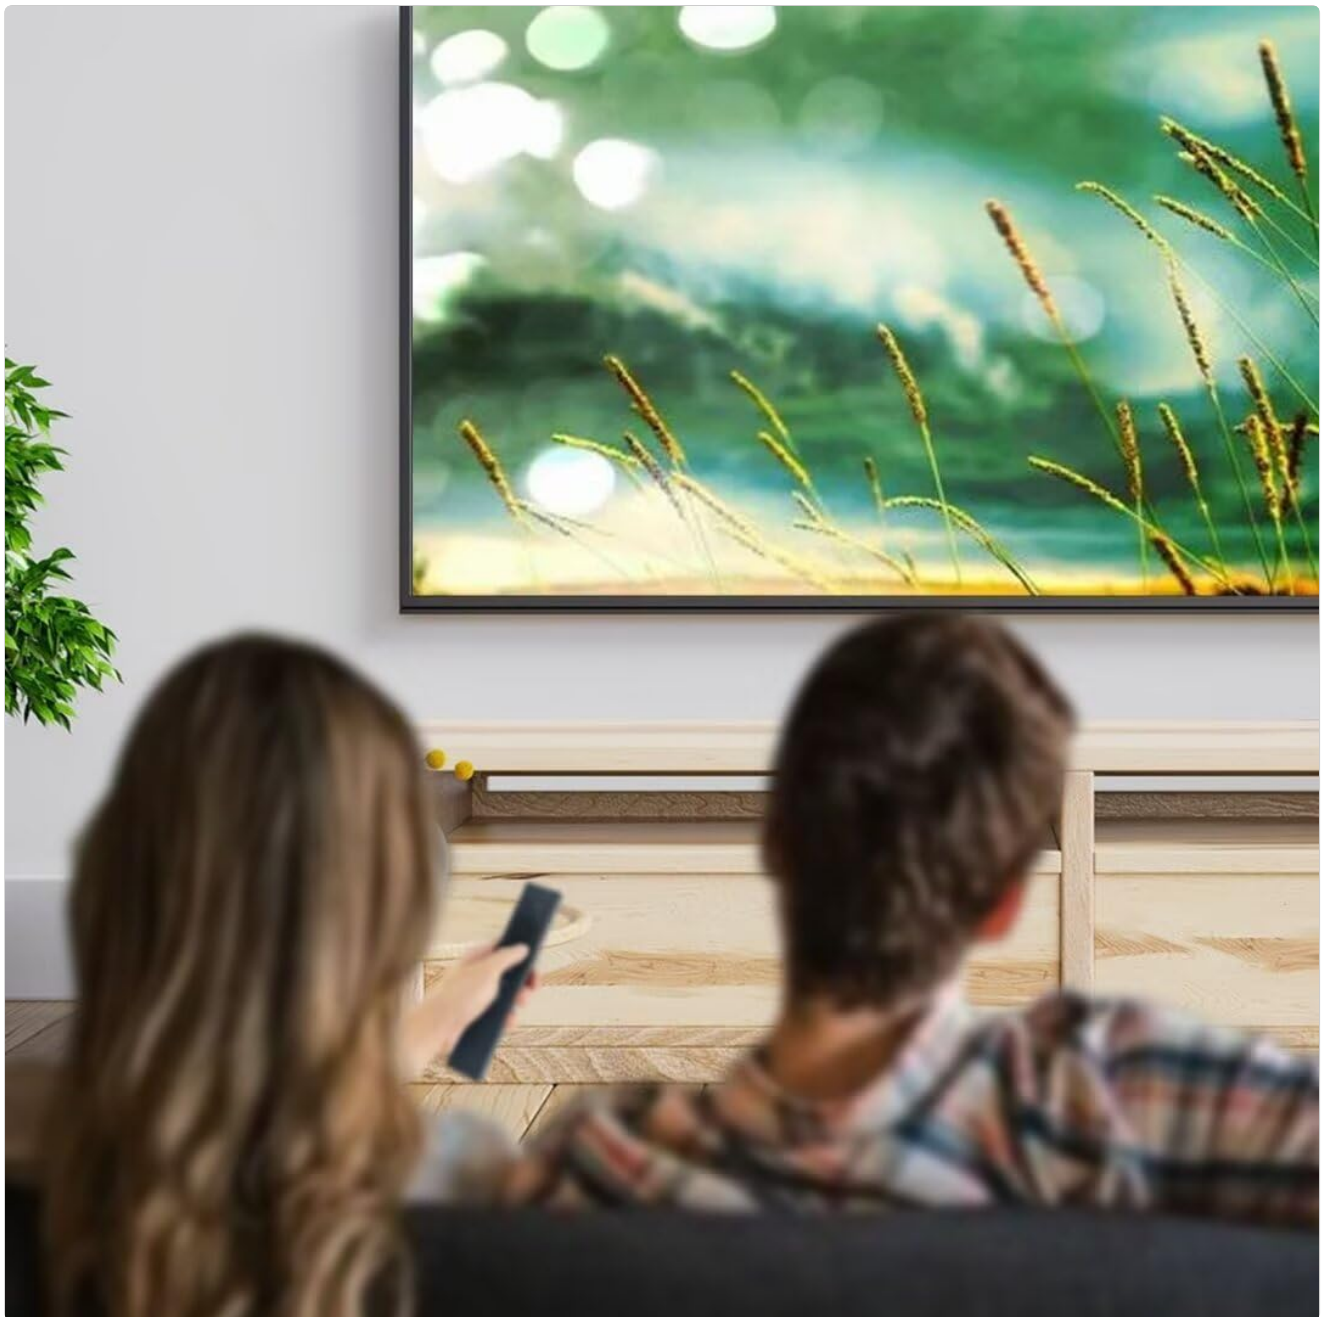


Figure 4: Remote Control in Use

4. MAINTENANCE

4.1 Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote's surface or internal components.

4.2 Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries or different types of batteries.

4.3 Storage

Store the remote control in a dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, it is recommended to remove the batteries to prevent leakage.

5. TROUBLESHOOTING

- **Remote not responding:**
 - Ensure the batteries are installed correctly with the correct polarity.
 - Replace old batteries with new ones.
 - Ensure there are no obstructions between the remote control and the TV's infrared sensor.
 - Make sure you are within the effective range of the TV's sensor.
- **Specific buttons not working:**
 - Check for any debris or stickiness around the button. Gently clean if necessary.
 - If only a few buttons are unresponsive after checking batteries, the remote may be faulty and require replacement.

6. SPECIFICATIONS

Feature	Specification
Model Number	BN59-01041A
Brand	VINABTY
Compatible Devices	Samsung HDTVs
Power Source	2 x AAA Batteries (not included)
Product Dimensions	9 x 2 x 1 inches (approximately 22.86 x 5.08 x 2.54 cm)
Item Weight	1.76 ounces (approximately 50 grams)
Color	Black

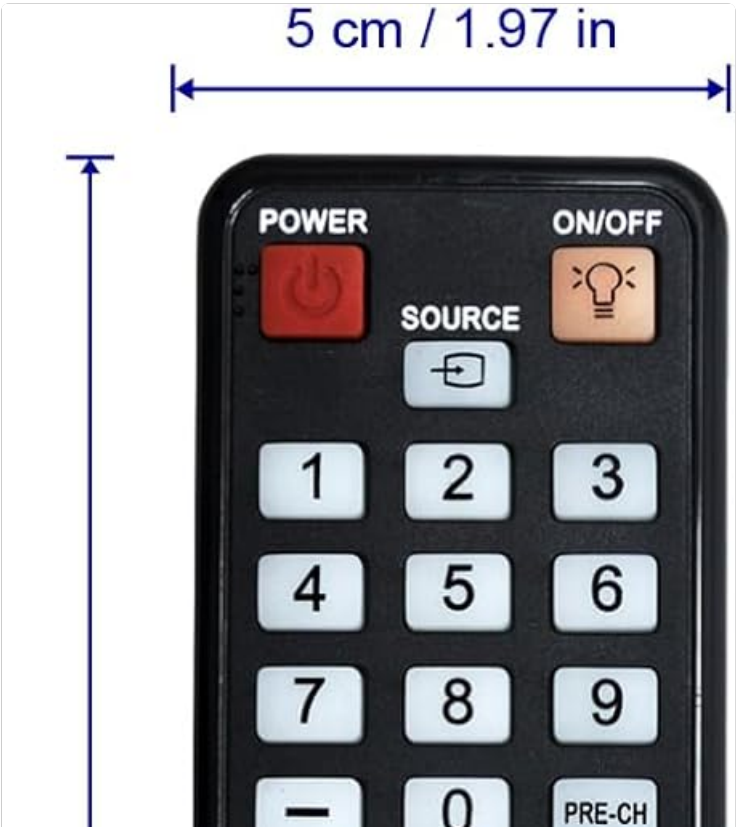




Figure 5: Remote Control Dimensions

7. WARRANTY AND SUPPORT

For any issues, questions, or support regarding your VINABTY BN59-01041A remote control, please contact the seller or manufacturer directly through your purchase platform. Please refer to your purchase documentation for specific warranty details, as these may vary.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

Where is the Home key located on the VINABTY BN59-01041A replacement remote control for Samsung TVs?

The VINABTY BN59-01041A remote control does not have a dedicated button labeled "Home." This remote is a replacement for older Samsung HDTV models that primarily use a traditional menu system rather than a modern...

[Read full answer](#)

Open the live page

<https://manuals.plus/asin/B01J7PY9VE>

More documents and user manuals: <https://manuals.plus/>