

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Nespresso](#) /

> [Nespresso Aeroccino4 Milk Frother \(Model 4192-US\) Instruction Manual](#)

## Nespresso 4192-US

# Nespresso Aeroccino4 Milk Frother (Model 4192-US)

Instruction Manual

## PRODUCT OVERVIEW

The Nespresso Aeroccino4 is a versatile and convenient milk frother designed to prepare various coffee and milk recipes. It features a single whisk for all preparations, allowing for two types of hot foam, hot milk, and cold foam. Its design prioritizes ease of use and cleaning, including dishwasher-safe components.



Figure 1: Nespresso Aeroccino4 Milk Frother with its power base.

## SETUP

- Unpacking:** Carefully remove all components from the packaging. Ensure all parts, including the frother jug, lid, whisk, and power base, are present.
- Initial Cleaning:** Before first use, wash the frother jug, lid, and whisk with warm water and a mild detergent. Rinse thoroughly and dry completely. The power base should only be wiped with a damp

cloth.

3. **Whisk Placement:** Place the whisk securely onto the small pin at the bottom center of the frother jug. The whisk is magnetic and should snap into place.
4. **Power Connection:** Place the frother jug onto the power base. Connect the power base to a suitable electrical outlet.

## OPERATING INSTRUCTIONS

---

The Aeroccino4 offers four distinct preparation options, easily selected via the illuminated buttons on the power base.

1. **Fill with Milk:** Pour fresh, cold milk into the frother jug. Observe the internal fill lines for minimum and maximum levels. Do not exceed the maximum fill line to prevent overflow.
2. **Select Program:** Place the lid on the frother jug. Press one of the four buttons on the power base to select your desired milk preparation:
  - **Cold Foam (Blue button):** For cold milk froth, ideal for iced coffee recipes.
  - **Hot Milk (Red button, left):** For hot milk with minimal froth, suitable for lattes.
  - **Light Hot Foam (Red button, middle):** For hot milk with a light, airy foam, perfect for cappuccinos.
  - **Dense Hot Foam (Red button, right):** For rich, dense hot foam, ideal for macchiatos.
3. **Start Frothing:** The selected button will illuminate, and the frothing process will begin automatically. The whisk will rotate, and the milk will be heated (if a hot option is selected).
4. **Completion:** The frother will automatically stop when the program is complete, and the light will turn off.
5. **Serve:** Carefully remove the frother jug from the base and pour the frothed milk into your cup.

## MAINTENANCE AND CLEANING

---

Regular cleaning ensures optimal performance and longevity of your Aeroccino4.

- **Immediate Cleaning:** After each use, rinse the frother jug and whisk with lukewarm water immediately. This prevents milk residue from drying and sticking, which can affect performance.
- **Dishwasher Safe:** The frother jug and whisk are dishwasher safe. For thorough cleaning, separate the whisk from the jug before placing them in the dishwasher.
- **Hand Washing:** If hand washing, use a soft sponge and mild detergent. Avoid abrasive materials or metal sponges that could damage the non-stick coating inside the jug. Do not use metal spoons inside the jug as the coating is a fluoropolymer (Teflon-like) and can be scratched.
- **Power Base:** The power base should never be immersed in water. Wipe it clean with a damp cloth only.
- **Drying:** Ensure all parts are completely dry before reassembling or storing the frother.

## TROUBLESHOOTING

---

- **Frother Not Starting/Flashing Lights:** If the frother's lights are flashing and it's not operating, this often indicates dried milk residue. Ensure the frother jug and whisk are thoroughly cleaned, especially the bottom and the whisk's pin. Dry all components completely before attempting to use it again.
- **Insufficient Froth:** Ensure you are using fresh, cold milk and not exceeding the maximum fill line. Different types of milk (e.g., skim, whole, plant-based) may produce varying amounts and textures of foam. Lactose-free regular milk has been noted to produce consistent froth.

- **Milk Not Heating:** Verify that the frother is correctly placed on the power base and that the power base is securely plugged into a working outlet. If using a hot frothing option, ensure the corresponding red button is selected.

## SPECIFICATIONS



Figure 2: Nespresso Aeroccino4 Milk Frother dimensions.

Feature	Detail
Brand	Nespresso
Model Number	4192-US
Color	Chrome
Material	Nonstick
Product Dimensions	7.08"W x 8.26"H
Capacity	8.2 ounces
Power Source	Corded Electric
Special Feature	Dishwasher Safe
Item Weight	2.25 pounds

## OFFICIAL PRODUCT VIDEOS

No official seller videos are available for this product at this time.

## **WARRANTY AND SUPPORT**

---

For detailed warranty information and customer support, please refer to the documentation included with your product or visit the official Nespresso website. Specific warranty terms may vary by region and purchase date.