

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Barbie](#) /
- › [Barbie Ballet Instructor Doll Playset \(Model DXC93\) Instruction Manual](#)

Barbie DXC93

Barbie Ballet Instructor Doll Playset

INSTRUCTION MANUAL - MODEL DXC93

Introduction

This manual provides instructions for the assembly, operation, and care of your Barbie Ballet Instructor Doll Playset, Model DXC93. This playset is designed to inspire imaginative play, allowing children to create their own ballet stories with Barbie as the instructor and a student ballerina.

Safety Information

- **WARNING: CHOKING HAZARD** - Small parts. Not for children under 3 years.
- Recommended for ages 36 months to 6 years.
- Adult supervision is recommended during play.

Package Contents

The Barbie Ballet Instructor Doll Playset includes the following items:

- 1 Barbie Ballet Instructor Doll (wearing dance outfit and accessories)
- 1 Student Ballerina Doll (wearing fashion and accessories)
- 1 Working Ballet Stage Set
- 1 Water Bottle Accessory
- 1 Pink Dance Bag Accessory
- Additional themed accessories for play

Setup Instructions

1. **Unboxing:** Carefully remove all components from the packaging. Ensure all small accessories are accounted for.
2. **Stage Placement:** Place the working ballet stage set on a flat, stable surface.
3. **Student Doll Positioning:** Locate the clear clip on the ballet stage. Gently attach the student

ballerina doll's leg into this clip. Ensure the doll is securely fastened but can still pivot freely.

4. **Accessory Arrangement:** Arrange the water bottle, dance bag, and other accessories around the stage to create a ballet studio environment.



Image: The student ballerina doll is shown with her leg attached to the clear clip on the ballet stage, ready for movement.

Operating Instructions

1. **Initiating Dance Movement:** Once the student doll is clipped to the stage, locate the lever mechanism on the stage.
2. **Activating Movement:** Move the lever to observe the student doll sliding and spinning across the stage, simulating ballet movements.
3. **Interactive Play:** Use the Barbie Ballet Instructor doll to guide the student doll, demonstrating

different ballet poses and routines. Utilize the included accessories to enhance storytelling.



Image: A hand demonstrates how to move the lever, causing the student doll to perform a spinning dance motion on the stage.

Official Product Video: Product Overview

Your browser does not support the video tag.

Video: This official product overview video demonstrates the features and play patterns of the Barbie Ballet Instructor Doll Playset, including the student doll's dancing mechanism.

Maintenance and Care

- **Cleaning Dolls:** Wipe dolls with a damp cloth and mild soap if necessary. Avoid harsh chemicals.
- **Hair Care:** Doll hair can be gently brushed. Avoid excessive heat or styling products.
- **Accessory Care:** Keep small accessories in a designated container to prevent loss. Clean with a

damp cloth.

- **Storage:** Store the playset and dolls in a clean, dry place away from direct sunlight when not in use.

Troubleshooting

- **Student doll not moving smoothly:** Ensure the doll's leg is correctly and securely inserted into the stage clip. Check for any obstructions around the moving parts of the stage.
- **Missing parts:** Refer to the 'Package Contents' section. If parts are missing upon initial unboxing, contact the manufacturer's customer support.

Specifications

Product Dimensions	11.97 x 5 x 1.5 inches
Item Weight	12.7 ounces
Item Model Number	DXC93
Manufacturer Recommended Age	36 months - 6 years
Manufacturer	Mattel
Release Date	May 2, 2018

Warranty and Support

For warranty information or customer support regarding your Barbie Ballet Instructor Doll Playset, please refer to the contact information provided on the product packaging or visit the official Mattel website. Keep your proof of purchase for any warranty claims.