

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [SKMEI](#) /
- › [SKMEI SK1172 Kids Digital Analog Waterproof Watch User Manual](#)

SKMEI SK1172

SKMEI SK1172 Kids Digital Analog Waterproof Watch User Manual

Model: SK1172 | Brand: SKMEI

PRODUCT OVERVIEW

The SKMEI SK1172 is a versatile children's watch designed for outdoor sports, featuring both digital and analog time displays. It includes functions such as an alarm, stopwatch, date, and EL backlight. Constructed with durable materials and offering 50M water resistance, this watch is suitable for daily wear and various activities.

CASE MATERIAL: ABS
BAND MATERIAL: Plastic
MOVEMENT: Digital & Analog
BAND WIDTH: 0.94 IN / 2.4 CM
BAND LENGTH: 9.65 IN / 24.5 CM
CASE THICKNESS: 0.63 IN / 1.6 CM
CASE DIAMETER: 1.69 IN / 4.3 CM
MAX PERIMETER: 8.86 IN / 22.5 CM
MIN PERIMETER: 6.02 IN / 15.3 CM
PRODUCT WEIGHT: 1.73 OZ / 49 G
WATCH FACE:
High Transparent Resin Glass



Image: The SKMEI SK1172 watch displayed next to its packaging, with a child wearing a similar watch in the background, illustrating its design and intended use.

WATCH COMPONENTS AND BUTTONS

Familiarize yourself with the watch's buttons and display elements for proper operation.



Image: A detailed diagram highlighting the functions of each button and display area on the SKMEI SK1172 watch. Buttons include LIGHT, MODE, DATE, ALARM, START/STOP, and RESET. Display elements show Week, PM, Time, Second, and Alarm indicators.

- **LIGHT Button:** Activates the EL backlight.
- **MODE Button:** Cycles through different modes (Time, Alarm, Stopwatch, Dual Time).
- **DATE Button:** Displays the current date.
- **ALARM Button:** Used for setting and activating the alarm.
- **START/STOP Button:** Used for starting and stopping the stopwatch.
- **RESET Button:** Used for resetting the stopwatch or adjusting settings.

SETUP INSTRUCTIONS

Setting Digital Time and Date

1. In normal time display mode, press the **MODE** button three times to enter time setting mode. The seconds will flash.
2. Press the **RESET** button to set the seconds to zero.

3. Press the **START/STOP** button to move to the next setting (hours, minutes, month, date, day of week).
4. Use the **RESET** button to adjust the flashing value.
5. Once all settings are complete, press the **MODE** button to return to normal time display.

Setting Analog Time

The analog time is set independently from the digital time. Pull out the crown (small knob on the right side of the watch case) and rotate it to adjust the hour and minute hands. Push the crown back in to start the analog movement.

Important Note: The digital and analog times are set separately and do not automatically synchronize. Ensure both are set correctly.

OPERATING INSTRUCTIONS

EL Backlight Function



Image: Two views of the SKMEI SK1172 watch display, one showing the normal display mode and the other showing the display with the EL backlight activated for improved visibility in low light conditions.

Press the **LIGHT** button (top left) to illuminate the digital display. The backlight will remain active for a few seconds.

Alarm Function

1. From normal time display, press the **MODE** button once to enter Alarm mode.
2. Press the **RESET** button to select the hour or minute to set.
3. Use the **ALARM** button to adjust the flashing value.
4. Press the **MODE** button to confirm and exit Alarm setting mode.
5. To turn the alarm on/off, press the **ALARM** button while in Alarm mode. An alarm icon will appear/disappear.

Stopwatch Function

1. From normal time display, press the **MODE** button twice to enter Stopwatch mode.
2. Press the **START/STOP** button to start the stopwatch.
3. Press the **START/STOP** button again to pause the stopwatch.
4. Press the **RESET** button to reset the stopwatch to zero.
5. Press the **MODE** button to return to normal time display.

Dual Time Display

The watch supports a dual time zone display. To access and set the second time zone:

1. From normal time display, press the **MODE** button three times to enter time setting mode, then press **MODE** again to cycle to the Dual Time setting.
2. Use the **RESET** button to adjust the flashing hour or minute.
3. Press the **START/STOP** button to switch between hour and minute settings.
4. Press the **MODE** button to confirm and exit.

Water Resistance (50M)

5 ATM
WATERPROOF

Outdoor Sports Activities
Party...



LOOK COOL HAVE FUN



Image: The SKMEI SK1172 watch being worn by a child in a swimming pool, illustrating its 50-meter water resistance suitable for swimming and water sports.

This watch is rated for 50 meters (5 ATM) water resistance, making it suitable for daily use, hand washing, showering, and swimming. **DO NOT PRESS ANY BUTTONS UNDERWATER**, as this can compromise the water seal and cause damage. Avoid using the watch in extremely hot or cold water, as temperature fluctuations can affect its seals and lifespan.

MAINTENANCE

- **Cleaning:** Regularly clean the watch strap with a soft, damp cloth to remove dirt and sweat. Avoid harsh chemicals.
- **Water Exposure:** While water-resistant, excessive or prolonged exposure to water, especially hot water, can shorten the watch's lifespan.
- **Temperature:** Avoid exposing the watch to extreme hot or cold temperatures, as this can affect its internal components and battery life.
- **Impact:** The watch is shock-resistant, but severe impacts should be avoided to prevent damage to the case or internal mechanism.



PRECISE TIME KEEPING

Imported IC Chip Set and High Quality Analog Quartz Movement



Image: A close-up view of the SKMEI SK1172 watch, emphasizing its construction from high-transparency resin glass and durable plastic case, indicating its robust design.

TROUBLESHOOTING

- **Digital Display Not Working:** If the digital screen stops working, check the battery. If the issue persists after battery replacement, contact support.
- **Mist or Droplets Inside Watch:** If moisture is observed inside the watch face, immediately contact the manufacturer or seller. Do not attempt to open the watch yourself.
- **Analog and Digital Times Not Synchronized:** This watch features independent analog and digital movements. They must be set separately. Refer to the "Setting Digital Time and Date" and "Setting Analog Time" sections.
- **Buttons Not Responding:** Ensure no buttons are pressed underwater. If buttons become unresponsive, try a soft reset by allowing the battery to drain and then replacing it, or contact support.

SPECIFICATIONS

Brand	SKMEI
Model Number	SK1172
Display Type	Analog-Digital
Movement	Quartz (Analog) and Electronic (Digital)
Case Material	Polycarbonate (PC Material)
Band Material	PU Resin
Crystal Material	Highly Transparent Resin Glass
Water Resistance Depth	50 Meters (5 ATM)
Case Diameter	1.73 inches / 4.4 cm
Case Thickness	0.67 inches / 1.7 cm
Band Width	0.79 inches / 2 cm
Band Length	9.65 inches / 24.5 cm
Item Weight	2.75 oz / 78 g
Power Source	Battery Powered
Additional Features	EL Backlight, Alarm, Stopwatch, Dual Time, Date/Week Display, Shock Resistant

WARRANTY INFORMATION

This product's warranty is provided by the seller of record. For any warranty claims or inquiries, please contact the seller directly through your purchase platform.

CUSTOMER SUPPORT

For further assistance, technical support, or questions not covered in this manual, please reach out to the seller or manufacturer. Refer to your purchase documentation for specific contact details.