

[Manuals.plus](#) /

› [CUCKOO](#) /

› Cuckoo CRP-GHSR1009F Full Stainless 3.0 Classico Smart IH 10 Cup Electric Pressure Rice Cooker User Manual

CUCKOO CRP-GHSR1009F

Cuckoo CRP-GHSR1009F Electric Pressure Rice Cooker User Manual

Model: CRP-GHSR1009F | Brand: CUCKOO

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Cuckoo CRP-GHSR1009F Full Stainless 3.0 Classico Smart IH 10 Cup Electric Pressure Rice Cooker. Please read it thoroughly before first use and retain it for future reference.



Image 1.1: Front view of the Cuckoo CRP-GHSR1009F Electric Pressure Rice Cooker, showcasing its digital display and control panel.

2. SAFETY PRECAUTIONS

To prevent injury or damage, always adhere to the following safety guidelines:

- Ensure the voltage matches your power supply (120V).
- Do not immerse the main unit in water or other liquids.
- Keep out of reach of children.
- Always unplug the cooker when not in use or before cleaning.

- Do not block the steam vent during operation.
- Use only the provided inner pot.

3. PRODUCT COMPONENTS

The Cuckoo CRP-GHSR1009F includes the following main components:

- Main Body with Control Panel and Display
- Inner Pot (Full Stainless ECO Curved Wave)
- Inner Lid (Detachable)
- Steam Vent Cap
- Measuring Cup
- Rice Scoop
- Instruction Manual



Image 3.1: Exploded view showing the inner pot and detachable inner lid of the rice cooker.



Image 3.2: Close-up of the inner pot, highlighting the "Full Stainless ECO Curved Wave" design.

4. SETUP

1. **Unpacking:** Carefully remove all packaging materials and inspect the cooker for any damage.
2. **Initial Cleaning:** Before first use, wash the inner pot, inner lid, measuring cup, and rice scoop with warm, soapy water. Rinse thoroughly and dry. Wipe the exterior of the main unit with a damp cloth.
3. **Placement:** Place the rice cooker on a stable, flat, heat-resistant surface, away from direct sunlight and heat sources. Ensure adequate ventilation around the unit.
4. **Power Connection:** Plug the power cord into a grounded 120V electrical outlet.

5. OPERATING INSTRUCTIONS

5.1 Basic Rice Cooking

1. **Measure Rice:** Use the provided measuring cup to measure the desired amount of rice.
2. **Wash Rice:** Rinse the rice thoroughly until the water runs clear.
3. **Add Water:** Place the washed rice into the inner pot. Add water according to the water level markings inside the inner pot for your specific rice type (e.g., white rice, brown rice).
4. **Place Inner Pot:** Insert the inner pot into the main body of the cooker, ensuring it sits properly.
5. **Close Lid:** Close the top lid securely until it clicks.

6. **Select Menu:** Use the control panel to select the desired cooking function (e.g., "White Rice," "Brown Rice").
7. **Start Cooking:** Press the "Cook" or "Start" button. The cooker will begin the cooking process.
8. **Keep Warm:** Once cooking is complete, the cooker will automatically switch to "Keep Warm" mode.



Image 5.1: Close-up of the digital display and control panel, showing various cooking options and the time display.

5.2 Other Functions

- **Preset/Timer:** Use the "Preset" or "Timer" function to set a delayed cooking start time.
- **Reheat:** The "Reheat" function warms up cold rice.
- **Auto Clean:** Utilize the "Auto Clean" feature for steam sterilization of the inner pot and steam path.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and longevity of your rice cooker.

6.1 Daily Cleaning

- **Inner Pot:** After each use, remove the inner pot and wash it with a soft sponge and mild dish soap. Rinse thoroughly and dry completely.
- **Inner Lid:** Detach the inner lid and wash it with warm, soapy water. Ensure all rice residue is removed.
- **Steam Vent Cap:** Remove and clean the steam vent cap.
- **Exterior:** Wipe the exterior of the cooker with a damp cloth. Do not use abrasive cleaners.

6.2 Auto Clean Function

The "Auto Clean" function uses steam to sterilize the inner pot and steam path. Refer to the display for instructions on how to activate this feature.



Image 6.1: The rice cooker in operation, showing steam being released from the top vent, indicative of cooking or auto-clean function.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Rice is too hard/dry	Insufficient water; incorrect rice-to-water ratio.	Add more water next time; ensure correct water level for rice type.

Problem	Possible Cause	Solution
Rice is too soft/mushy	Too much water; incorrect rice-to-water ratio.	Reduce water next time; ensure correct water level for rice type.
Cooker does not turn on	Not plugged in; power outage; faulty outlet.	Check power cord connection; check circuit breaker; try another outlet.
Steam leaks from lid	Lid not properly closed; gasket dirty or damaged.	Ensure lid is securely closed; clean or replace lid gasket.

8. SPECIFICATIONS

- **Model:** CRP-GHSR1009F
- **Brand:** CUCKOO
- **Capacity:** 10 Cups (5 quarts)
- **Voltage:** 120V
- **Power/Wattage:** 1300 watts
- **Material:** Stainless Steel
- **Dimensions:** 41.4 x 29.72 x 29.21 cm (16.3 x 11.7 x 11.5 inches)
- **Item Weight:** 9.07 kg (20 lbs)
- **Special Features:** Automatic Keep Warm, IH (Induction Heating)



Image 8.1: Side view of the rice cooker with height dimension (11.5 inches / 29.21 cm) indicated for scale.

9. WARRANTY AND SUPPORT

This product comes with a manufacturer's warranty. For warranty details, technical support, or service inquiries, please refer to the warranty card included with your purchase or visit the official CUCKOO website.

CUCKOO Official Website: www.cuckoocenter.com

Customer Service: Refer to your product packaging or the official website for contact information.

© 2024 CUCKOO. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B01JRTZVJE>

More documents and user manuals: **<https://manuals.plus/>**