

SHARP SMC1585BW

Sharp SMC1585BW 1.5 cu. ft. Microwave Oven with Convection Cooking

User Manual

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Sharp SMC1585BW 1.5 cu. ft. Microwave Oven with Convection Cooking. Please read all instructions carefully before using the appliance and retain this manual for future reference. This appliance combines microwave and convection technologies, offering versatile cooking options.



Image: The Sharp SMC1585BW Microwave Oven, showcasing its white exterior, control panel, and the interior with the door slightly open.

SETUP

Unpacking and Inspection

Carefully remove the microwave oven from its packaging. Inspect the oven for any damage, such as dents or a misaligned door. Do not operate the oven if it is damaged. Retain all packaging materials until you are satisfied with the product.

Placement

Place the oven on a flat, stable surface capable of supporting its weight. Ensure adequate ventilation by leaving at least 4 inches (10 cm) of space around the top, back, and sides of the oven. Do not block any ventilation openings. Avoid placing the oven near heat sources or in direct sunlight.

Electrical Requirements

The oven requires a standard 120V, 60Hz, AC-only electrical outlet with a dedicated 15-amp circuit. Do not use an extension cord. Ensure the electrical outlet is properly grounded.

Turntable Installation

Place the turntable support ring in the center of the oven cavity. Position the ceramic turntable securely on top of the support ring, ensuring it sits properly in the center drive hub.



Image: The interior of the microwave oven, showing the white ceramic turntable and its support ring correctly placed within the cavity.



Image: A diagram illustrating the external dimensions of the Sharp SMC1585BW Microwave Oven, indicating its width, depth, and height for proper placement.

OPERATING INSTRUCTIONS

Control Panel Overview

The control panel features a digital display, numeric keypad, and dedicated function buttons for various cooking modes and settings.



Image: A clear front view of the Sharp SMC1585BW Microwave Oven, focusing on the user interface and control panel.

Basic Microwave Operation

1. **Time Cook:** Enter desired cooking time using the numeric keypad. Press **POWER LEVEL** to adjust power if needed (default is High). Press **START**.
2. **Power Level:** Press **POWER LEVEL** repeatedly to cycle through power settings (P10 to P1).
3. **+30 Sec:** Press to add 30 seconds of cooking time at full power.

Convection Cooking

1. **Preheat:** Press **PREHEAT**, enter desired temperature, then press **START**. The oven will beep when preheated.
2. **Convection Cook:** Press **CONVECT**, enter desired temperature, then cooking time. Press **START**.

Combination Cooking

This oven allows for combined microwave and convection cooking. Refer to the specific recipes or the manual's detailed cooking charts for optimal results.

Auto Defrost

Press **AUTO DEFROST**, select the food category (e.g., meat, poultry, seafood), enter the weight, and press **START**. The oven will automatically calculate defrosting time and power levels.

Auto Cook / Sensor Menu

Utilize the pre-programmed settings for common foods like Popcorn, Potatoes, Frozen Vegetables, and more. Simply select the desired option and quantity, then press **START**.

Setting the Clock

Press the **CLOCK** button, enter the current time using the numeric keypad, and press **CLOCK** again to confirm.

Using the Timer

Press the **TIMER** button, enter the desired time duration, and press **START**. This functions as a kitchen timer and does not activate the oven's cooking functions.

MAINTENANCE

Cleaning the Oven

- **Interior:** Wipe the interior with a damp cloth and mild soap after each use. For stubborn stains, boil a cup of water with a few lemon slices inside the oven for a few minutes to loosen residue, then wipe clean.
- **Exterior:** Clean the exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners.
- **Door and Seal:** Regularly clean the door, door seals, and control panel with a soft, damp cloth to ensure proper sealing and operation.
- **Turntable:** The ceramic turntable and support ring can be washed in warm, soapy water or in the dishwasher. Ensure they are completely dry before placing them back in the oven.

Light Bulb Replacement

The interior light bulb is not user-serviceable. If the light bulb needs replacement, please contact a qualified service technician.

TROUBLESHOOTING

Before contacting service, please check the following common issues and solutions:

Problem	Possible Cause / Solution
Oven does not start.	Check if the power cord is securely plugged in. Ensure the door is firmly closed. Check your household fuse or circuit breaker.
Food is not cooking evenly.	Ensure the turntable is properly seated and rotating. Stir or rotate food halfway through cooking. Use microwave-safe dishes.
Display shows an error code.	Refer to the specific error code section in the full manual (if available) or unplug the oven for 30 seconds and plug it back in to reset.
Oven light is not working.	The light bulb may need replacement by a qualified technician.
Unusual noise during operation.	Ensure the turntable and support are correctly positioned. Remove any foreign objects from the oven cavity.

If the problem persists after attempting these solutions, please contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	SHARP
Model Number	SMC1585BW
Capacity	1.5 Cubic Feet
Microwave Wattage	900 Watts
Oven Cooking Mode	Convection
Color	White
Product Dimensions (D x W x H)	19" x 24.7" x 14.9" (approx.)

Feature	Detail
Item Weight	56.2 pounds
Inner Material Type	Stainless Steel
Special Feature	Auto Defrost

WARRANTY INFORMATION

This Sharp appliance is covered by a limited warranty. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration. Keep your original purchase receipt as proof of purchase for any warranty claims.

SUPPORT

For technical assistance, service, or to order replacement parts, please contact Sharp customer support. You can typically find contact information on the Sharp official website or on your product registration card. When contacting support, please have your model number (SMC1585BW) and serial number ready.

For more information, visit the official Sharp website or refer to the contact details provided in your product packaging.



[Sharp R-C932XVN-BST Microwave Oven User Manual](#)

Comprehensive user manual for the Sharp R-C932XVN-BST microwave oven, covering installation, operation, safety instructions, cooking functions, auto menus, and maintenance.



[Sharp R-1874 / R-1875 Over-the-Range Convection Microwave Oven Operation Manual](#)

This comprehensive operation manual for the Sharp R-1874 and R-1875 Over-the-Range Convection Microwave Oven provides detailed instructions on safety, features, cooking methods, cleaning, maintenance, and specifications. It guides users through manual and automatic cooking modes, sensor functions, and troubleshooting tips.



[Sharp SMC0985KS Microwave Oven Operation Manual](#)

Comprehensive operation manual for the Sharp SMC0985KS Microwave Oven, covering installation, features, controls, safety instructions, care, and cooking guides.



[Sharp R-360 Microwave Oven Operation Manual](#)

This operation manual provides comprehensive guidance for the Sharp R-360 microwave oven, covering installation, safe operation, various cooking functions, maintenance, and troubleshooting tips.



[Sharp R-872 Microwave Oven User Manual](#)

A comprehensive guide to operating and maintaining the Sharp R-872 microwave oven, featuring grill, convection, and microwave functions. Includes safety instructions, cooking tables, and troubleshooting tips.



[Sharp R-28A0\(B\) Microwave Oven Operation Manual and Cooking Guide](#)

Explore the features and functions of the Sharp R-28A0(B) microwave oven with this comprehensive operation manual and cooking guide. Learn about safe operation, installation, and discover detailed cooking charts and tips for preparing a variety of foods.

