

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [bObsweep](#) /

› [bObsweep PetHair Plus Robotic Vacuum Cleaner and Mop - Instruction Manual](#)

**bObsweep WPP56002**

# bObsweep PetHair Plus Robotic Vacuum Cleaner and Mop - Instruction Manual

Model: WPP56002 | Brand: bObsweep

## INTRODUCTION

This instruction manual provides comprehensive guidance for the bObsweep PetHair Plus Robotic Vacuum Cleaner and Mop. It covers essential information regarding product setup, operating procedures, routine maintenance, troubleshooting common issues, and detailed product specifications. Please read this manual thoroughly to ensure safe and efficient use of your device.

## WHAT'S IN THE BOX

Upon unboxing your bObsweep PetHair Plus, verify that all the following components are included:

- bObsweep PetHair Plus Robotic Vacuum Cleaner and Mop
- Charging Adapter
- Charging Station
- Remote Control
- bLock Plus (Virtual Wall)
- Battery (pre-installed or separate)
- Extra Side Brushes
- Extra Filter
- Cleaning Tool
- Mop Cloths



Image: All components of the bObsweep PetHair Plus robotic vacuum cleaner and mop laid out for inspection.

Video: An overview of the bObsweep PetHair Plus, demonstrating its features and components.

## SETUP

Follow these steps for the initial setup of your bObsweep PetHair Plus:

1. **Choose a Location for the Charging Station:** Place the charging station against a wall in an open area, ensuring there are no obstacles within 1.2 meters (3.9 ft) in front and 0.4 meters (1.3 ft) to the sides. Ensure good Wi-Fi coverage in the area.
2. **Connect the Charging Station:** Plug the charging adapter into the charging station and then into a power outlet. Ensure the cable is neatly tucked away to prevent entanglement.
3. **Initial Charge:** Place the bObsweep onto the charging station. The robot will begin charging automatically. Allow it to fully charge before its first use.
4. **Install Side Brushes:** Gently push the side brushes onto their designated posts on the underside of the robot until they click into place.
5. **Prepare for Cleaning:** Remove any clutter, loose cables, or small objects from the floor that could obstruct the robot's path.



Image: Initial placement of the bObsweep PetHair Plus on its charging dock.

## OPERATING INSTRUCTIONS

Your bObsweep PetHair Plus offers various cleaning modes to suit different needs:

- **Deep Clean:** For thorough cleaning of an entire area.
- **Quick Clean (30 min):** A faster cleaning cycle for light messes.
- **Touch Up (15 min):** Ideal for small areas requiring quick attention.
- **Waffle Track:** Cleans in a grid pattern.
- **Spiral Track:** Cleans in an expanding spiral pattern.
- **Wall Track:** Focuses on cleaning along walls and edges.

You can select cleaning modes using the control panel on the robot or the included remote control. The bObsweep can navigate various floor types, including tile, carpet, and hardwood, and can effectively clean around furniture and obstacles.



Image: The bObsweep PetHair Plus actively cleaning a hardwood floor in a home environment.



Image: The bObsweep PetHair Plus cleaning near a bOck Plus virtual wall device, which creates invisible barriers.

## MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your bObsweep PetHair Plus:

1. **Empty the Dustbin:** The dustbin should be emptied after each cleaning cycle, especially when dealing with pet hair. Press the release button to remove the dustbin and dispose of its contents.
2. **Clean the Filter:** The 3-layer filter should be cleaned regularly. Remove the filter from the dustbin and tap it to dislodge debris. Replace the filter as needed (extra filters are provided).
3. **Clean Main Brush and Side Brushes:** Periodically remove the main brush and side brushes to clear any tangled hair or debris. Use the provided cleaning tool for this task.
4. **Clean Sensors and Wheels:** Wipe the ground-detecting sensors and bumper with a clean, damp cloth. Check the front wheel and main wheels for any trapped debris and ensure they can move freely.



Image: The underside of the bObsweep PetHair Plus, showing the main brush, side brushes, and wheels for maintenance.

## TROUBLESHOOTING

If your bObsweep encounters an issue, the display panel will often provide an indication. Here are some common issues and solutions:

- **Robot Not Moving:** Check if the battery is charged. Ensure no obstacles are blocking the wheels or brushes.
- **Error Message on Display:** The display panel will show specific error codes or messages. Refer to the