

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Simple Houseware](#) /
- › [Simple Houseware Heavy-Duty 3-Bag Laundry Sorter Cart \(Chrome\) - Instruction Manual](#)

Simple Houseware BO-011-1

Simple Houseware Heavy-Duty 3-Bag Laundry Sorter Cart

Model: BO-011-1

INTRODUCTION

This manual provides instructions for the assembly, operation, and maintenance of your Simple Houseware Heavy-Duty 3-Bag Laundry Sorter Cart. Please read these instructions carefully before assembly and use to ensure proper function and longevity of the product.

PRODUCT FEATURES

- **Sturdy Frame:** Durable chrome-finished alloy steel with six horizontal bars for enhanced stability.
- **Durable Bags:** Three heavy-duty grey bags, each holding 13 gallons of clothes. Bags are easy to clean and feature sturdy steel handles for convenient removal.
- **Heavy-Duty Casters:** Equipped with four casters for smooth rolling, two of which include brakes to secure the cart in place.
- **Easy Organization:** Multiple bags allow for efficient sorting of laundry by color, fabric type, or user.

PACKAGE CONTENTS

Before beginning assembly, ensure all parts are present and undamaged. Refer to the diagram below for component identification.

- Chrome-finished Alloy Steel Frame components
- 3 x Heavy-Duty Laundry Bags (Grey)
- 4 x Heavy-Duty Casters (2 with brakes)
- Assembly Hardware (screws, wrench)

SETUP AND ASSEMBLY INSTRUCTIONS

Assembly is required for this laundry sorter cart. Please follow these general steps. A Phillips head screwdriver may be helpful (not included).

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, flat surface. Verify all components listed in the "Package Contents" section are present.
2. **Assemble Frame:** Connect the frame components using the provided hardware. Ensure all connections are secure. The frame is designed to be sturdy once fully assembled.
3. **Attach Casters:** Securely attach the four casters to the bottom of the frame. Two casters include locking brakes;

position these where desired for easy access. Use the provided wrench to tighten.

4. **Install Laundry Bags:** Hang the three heavy-duty laundry bags onto the designated hooks on the top bars of the frame. Ensure the handles are properly seated.



Image: Overall dimensions of the laundry sorter cart.

OPERATING INSTRUCTIONS

Using your Simple Houseware Laundry Sorter Cart is straightforward:


1. **Sorting Laundry:** Utilize the three separate bags to sort laundry as needed (e.g., lights, darks, delicates, towels, or by family member).
2. **Moving the Cart:** To move the cart, release the brakes on the casters (if engaged). Push or pull the cart by the top handles. The heavy-duty casters allow for smooth movement across various floor types.
3. **Securing the Cart:** To keep the cart stationary, engage the brakes on the two designated casters.
4. **Removing Laundry Bags:** Each bag can be easily lifted off the frame using its integrated handles. This allows for convenient transport of sorted laundry directly to the washing machine.



Image: Detail of casters with brakes and bag handles.

MAINTENANCE

- **Cleaning Bags:** The heavy-duty polyester bags are easy to clean. They can be wiped down with a damp cloth or removed from the frame for more thorough cleaning.
- **Frame Care:** Wipe the chrome-finished alloy steel frame with a soft, damp cloth as needed to maintain its appearance. Avoid abrasive cleaners.
- **Caster Maintenance:** Periodically check the casters for any lint or debris that may hinder smooth rolling. Clean as necessary.

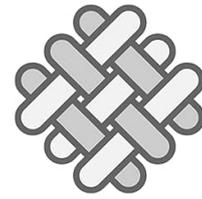

Heavy Duty 600D Polyester Fabric



Waterproof and Easy Clean



Image: Illustration of the easy-to-clean, waterproof fabric.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Cart is wobbly or unstable.	Loose connections in the frame.	Check all screws and connections. Tighten any loose hardware. Ensure all frame pieces are fully inserted and secured.
Casters do not roll smoothly.	Debris caught in wheels or brakes engaged.	Ensure brakes are disengaged. Clear any lint, hair, or debris from the caster wheels. Lubricate if necessary.
Laundry bags do not stay in place.	Bags improperly hooked onto the frame.	Verify that the bag handles are securely hooked over the top bars of the frame.

SPECIFICATIONS

Feature	Detail
Model Number	BO-011-1

Feature	Detail
Brand	Simple Houseware
Frame Material	Alloy Steel (Chrome Finish)
Bag Material	Heavy Duty 600D Polyester Fabric
Frame Dimensions (D x W x H)	17.5" x 30.5" x 33"
Individual Bag Dimensions (D x W x H)	8.5" x 15.5" x 23"
Bag Capacity	13 Gallons per bag
Item Weight	9.99 Pounds
Caster Type	4 Swivel Casters (2 with brakes)
Assembly Required	Yes

WARRANTY AND SUPPORT

For warranty information or product support, please contact Simple Houseware customer service through their official website or the retailer where the product was purchased. Keep your purchase receipt for any warranty claims.