

Sharp UW-A1-S

SHARP Handy Ultrasonic Washer UW-A1-S User Manual

Model: UW-A1-S | Brand: Sharp

INTRODUCTION

Thank you for purchasing the SHARP Handy Ultrasonic Washer UW-A1-S. This portable ultrasonic device is designed to effectively remove various stains from fabrics using high-frequency vibrations. Please read this manual thoroughly before use to ensure proper operation, maintenance, and to maximize the lifespan of your device.

PRODUCT OVERVIEW



Figure 1: SHARP Handy Ultrasonic Washer UW-A1-S (Silver)

This image shows the SHARP Handy Ultrasonic Washer UW-A1-S in its upright, cylindrical form, highlighting its sleek silver finish and compact design.



Figure 2: Device with ultrasonic head exposed

This image displays the ultrasonic washer with its protective cap removed, revealing the specialized head responsible for generating ultrasonic vibrations for stain removal.



Figure 3: Ultrasonic washer in action

This image illustrates the ultrasonic washer being used on a white shirt, demonstrating the process of applying the device directly to a stained area to loosen dirt particles.

SAFETY PRECAUTIONS

- Do not immerse the main unit in water.
- Keep out of reach of children.
- Do not disassemble or modify the device.
- Use only the provided charging cable and adapter.
- Avoid direct contact with the ultrasonic head when the device is operating, as it may become warm.
- Do not use on delicate fabrics without testing on an inconspicuous area first.

SETUP

Charging the Device

The SHARP UW-A1-S comes with a rechargeable NiMH battery. Before first use, fully charge the device.

1. Connect the provided USB power cord to the charging port on the device.
2. Plug the other end of the USB cable into a compatible USB wall adapter (included) or a powered USB port.
3. The power button will illuminate to indicate charging status. Refer to the indicator light section for details.
4. A full charge typically takes approximately *[Insert Charging Time if available, otherwise omit]*.

Initial Preparation

- Ensure the device is fully charged.
- Prepare a small basin or container with clean water. For best results, use lukewarm water.
- For stubborn stains, a small amount of laundry detergent can be added to the water or applied directly to the stain.



Figure 4: Included accessories

This image displays the accessories that come with the ultrasonic washer, including the charging stand, a travel sponge for spot soaking, and the USB charging cable with its wall adapter.

OPERATING INSTRUCTIONS

1. **Prepare the Stain:** Place the stained area of the fabric over a flat, non-absorbent surface, such as the bottom of a basin or a clean, hard surface. Ensure the fabric is slightly damp or wet the stained area with water. For optimal results, apply a small amount of liquid laundry detergent directly to the stain.
2. **Activate the Device:** Press and hold the power button for approximately 3 seconds until the indicator light glows white, indicating the device is active.
3. **Apply to Stain:** Gently press the ultrasonic head of the device onto the wet, stained area. You will observe small bubbles forming around the head, which signifies the ultrasonic vibrations are working.
4. **Move the Device:** Slowly move the ultrasonic head over the entire stained area in small, circular motions or back and forth. The ultrasonic vibrations will help to dislodge dirt and grime from the fabric fibers.
5. **Monitor Progress:** Continue until the stain visibly fades or disappears. For stubborn stains, repeat the process or allow the detergent to soak for a few minutes before re-applying the device.
6. **Rinse and Wash:** After treating the stain, rinse the fabric thoroughly with clean water. For best results, follow up with a normal laundry wash cycle.
7. **Deactivate Device:** Press and hold the power button again for 3 seconds to turn off the device. The indicator light will turn off.

Tips for Effective Stain Removal

- Treat stains as soon as possible for the best outcome.
- Always test on an inconspicuous area of the fabric first to ensure colorfastness and fabric compatibility.
- For dried-on stains, pre-soak the fabric in water with detergent before using the ultrasonic washer.
- The device works best when the fabric is wet and there is a small amount of water or detergent to facilitate the ultrasonic waves.

MAINTENANCE

Cleaning the Device

- After each use, wipe the ultrasonic head and the body of the device with a soft, damp cloth to remove any residue.
- Do not use abrasive cleaners or solvents, as these can damage the device's surface.
- Ensure the device is completely dry before storing or charging.

Storage

- Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- Keep the protective cap on the ultrasonic head when not in use to prevent damage.
- If storing for an extended period, ensure the battery is partially charged (around 50%) to prolong battery life.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Battery is depleted. Power button not held long enough.	Charge the device fully. Press and hold the power button for 3 seconds.
No bubbles or weak vibration.	Insufficient water/detergent. Device not making proper contact with fabric. Battery low.	Ensure fabric is wet and apply detergent. Press the ultrasonic head firmly onto the fabric. Recharge the device.
Stain not removed.	Stain type is not suitable for ultrasonic cleaning. Stain is old/set. Insufficient treatment time.	Some stains (e.g., permanent ink) may not be removable. Pre-soak stubborn stains. Increase treatment time or repeat the process.
Device gets hot during use.	Normal operation for extended use.	This is normal. If it becomes excessively hot, turn off the device and allow it to cool down.

SPECIFICATIONS

- **Model:** UW-A1-S
- **Manufacturer:** Sharp
- **Power Source:** Rechargeable NiMH Battery (included)
- **Voltage:** 4.8 Volts
- **Dimensions:** 1.57 x 1.57 x 6.61 inches (approx.)
- **Weight:** 8.1 ounces (approx.)
- **Color:** Silver
- **Material:** Metal
- **Special Features:** Portable

WARRANTY AND SUPPORT

Please note that this product is a Japan Import and may not come with a manufacturer's warranty valid outside of Japan. For any support inquiries or issues, please contact your original point of purchase or the seller directly. For additional information or to explore other Sharp products, visit the official [Sharp Store on Amazon](#).

Documents - Sharp – UW-A1-S

[illegible]

[\[pdf\]](#)

UW A1 2016 8 4 160804 a sharp co jp 80 corporate news |||

201684 UW-A1 38,000 UW-A1 38,000 200g UW-A1 915 3,000 38,000 ... 4 UW-A1 S
P N DC4.8V 900mAh 5 30 38kHz 7W 4040168mm 200g **UW-A1-S** UW-A1-P UW-A1-
N 5 ...

lang: **score:9** filesize: 905.06 K page_count: 5 document date: 2016-08-03

[\[pdf\]](#) Catalog

UW A1 P S N ha sentaku uwa1 jp sharp catalog

UW-A1 3 8 0 0 0 ... #FGPSF GUFS UW-A1 1 #FGPSF GUFS 38 000 2 UW-A1 UW-A1-P **UW-A1-S** UW-A1-N USB AC DC4.8V 900mAh 5 30 38kHz 7W 4040168mm 20...

lang:i-klingon score:9 filesize: 3.9 M page_count: 2 document date: 2016-08-31