

[Manuals.plus](#) /

› [BLACK+DECKER](#) /

› BLACK+DECKER Electric Carving Knife User Manual

BLACK+DECKER EK500B

BLACK+DECKER Electric Carving Knife User Manual

Model: EK500B | Brand: BLACK+DECKER

PRODUCT OVERVIEW

The BLACK+DECKER Electric Carving Knife (Model EK500B) is designed to simplify the carving of various foods, including meats, breads, and even foam for craft uses. It features durable stainless steel serrated blades, an ergonomic comfort grip handle, and convenient quick-release, dishwasher-safe parts for easy cleaning. A built-in safety lock button ensures safe operation.



Image: The BLACK+DECKER Electric Carving Knife, showcasing its sleek black handle and stainless steel serrated blades.

COMPONENTS

Your BLACK+DECKER Electric Carving Knife package includes the following:

- Electric Carving Knife Handle
- Stainless Steel Serrated Blades (set of two)
- Blade Cover



**INCLUDES HANDLE, BLADES,
AND BLADE COVER**


Image: All included components: the main handle unit, the detachable stainless steel blades, and a protective blade cover.

SETUP AND ASSEMBLY


Follow these steps to properly set up your electric carving knife:

1. **Insert Blades:** Slip the rivet at the top of one blade into the keyhole slot on the other blade. Hold the non-slip tabs and slide both blades into the knife base until they click into place.
2. **Plug In:** Plug the power cord into a standard electrical outlet.
3. **Engage Safety Lock:** With the serrated edges down, press the right side of the safety lock pin to unlock the knife for operation.


HOW TO USE

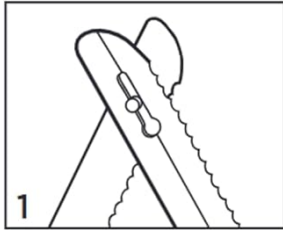


1 Slip the rivet at the top of one blade into the keyhole slot on the other.

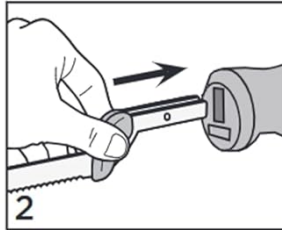


2 Holding the non-slip tabs, with the serrated blades edges down and away from you, slide blades into the knife base slots until both blades click into place.

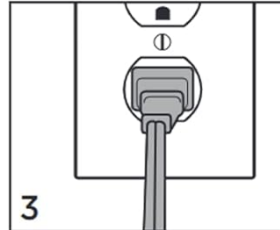

3 Plug power cord into outlet.

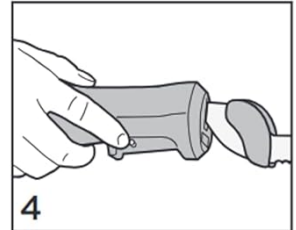

4 With the serrated edges down, press the right side of the safety lock pin so that it extends towards Unlock.

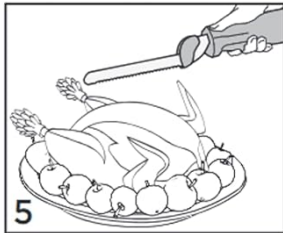

5 Squeeze the operating trigger to turn the unit on. Guide the knife blades down through the food.

NOTES:

- When the safety lock pin is in the Lock position, the operating trigger cannot be pressed inward, and will not operate, even when the knife is plugged in.
- Use a carving fork to hold the food.
- Use an even downward motion and don't saw at the food. The blades are designed to slide back and forth for cutting. Let them do the work for you.

CAUTION:

- Make sure the knife is unplugged and the safety lock pin is in the Lock position before inserting or removing blades.
- Never place your hands close to or over the blade to support it while operating the knife.

SAVE THESE INSTRUCTIONS.

This product is for household use only.

POLARIZED PLUG (120V models only)

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

TAMPER-RESISTANT SCREW

Warning: This appliance is equipped with a tamper-resistant screw to prevent removal of the outer cover. To reduce the risk of fire or electric shock, do not attempt to remove the outer cover. There are no user-serviceable parts inside. Repair should be done only by authorized service personnel.

ELECTRICAL CORD

- a) A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
- b) Extension cords are available and may be used if care is exercised in their use.
- c) If an extension cord is used:
 - 1) The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance; and
 - 2) The cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over.

Note: If the power cord is damaged, please contact the warranty department listed in these instructions.

Image: A visual guide demonstrating the assembly of the blades and the proper way to hold and operate the knife.

Important Notes:

- When the safety lock pin is in the locked position, the operating trigger cannot be pressed.
- Use a carving fork to hold the food securely while carving.
- Use an even downward motion and do not saw at the food. The blades are designed to slide back and forth for cutting.
- Never place your hands close to or over the blade to support it while operating the knife.

OPERATING INSTRUCTIONS

Once assembled and plugged in, the electric carving knife is ready for use. The intuitive trigger mechanism allows for easy control.

- **Activation:** Squeeze the operating trigger to turn the unit on. The blades will begin to oscillate rapidly.
- **Carving:** Guide the knife blades down through the food with a steady, even motion. The serrated blades are designed to cut rapidly and evenly through various materials.
- **Deactivation:** Release the operating trigger to turn the knife off.
- **Safety Lock:** After use, ensure the safety lock button is in the locked position to prevent accidental activation.



Intuitive Trigger

Turns the knife on and off

Image: The knife's intuitive trigger, which activates and deactivates the blades with a simple press.

MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and performance of your carving knife.

- **Blade Removal:** Press the blade release button to unlock the blades for easy removal.
- **Cleaning Blades:** The removable blades are dishwasher-safe for fast and easy cleanup. For best results, hand wash the blades with warm, soapy water and dry thoroughly.
- **Cleaning Handle:** Wipe the handle clean with a damp cloth. Do not immerse the handle in water or any other liquid.
- **Storage:** Store the knife with the blade cover in place to protect the blades and prevent accidental injury. The design is space-saving for convenient storage.



QUICK-RELEASE DISHWASHER SAFE BLADE FOR EASY CLEAN UP

Image: The quick-release mechanism, highlighting the ease of detaching the blades for cleaning.

TROUBLESHOOTING

If you encounter any issues with your BLACK+DECKER Electric Carving Knife, please refer to the following common solutions:

Problem	Possible Cause	Solution
Knife does not turn on.	Not plugged in, safety lock engaged, or power outlet issue.	Ensure the knife is securely plugged into a working outlet. Disengage the safety lock by pressing the appropriate side of the pin.
Blades do not move or move slowly.	Blades not properly inserted or food is too dense.	Ensure blades are fully inserted and locked into place. Apply less pressure or adjust the angle for very dense items.

Problem	Possible Cause	Solution
Difficulty removing blades.	Blade release button not fully pressed.	Press the blade release button firmly until the blades disengage.

For issues not listed here, please contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	BLACK+DECKER
Model Name	EK500B
Recommended Uses	Carving (Meats, Breads, Foam)
Special Feature	Stainless Steel Blades, Removable
Handle Material	Stainless Steel
Color	Black
Blade Material	Stainless Steel
Blade Length	7 Inches
Power Source	Corded Electric
Product Care Instructions	Hand Wash Only (Handle), Dishwasher Safe (Blades)
Item Weight	12 ounces
Item Dimensions (LxWxH)	9 x 2 x 2.5 inches
UPC	050875818323

WARRANTY AND SUPPORT

Your BLACK+DECKER Electric Carving Knife comes with a **2-year limited warranty**. Please retain your proof of purchase for warranty claims.

For detailed warranty information, product registration, or further assistance, please visit the official BLACK+DECKER website or refer to the full user manual:

Download Full User Manual
(PDF)

No official product videos from the seller were available for embedding. For additional product information or demonstrations, please refer to the manufacturer's official channels or the full user manual.

