

Einhell TE-VC 18 LI Solo

Einhell TE-VC 18 LI Solo Cordless Handheld Vacuum Cleaner Instruction Manual

Model: TE-VC 18 LI Solo (2347120.00)

1. INTRODUCTION

This instruction manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your Einhell TE-VC 18 LI Solo Cordless Handheld Vacuum Cleaner. Please read this manual thoroughly before first use and keep it for future reference.

2. SAFETY INSTRUCTIONS

Always observe the following safety precautions to prevent electric shock, fire, or injury:

- Ensure the vacuum cleaner is used only for its intended purpose as described in this manual.
- Do not vacuum liquids, hot ashes, flammable or explosive substances, or sharp objects.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Do not operate the vacuum cleaner without the dust collector and filter properly installed.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Use only Einhell Power X-Change batteries and chargers.
- Disconnect the battery pack before making any adjustments, changing accessories, or storing the appliance.
- Store the appliance indoors in a dry place.

3. PRODUCT OVERVIEW AND COMPONENTS

The Einhell TE-VC 18 LI Solo is a versatile cordless handheld vacuum cleaner designed for various cleaning tasks. It is part of the Einhell Power X-Change family, meaning it uses the same 18V battery system as other Einhell tools.



Figure 3.1: The Einhell TE-VC 18 LI Solo vacuum cleaner shown with its various accessories, including extension tubes and nozzles.



Figure 3.2: Key features of the vacuum cleaner, highlighting the collection container (540 ml), suction power (up to 42 mbar), 2-in-1 design (handheld/upright), and washable dirt filter.

3.1 Included Accessories

- Extension tube
- Crevice nozzle
- Upholstery nozzle
- Floor nozzle



Includes floor nozzle, crevice nozzle, upholstery nozzle and extension tube

Figure 3.3: A close-up view of the extension tube, crevice nozzle, upholstery nozzle, and floor nozzle.

Note: The Einhell TE-VC 18 LI Solo is supplied without a battery or charger. These must be purchased separately as part of the Einhell Power X-Change system.



Figure 3.4: Visual confirmation that the battery and charger are not included with the product.

4. SETUP AND ASSEMBLY

4.1 Attaching the Battery

1. Ensure the battery is fully charged using a compatible Einhell Power X-Change charger.
2. Align the battery pack with the battery slot on the vacuum cleaner handle.
3. Slide the battery into the slot until it clicks securely into place.
4. To remove the battery, press the release button on the battery pack and slide it out.

4.2 Attaching Accessories

Select the appropriate nozzle or extension tube for your cleaning task. Simply push the desired accessory firmly onto the suction opening of the vacuum cleaner until it is securely attached.

- **Crevice Nozzle:** Ideal for narrow gaps and corners.

- **Upholstery Nozzle:** Suitable for cleaning fabric surfaces.
- **Floor Nozzle with Extension Tube:** For upright vacuuming of larger floor areas.

5. OPERATING INSTRUCTIONS

5.1 Switching On/Off

- To switch on the vacuum cleaner, press the ON/OFF switch located on the handle.
- To switch off, press the ON/OFF switch again.

5.2 General Use

Guide the vacuum cleaner over the surface to be cleaned. The powerful suction will collect dust and debris into the collection container. For larger areas or floor cleaning, attach the extension tube and floor nozzle.



Figure 5.1: The vacuum cleaner can be used in an upright configuration with the extension tube and floor nozzle for convenient floor cleaning.

5.3 Battery Runtime

The operating time of the vacuum cleaner depends on the capacity of the Power X-Change battery used. Refer to the chart below for estimated runtimes:

Max. running time per battery charge

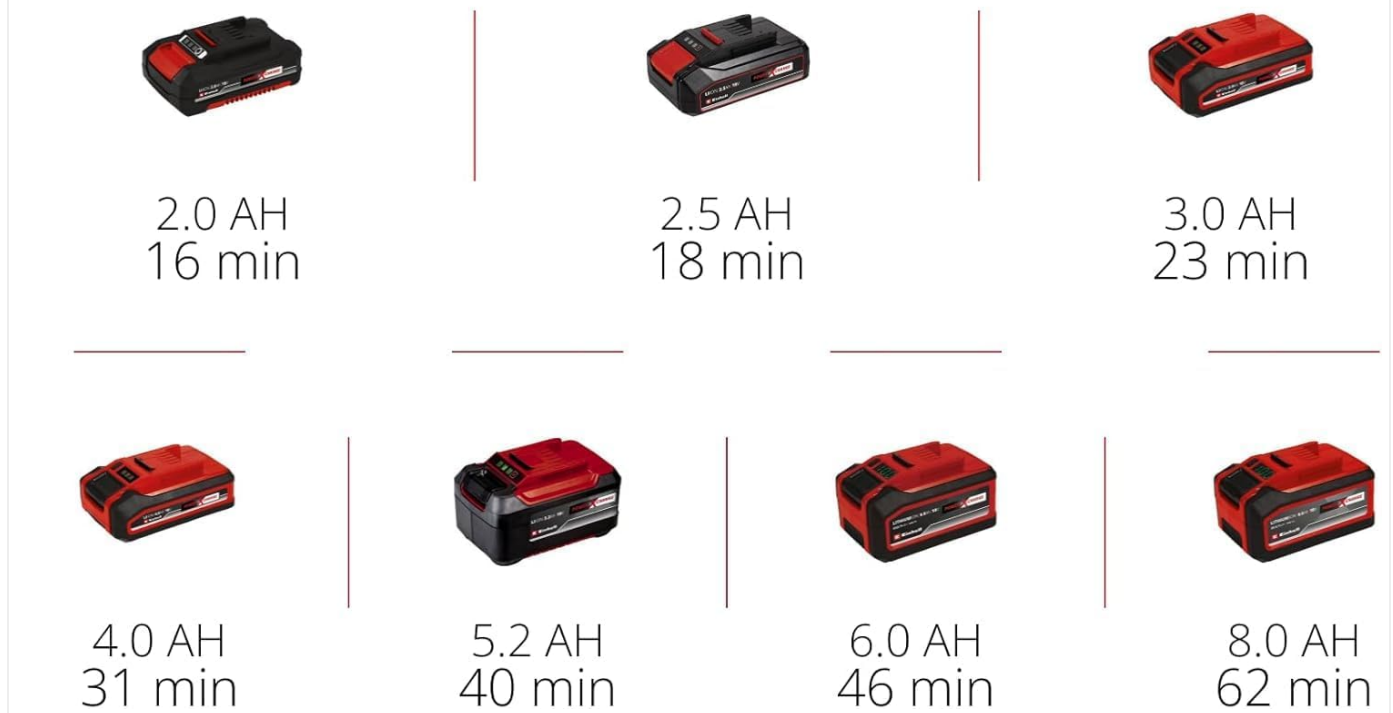


Figure 5.2: Estimated maximum running times for various Einhell Power X-Change battery capacities (e.g., 2.0 AH for 16 min, 4.0 AH for 31 min, 6.0 AH for 46 min).

6. MAINTENANCE AND CLEANING

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

6.1 Emptying the Dust Collection Container

1. Ensure the vacuum cleaner is switched off and the battery is removed.
2. Locate the release button for the dust collection container (refer to Figure 3.2).
3. Press the button to detach the container from the main unit.
4. Empty the contents into a waste bin. The container has a capacity of 540 ml.
5. Reattach the container securely until it clicks into place.



Large dust collection container with a capacity of 540 ml

Figure 6.1: The transparent dust collection container, which has a capacity of 540 ml, is easily removable for emptying.

6.2 Cleaning the Filter

1. After emptying the dust container, remove the filter element.
2. Tap the filter gently to dislodge dust. For a more thorough cleaning, rinse the filter under running water.
3. Allow the filter to air dry completely before reinserting it into the dust container. Do not use the vacuum cleaner with a wet filter.
4. Reassemble the filter and dust container, then attach them back to the vacuum cleaner.

6.3 Storage

Store the vacuum cleaner and its accessories in a dry, secure place, out of reach of children. The unit can be stored compactly using a wall bracket.



Wall bracket ensures compact storage of vacuum cleaner and accessories

Figure 6.2: The vacuum cleaner can be conveniently stored on a wall bracket, ensuring compact storage of both the unit and its accessories.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Vacuum cleaner does not switch on.	Battery not inserted correctly or discharged.	Ensure battery is securely inserted. Charge the battery if necessary.
Low suction power.	Dust collection container full, filter clogged, or nozzle/hose blocked.	Empty dust container. Clean or replace filter. Check nozzles and hose for blockages.
Unusual noise during operation.	Foreign object in the suction path or motor issue.	Switch off and remove battery. Check for and remove any foreign objects. If noise persists, contact customer support.

8. TECHNICAL SPECIFICATIONS







Feature	Specification
Brand	Einhell
Model Name	TE-VC 18 LI Solo
Item Model Number	2347120.00
Power Source	Battery Powered (Einhell Power X-Change 18V Lithium-Ion)
Capacity	0.54 Liters (540 ml)
Special Feature	HEPA, Wet/Dry (Note: This model is primarily for dry use, but the filter type is HEPA and it's listed as Wet/Dry in specs, which might be a general feature of the product line or a specific filter type. User should only vacuum dry materials as per typical handheld vacuum use.)
Filter Type	Bag (Washable, for dust collection container)
Is Cordless?	Yes
Wattage	504 W
Charging Time	46 minutes (for a 6.0 AH battery, varies by battery capacity)
Hose Length	0.47 Meters
Recommended Uses	Indoor
Form Factor	Handheld
Color	Red & Black
Battery Type	Lithium-Ion
Noise Level	80 Decibels
Product Dimensions	7.44"L x 2.17"W x 2.94"H
Item Weight	2.53 pounds

9. WARRANTY AND SUPPORT

For warranty information, product support, or to purchase replacement parts, please refer to the official Einhell website or contact their customer service department. Keep your proof of purchase for warranty claims.

Einhell Customer Service: Please visit www.einhell.com for contact details specific to your region.



	<p>Einhell TE-VC 18/10 Li - Solo Akku-Nass-Trockensauger Bedienungsanleitung</p> <p>Betriebsanleitung für den Einhell TE-VC 18/10 Li - Solo Akku-Nass-Trockensauger. Enthält Sicherheitshinweise, Gerätebeschreibung, technische Daten, Montage-, Bedienungs-, Reinigungs- und Wartungsanweisungen.</p>
	<p>Einhell TE-VC 18 Li Cordless Handheld Vacuum - Operating Instructions</p> <p>Comprehensive operating instructions and safety guide for the Einhell TE-VC 18 Li Cordless Handheld Vacuum. Learn about assembly, operation, maintenance, and safety precautions.</p>
	<p>Einhell TE-CS 18/150 Li - Solo Akku-Handkreissäge Bedienungsanleitung</p> <p>Umfassende Bedienungsanleitung für die Einhell TE-CS 18/150 Li - Solo Akku-Handkreissäge. Enthält Sicherheitshinweise, Gerätebeschreibung, technische Daten und Anleitungen zur bestimmungsgemäßen Verwendung, Wartung und Entsorgung.</p>
	<p>Einhell TP-VC 18/10 Li BL L-Solo: Motor Protection and Automatic Cut-Out Feature</p> <p>Explanation of the motor protection and automatic cut-out system in the Einhell TP-VC 18/10 Li BL L-Solo vacuum cleaner, detailing causes of overheating and the necessary cool-down procedure.</p>
	<p>Einhell TE-VC 18 Li Akku-Handstaubsauger - Originalbetriebsanleitung</p> <p>Umfassende Betriebsanleitung für den Einhell TE-VC 18 Li Akku-Handstaubsauger, inklusive Sicherheitshinweisen, technischen Daten, Montage-, Bedienungs- und Wartungsanleitungen sowie Garantieinformationen. Teil des Power X-Change Systems.</p>
	<p>Einhell TE-VC 5090 SACL Operating Instructions</p> <p>Comprehensive operating instructions for the Einhell TE-VC 5090 SACL wet and dry vacuum cleaner, covering setup, usage, maintenance, and safety guidelines.</p>

