

[Manuals.plus](#) /

> [Supersonic](#) /

> IQ Sound IQ-3612DJBT Portable Bluetooth Speaker User Manual

Supersonic IQ-3612DJBTRED

IQ Sound IQ-3612DJBT Portable Bluetooth Speaker

USER MANUAL

Model: IQ-3612DJBTRED

Introduction

Thank you for purchasing the IQ Sound IQ-3612DJBT Portable Bluetooth Speaker. This manual provides important information regarding the setup, operation, maintenance, and troubleshooting of your new speaker. Please read this manual thoroughly before using the product to ensure proper and safe operation.

Safety Instructions

- Do not expose the unit to extreme temperatures, humidity, or direct sunlight.
- Do not block ventilation openings.
- Use only the power adapter supplied with the unit.
- Do not attempt to disassemble or modify the unit. Refer all servicing to qualified personnel.
- Keep the unit away from water and other liquids.
- Ensure the speaker is placed on a stable surface to prevent tipping.

Package Contents

Please check that all items are present:

- IQ Sound IQ-3612DJBT Portable Bluetooth Speaker
- Remote Control
- Microphone
- AC Power Adapter
- User Manual (this document)

Product Overview

Familiarize yourself with the main components of your speaker.



Figure 1: Front view of the IQ Sound IQ-3612DJBT speaker, showing the 12-inch woofer with LED lights, control panel, disco ball light on top, and retractable handle.

The speaker features a 12-inch high-efficiency woofer, a control panel with various inputs and adjustments, a built-in disco ball light, and a retractable handle with wheels for easy portability.

Setup

1. Charging the Battery

Before first use, fully charge the speaker's built-in rechargeable battery. Connect the supplied AC power adapter to the

speaker's DC IN port and plug the other end into a standard wall outlet. The charging indicator light will illuminate. Once fully charged, the light may change color or turn off, depending on the model. A full charge typically takes several hours.

2. Powering On/Off

Locate the POWER switch on the control panel. Flip the switch to the "ON" position to power on the speaker. To power off, flip the switch to the "OFF" position.

Operating Instructions

1. Bluetooth Pairing

1. Ensure the speaker is powered on.
2. Press the "MODE" button on the control panel or remote control until "BLUETOOTH" mode is selected. You will hear an audible prompt indicating Bluetooth mode.
3. Enable Bluetooth on your mobile device (smartphone, tablet, etc.).
4. Search for available Bluetooth devices. The speaker will appear as "IQ-3612DJBT" or similar.
5. Select the speaker from the list to pair. Once paired, you will hear a confirmation sound.
6. You can now play audio wirelessly from your device through the speaker.

2. USB/SD Card Playback

The speaker supports playback from USB flash drives and SD/Micro SD cards.

1. Insert a USB flash drive into the USB port or an SD/Micro SD card into the SD card slot on the control panel.
2. The speaker should automatically switch to USB/SD mode and begin playing compatible audio files (e.g., MP3).
3. Use the Play/Pause, Next, and Previous buttons on the control panel or remote to control playback.

3. FM Radio Operation

1. Press the "MODE" button until "FM" mode is selected.
2. Press and hold the "SCAN" button (often the Play/Pause button) to automatically scan and save available FM radio stations.
3. Use the "CH-" and "CH+" buttons (or Previous/Next buttons) to navigate through the saved stations.

4. Microphone and Guitar Inputs

Connect a microphone to the "MIC IN" port or a guitar to the "GUITAR IN" port. Adjust the respective volume knobs on the control panel to control the input level.

5. Disco Ball Light Operation

The disco ball light can be turned on or off using a dedicated switch or button on the control panel, or via the remote control if available.

6. Remote Control Usage

The included remote control provides convenient access to various functions from a distance.

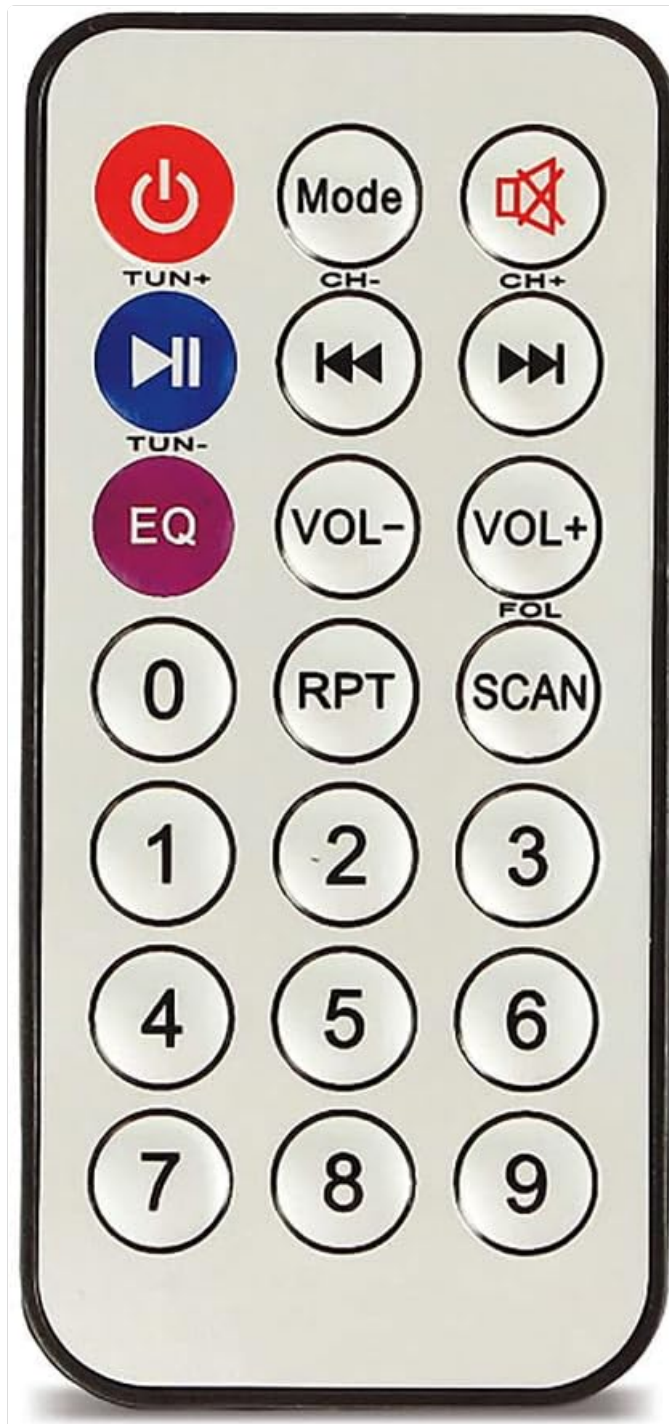


Figure 2: Remote control for the IQ Sound IQ-3612DJBT speaker. Buttons include Power, Mode, Mute, Channel/Track navigation, EQ, Volume, Repeat, Scan, and a numeric keypad.

Ensure the remote control has working batteries (1 CR5 battery required, not always included). Point the remote directly at the speaker's IR receiver for optimal performance.

Maintenance

Cleaning

Wipe the speaker's exterior with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents. Avoid spraying liquids directly onto the speaker.

Storage

When not in use for extended periods, store the speaker in a cool, dry place, away from direct sunlight and extreme temperatures. It is recommended to fully charge the battery every 3-6 months to maintain its lifespan.

Troubleshooting

Problem	Possible Cause	Solution
No power	Battery drained; Power switch off; AC adapter not connected.	Charge the battery; Turn the power switch ON; Connect the AC adapter.
No sound	Volume too low; Incorrect mode selected; Device not paired (Bluetooth).	Increase volume; Press MODE button to select correct input; Re-pair Bluetooth device.
Bluetooth not connecting	Speaker not in pairing mode; Device too far; Interference.	Ensure speaker is in Bluetooth mode; Move device closer; Turn off other Bluetooth devices.
FM radio static	Weak signal; No antenna.	Relocate speaker for better reception; Extend any built-in antenna fully.

Specifications

Feature	Detail
Model Number	IQ-3612DJBTRD
Woofer Size	12-inch High-Efficiency Woofer
Peak Power Output	600 Watts
Connectivity	Bluetooth, USB, SD, AUX, Mic Input, Guitar Input
Power Source	Rechargeable Battery (12V/4.5aH), AC/DC
Dimensions (L x W x H)	29 x 14.5 x 18.5 inches
Item Weight	38.4 pounds
Special Features	Disco Ball Light, FM Radio, Built-in Handle & Wheels, Remote Control

Warranty and Support

This product is manufactured by Supersonic. For warranty information and technical support, please refer to the warranty card included with your purchase or visit the manufacturer's official website. Keep your purchase receipt as proof of purchase for warranty claims.

For further assistance, you may contact Supersonic customer service. Contact details are typically available on their website or product packaging.

