

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [VTech](#) /

› [VTech 80-100003 Lullabye Teddy Projector Instruction Manual](#)

VTech 80-100003

VTech 80-100003 Lullabye Teddy Projector Instruction Manual

Model: 80-100003

1. INTRODUCTION

This manual provides essential information for the safe and effective use of your VTech Lullabye Teddy Projector, model 80-100003. This device is designed to provide soothing melodies, gentle phrases, and calming projections to assist in creating a peaceful environment for infants from 0 months and up. Please read these instructions thoroughly before use and retain them for future reference.

2. SAFETY INFORMATION

- **Age Recommendation:** Suitable for infants aged 0 months and up.
- **Battery Safety:** Use only the specified battery type (3 AAA batteries). Do not mix old and new batteries, or different types of batteries. Always insert batteries with the correct polarity. Remove exhausted batteries promptly. Remove batteries if the unit will not be used for an extended period.
- **Product Placement:** Ensure the projector is placed on a stable surface or securely attached where it cannot fall onto the child. Keep cords or straps away from the child's reach to prevent entanglement hazards.
- **Cleaning:** Clean the unit with a soft, damp cloth only. Do not immerse in water.
- **Supervision:** This product is not a toy. Adult supervision is recommended during use.
- **Food Safety Standards:** This product has passed Japanese food safety standards.

3. PACKAGE CONTENTS

Upon opening the package, please ensure all the following items are present:

- VTech Lullabye Teddy Projector Unit (Model 80-100003)
- 3 x AAA Batteries (for initial testing, may have limited lifespan)

- Instruction Manual (Japanese version included in original packaging)



Image: The VTech Lullabye Teddy Projector shown within its retail packaging, illustrating the product's features and design.

4. PRODUCT OVERVIEW

Familiarize yourself with the components and controls of your Lullabye Teddy Projector.



Image: Front view of the projector, displaying the central teddy bear projection disc, volume control buttons, and the sound mode

selector switch.

Components and Controls:

- **Projection Disc:** Central disc featuring a teddy bear design, which projects images onto a surface.
- **Volume Buttons:** Two yellow buttons on the left side, marked with speaker icons, to adjust the sound level.
- **Sound Mode Switch:** A yellow slider switch on the right side, allowing selection between different sound modes (e.g., music, nature sounds).
- **Projector Lens:** Located on the side of the unit, responsible for projecting images.
- **Attachment Strap:** A blue strap with stars for securing the projector to a crib or other suitable fixture.



Image: Side view of the projector, highlighting the projector lens and the contoured design of the unit.

5. SETUP

5.1 Battery Installation

1. Locate the battery compartment on the back of the unit. It is secured with a screw.

2. Using a Phillips head screwdriver, loosen the screw and remove the battery compartment cover.
3. Insert 3 new AAA batteries, ensuring they are placed according to the polarity markings (+/-) inside the compartment.
4. Replace the battery compartment cover and tighten the screw to secure it.



Image: Rear view of the projector, showing the battery compartment cover secured by a screw and the adjustable attachment strap.

5.2 Placement

Position the projector in a suitable location, such as on a bedside table or securely attached to a crib using the integrated strap. Ensure the projection lens is aimed at a clear surface (e.g., ceiling or wall) for optimal image display. Keep the unit at a safe distance from the child.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off

To turn the unit on, locate the power switch (often integrated with the sound mode switch or a separate button) and slide it to the 'On' position. To turn it off, slide it to the 'Off' position.

6.2 Selecting Sound Modes

Use the yellow slider switch on the right side of the unit to cycle through available sound modes. These typically include:

- **Music:** Plays a selection of lullabies and melodies.
- **Sounds:** Plays various soothing sounds.
- **Nature Sounds:** Plays calming nature-inspired audio.

6.3 Adjusting Volume

Press the yellow volume buttons on the left side of the unit to increase or decrease the sound output. The button with the larger speaker icon typically increases volume, while the button with the smaller speaker icon decreases it.

6.4 Projection Function

When the unit is powered on, the projection feature will automatically activate, casting gentle images from the projection disc onto the chosen surface. Ensure the projector lens is clear of obstructions for the best visual experience.

7. MAINTENANCE

7.1 Cleaning

To clean the projector, wipe the surface with a soft, slightly damp cloth. Do not use abrasive cleaners or immerse the unit in water. Ensure the unit is completely dry before next use.

7.2 Storage

When not in use for extended periods, remove the batteries to prevent leakage. Store the unit in a cool, dry place away from direct sunlight and extreme temperatures.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Unit does not turn on.	Batteries are depleted or incorrectly installed.	Replace with new AAA batteries, ensuring correct polarity.
No sound or low sound.	Volume is set too low or muted.	Increase volume using the volume up button.
Projection is dim or unclear.	Projector lens is obstructed or dirty; room is too bright.	Clean the projector lens. Ensure the room is sufficiently dark for optimal projection.
Unit stops working unexpectedly.	Batteries are low.	Replace batteries.

9. SPECIFICATIONS

Model Number	80-100003
Brand	VTech
Manufacturer	VTech
Recommended Age	0 months and up
Power Source	Battery Powered
Battery Type	3 x AAA batteries (included for testing)
Material	ABS
Package Dimensions	21.8 x 20.5 x 9.4 cm
Item Weight	535.99 g
Country of Origin	China

10. WARRANTY AND SUPPORT

Specific warranty information for the VTech 80-100003 Lullabye Teddy Projector is not provided within this manual. For details regarding warranty coverage, product support, or service inquiries, please refer to the VTech official website or contact their customer service department directly. Please retain your purchase receipt as proof of purchase.

