

[Manuals.plus](#) /

› [HCDZ](#) /

› HCDZ Replacement Remote Control for Epson EMP-1710 EMP-1715 Projector - Instruction Manual

HCDZ HCDZ-X19937

HCDZ Replacement Remote Control for Epson EMP-1710 EMP-1715 Projector - Instruction Manual

INTRODUCTION

This manual provides instructions for the HCDZ Replacement Remote Control, designed for use with various Epson 3LCD Projector models, including EMP-1710, EMP-1715, H550B, H551B, and H552B. This remote is an infrared (IR) replacement unit and requires no programming. Simply insert batteries, and it is ready for use.

SETUP

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch to open it.
3. Insert two (2) AA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover securely until it clicks into place.



Figure 1: Battery compartment open, ready for battery insertion. Ensure correct polarity.

Once batteries are correctly installed, the remote control is ready for immediate use with compatible Epson projectors. No additional programming or setup is required.

OPERATING INSTRUCTIONS

Basic Operation

To operate your projector, point the HCDZ Replacement Remote Control directly at the projector's infrared sensor. Press the desired function button (e.g., Power, Menu, Volume, Input Select) to control the projector. Ensure there are no obstructions between the remote control and the projector's sensor.



Figure 2: Front view of the HCDZ Replacement Remote Control.

Compatible Projector Models

- Epson EMP-1710
- Epson EMP-1715
- Epson H550B
- Epson H551B
- Epson H552B

MAINTENANCE

Proper care will extend the life of your remote control.

- **Storage:** Do not leave the remote control in an extremely hot or humid environment. High temperatures and humidity can damage internal components.
- **Battery Usage:** Avoid mixing new batteries with old ones. Always replace all batteries with new ones of the same type.
- **Direct Sunlight:** Do not expose the remote control's sensor to direct sunlight or strong lighting apparatuses, as this may cause a malfunction.
- **Long-Term Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent potential damage from battery leakage and corrosion.
- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote control is not working.	- Batteries are depleted or incorrectly inserted. - Obstruction between remote and projector sensor. - Remote control sensor is dirty or damaged.	- Replace batteries with new AA alkaline batteries, ensuring correct polarity. - Remove any objects blocking the line of sight between the remote and the projector. - Clean the remote's IR emitter and the projector's IR receiver with a soft, dry cloth.
Remote control has limited range.	- Weak batteries. - Interference from strong light sources.	- Replace batteries. - Ensure the remote sensor is not exposed to direct sunlight or strong artificial lights.

SPECIFICATIONS

Brand	HCDZ
Model Number	HCDZ-X19937
Connectivity Technology	Infrared (IR)
Compatible Devices	Epson Projectors (EMP-1710, EMP-1715, H550B, H551B, H552B)
Battery Type	2 x AA Alkaline Batteries (not included)
Special Feature	No programming needed, ready to use out of package.

WARRANTY AND SUPPORT

Warranty Information

This HCDZ Replacement Remote Control comes with a**90-day warranty** from the date of purchase. This warranty covers manufacturing defects. Please retain your proof of purchase for warranty claims.

Customer Support

For any questions, technical assistance, or warranty claims, please contact the seller or manufacturer directly through the platform where the product was purchased.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B01K72BZPY>

More documents and user manuals: **<https://manuals.plus/>**