

[Manuals.plus](#) /

› [SMK-Link](#) /

› SMK-Link USB-C Multi-Port Hub (VP6920) Instruction Manual

SMK-Link VP6920

SMK-Link USB-C Multi-Port Hub (VP6920) Instruction Manual

Model: VP6920

1. INTRODUCTION

The SMK-Link USB-C Multi-Port Hub (VP6920) is designed to expand the connectivity options for your USB-C enabled laptop or device. This compact and portable docking station provides a range of ports to connect various peripherals, external displays, and network connections, enhancing your productivity and versatility.

This manual provides detailed instructions for setting up, operating, and maintaining your USB-C Multi-Port Hub. Please read it thoroughly before use to ensure optimal performance and longevity of the device.

2. PRODUCT OVERVIEW

The SMK-Link USB-C Multi-Port Hub integrates essential ports into a single, sleek unit. It is compatible with Windows, macOS, and Chrome OS.



Image: The SMK-Link USB-C Multi-Port Hub (VP6920) in white, showcasing its compact design and the integrated USB-C cable. This hub provides multiple connectivity options for modern laptops.

2.1 Key Features and Ports

- **USB-C Charging Port:** Allows power delivery to your laptop through the hub.
- **HDMI HD Video Port:** Supports video output up to 4K resolution for external monitors or TVs.
- **Gigabit Ethernet Port:** Provides a stable wired network connection with speeds up to 1000 Mbps.
- **3 High-Speed USB 3.0 Ports:** Connect USB peripherals such as external hard drives, keyboards, mice, and printers with fast data transfer rates.
- **SD Memory Card Reader:** For reading standard SD memory cards.
- **Micro SD Memory Card Reader:** For reading Micro SD memory cards.

Your browser does not support the video tag.

Video: An official overview of the SMK-Link USB-C Multi-Port Hub (VP6920), demonstrating its features and various connectivity options. This video highlights the hub's functionality and ease of use.

3. SETUP INSTRUCTIONS

Follow these steps to set up your SMK-Link USB-C Multi-Port Hub:

1. **Connect to Host Device:** Plug the integrated USB-C connector of the hub into an available USB-C port on your laptop or compatible device. Ensure the connection is secure.
2. **Power Connection (Optional):** If your laptop requires charging or if you are connecting power-intensive peripherals, connect your laptop's USB-C power adapter to the USB-C Charging Port on the hub. The hub supports power pass-through.

3. **Connect Peripherals:**

- **HDMI Display:** Connect an HDMI cable from your monitor or TV to the HDMI port on the hub. Your device should automatically detect the external display.
 - **Ethernet Network:** Connect an Ethernet cable from your router or network switch to the Gigabit Ethernet port on the hub.
 - **USB Devices:** Plug your USB 3.0 or USB 2.0 devices (e.g., mouse, keyboard, external hard drive, USB flash drive) into the USB 3.0 ports.
 - **Memory Cards:** Insert SD or Micro SD cards into the corresponding card reader slots.
4. **Driver Installation:** In most cases, the hub is plug-and-play and does not require additional drivers for Windows, macOS, or Chrome OS. If prompted, allow your operating system to install any necessary drivers automatically.

4. **OPERATING INSTRUCTIONS**

Once connected, the SMK-Link USB-C Multi-Port Hub operates seamlessly with your device. Here are some operational guidelines:

- **External Display Usage:** After connecting an HDMI display, you may need to configure display settings (e.g., duplicate, extend, resolution) within your operating system's display preferences. The hub supports resolutions up to 4K.
- **Network Connectivity:** The Gigabit Ethernet port provides a stable and fast wired internet connection. Ensure your network cable is properly connected to both the hub and your network source.
- **USB Device Management:** The three USB 3.0 ports allow for simultaneous connection of multiple USB devices. For optimal performance, avoid connecting too many high-power devices without external power to the hub's USB-C charging port.
- **Memory Card Access:** Insert your SD or Micro SD card into the correct slot. The card will appear as a removable drive in your computer's file explorer, allowing you to transfer data. Always safely eject memory cards before removing them.
- **Power Delivery:** The USB-C charging port allows your laptop to receive power through the hub. Note that the hub itself consumes a small amount of power, so the power delivered to your laptop might be slightly less than directly connecting the charger.

5. **SPECIFICATIONS**

Model Number	VP6920
Brand	SMK-Link
Connectivity	USB-C (Host Connection)
Ports	1x USB-C Charging Port, 1x HDMI (up to 4K), 1x Gigabit Ethernet, 3x USB 3.0, 1x SD Card Reader, 1x Micro SD Card Reader
HDMI Resolution	Up to 4K
Ethernet Speed	10/100/1000 Mbps (Gigabit)
USB Data Transfer Rate	Up to 5 Gbps (USB 3.0)

Compatible Operating Systems	Windows, macOS, Chrome OS
Material	Plastic
Item Weight	100 g
Dimensions (Approximate)	4.16 inches (105mm) x 1.94 inches (48mm)

6. TROUBLESHOOTING

If you encounter issues with your USB-C Multi-Port Hub, please refer to the following common solutions:

- **No Display on External Monitor:**

- Ensure the HDMI cable is securely connected to both the hub and the monitor.
- Verify the monitor input source is set correctly (e.g., HDMI 1, HDMI 2).
- Check your laptop's display settings to ensure the external display is detected and configured (e.g., extended, duplicated).
- Try a different HDMI cable or monitor if possible.

- **USB Devices Not Recognized or Functioning:**

- Ensure the hub's USB-C connector is firmly plugged into your laptop.
- Try connecting the USB device to a different USB 3.0 port on the hub.
- If using a high-power USB device (e.g., external hard drive), connect your laptop's power adapter to the hub's USB-C charging port.
- Test the USB device by connecting it directly to your laptop (if possible) to rule out device-specific issues.

- **No Internet Connection via Ethernet:**

- Verify the Ethernet cable is securely connected to both the hub and your network source.
- Check the network status on your laptop's operating system.
- Ensure your router or modem is functioning correctly.
- Try a different Ethernet cable.

- **Memory Card Not Detected:**

- Ensure the memory card is inserted fully and correctly into the appropriate slot (SD or Micro SD).
- Check if the memory card is locked (some SD cards have a small lock switch).
- Test the memory card in another device to confirm it is not corrupted.

- **Hub Feels Warm:**

- It is normal for the hub to become warm during operation, especially when multiple ports are in use or when power delivery is active. This is generally not a cause for concern.
- If the hub becomes excessively hot, disconnect it and reduce the number of connected devices or ensure adequate ventilation.

7. MAINTENANCE

To ensure the longevity and proper functioning of your SMK-Link USB-C Multi-Port Hub:

- Keep the hub clean and free from dust. Use a soft, dry cloth for cleaning.
- Avoid exposing the hub to extreme temperatures, humidity, or direct sunlight.
- Do not attempt to disassemble or repair the hub yourself. This will void the warranty.
- Handle the integrated USB-C cable and connector with care to prevent damage.

8. WARRANTY AND SUPPORT

The SMK-Link USB-C Multi-Port Hub (VP6920) comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions.

For technical support, frequently asked questions, or to download the latest drivers (if applicable), please visit the official SMK-Link website:

www.smklink.com/hub

You may also find additional information in the user guide included in the product box.

© 2024 SMK-Link Electronics. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question