

[manuals.plus](#) /

› [Hama](#) /

› [Hama Universal 8-in-1 Remote Control User Manual](#)

Hama 00012307

Hama Universal 8-in-1 Remote Control User Manual

Model: 00012307

For TV, DVD, Blu-ray, VCR, Satellite Receivers, AUX, DVBT, CBL, AM devices

1. INTRODUCTION

The Hama Universal 8-in-1 Remote Control is designed to consolidate control of up to eight different audio/video devices into a single, convenient unit. This remote is pre-programmed with a vast library of codes for most popular AV device manufacturers, offering multiple programming methods to ensure compatibility with your home entertainment system. It also includes special features for Smart TVs and advanced control options.

Universal remote control

"8 in 1"

Universal Fernbedienung

HAMA HOME ENTERTAINMENT

2 special buttons
2 Sondertasten

Pre-programmed
Vorprogrammiert

Colour-coded
Farbcodiert



8 in 1

TV
DVD/Blu-ray
STB/SAT
VCR
DVB-T
CBL
AMP
AUX

for/für
SMART
TV

www.hama.com

4 007249 123077

Figure 1.1: Hama Universal 8-in-1 Remote Control in retail packaging. The packaging highlights its "8 in 1" capability and suitability for Smart TVs.

2. PRODUCT OVERVIEW

2.1 Key Features

- Controls up to 8 devices: TV, DVD, Blu-ray, VCR, satellite receivers, AUX, DVBT, CBL, AM.
- Supports direct code input, manual code search, and automatic code search.
- Compatible with many brands including LG, Sony, Samsung, Sharp, Panasonic, Philips.
- Dedicated color-coded keys for Teletext functions and auxiliary devices.
- Two special buttons for Smart TV and App menu access.
- Macro Power function: Simultaneously turn two AV devices on/off.
- Channel Punch-Through: Bypass current device to change channels on a second device.
- Volume Punch-Through: Bypass current device to adjust volume on a second device.
- Power saving function: Automatic shutdown after 15 seconds of continuous button press.
- Code memory function: Programmed codes remain stored for up to 10 minutes during battery replacement.

2.2 Remote Control Layout



Figure 2.1: Angled view of the Hama Universal 8-in-1 Remote Control, showcasing its button layout and sleek black design.



Figure 2.2: Close-up view of the Hama Universal 8-in-1 Remote Control's central navigation and playback buttons, including the "OK" button, directional pads, and dedicated Smart TV and Apps buttons at the bottom.

The remote features clearly labeled buttons for device selection (AUX, DVBT, CBL, AMP, TV, DVD, SAT, VCR), numerical input, channel and volume control, playback functions, and navigation. Special buttons for Smart TV and Apps are located at the bottom.

3. SETUP

3.1 Battery Installation

The Hama Universal 8-in-1 Remote Control requires two AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two AAA batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Note: When replacing batteries, all programmed codes will remain stored for up to 10 minutes, allowing for convenient battery changes without reprogramming.



Figure 3.1: Rear view of the Hama Universal 8-in-1 Remote Control, clearly showing the battery compartment cover at the bottom.

3.2 Programming Your Devices

The remote offers three methods to program your devices. It is recommended to try Direct Code Entry first, as it is often the quickest method.

3.2.1 Direct Code Entry

This method uses a specific 4-digit code for your device's brand. Refer to the included code list or the product information section online for a comprehensive list of codes.

1. Turn on the device you wish to program (e.g., TV, DVD player).
2. Press and hold the **SETUP** button on the remote until the red indicator light illuminates.
3. Press the device button (e.g., **TV**, **DVD**) corresponding to the device you are programming. The red indicator light will flash once and then remain lit.
4. Enter the 4-digit code for your device's brand using the number buttons. After entering the last digit, the red indicator light should turn off.
5. Test the remote by pressing the **POWER** button. If the device turns off, the programming was successful. If not, repeat the process with another code from the list for your brand, or try a different programming method.

3.2.2 Manual Code Search

If direct code entry is unsuccessful, you can manually search through the remote's built-in code library (up to 350 codes per device type).

1. Turn on the device you wish to program.
2. Press and hold the **SETUP** button until the red indicator light illuminates.
3. Press the device button (e.g., **TV**, **DVD**) corresponding to the device you are programming. The red indicator light will flash once and then remain lit.
4. Repeatedly press the **POWER** button (or **PROG+ / PROG-**) on the remote. Each press sends a new code. Observe your device for a response (e.g., turning off, changing channel).
5. Once your device responds, immediately press the **SETUP** button to save the code. The red indicator light will turn off.
6. Test the remote's functions (e.g., volume, channel change) to confirm successful programming.

3.2.3 Automatic Code Search

This method automatically scans through the remote's code library until a compatible code is found.

1. Turn on the device you wish to program.
2. Press and hold the **SETUP** button until the red indicator light illuminates.
3. Press the device button (e.g., **TV**, **DVD**) corresponding to the device you are programming. The red indicator light will flash once and then remain lit.
4. Press the **POWER** button once. The remote will begin automatically scanning through codes, indicated by the red light flashing continuously.
5. Point the remote at your device and wait for it to respond (e.g., turn off, change channel).
6. As soon as your device responds, immediately press any button (e.g., **OK**, **EXIT**) to stop the automatic search and save the code. The red indicator light will turn off.
7. Test the remote's functions to confirm successful programming.

4. OPERATING INSTRUCTIONS

4.1 Basic Operation

To control a specific device, first press the corresponding device button (e.g., **TV**, **DVD**) at the top of the remote. The remote will then send commands for that selected device. For example, to change the channel on your TV, press the **TV** button, then use the **PROG+ / PROG-** buttons.



Figure 4.1: The Hama Universal 8-in-1 Remote Control positioned on a desk, ready for use with a display monitor, illustrating its compact and user-friendly design in a typical home setup.

4.2 Smart TV Functions

The remote includes two dedicated buttons for enhanced Smart TV functionality:

- **SMART TV Button:** Press this button to directly access your Smart TV's main interface or home screen.
- **APPS Button:** Use this button to quickly open the applications menu on your Smart TV, allowing you to browse and launch installed apps.

4.3 Special Functions

4.3.1 Macro Power

The Macro Power function allows you to turn two AV devices on or off simultaneously with a single button press. This is useful for turning on your TV and a connected sound system at the same time.

(Specific setup instructions for Macro Power are typically found in the full manual's code list section. Generally, it involves assigning two device codes to a single power command.)

4.3.2 Channel Punch-Through

With Channel Punch-Through, the **PROG+** / **PROG-** commands can bypass the currently controlled device and change the channels of a second, pre-selected device. All other commands will still control the primary selected device.

(Specific setup instructions for Channel Punch-Through are typically found in the full manual's code list section. This feature is often configured during the initial programming phase.)

4.3.3 Volume Punch-Through

Similar to Channel Punch-Through, the Volume Punch-Through function allows the **VOL+** / **VOL-** commands to bypass the currently controlled device and adjust the volume of a second, pre-selected device. All other commands will continue to control the primary selected device.

(Specific setup instructions for Volume Punch-Through are typically found in the full manual's code list section. This feature is often configured during the initial programming phase.)

5. MAINTENANCE

5.1 Cleaning

To clean your remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution. Do not use abrasive cleaners, solvents, or alcohol, as these can damage the remote's surface or internal components.

5.2 Battery Replacement

Replace the batteries when the remote's response becomes sluggish or the indicator light does not illuminate. As mentioned in Section 3.1, the remote retains programmed codes for up to 10 minutes during battery replacement, allowing for a quick and seamless change.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote does not operate device.	Incorrect code programmed; batteries are low or incorrectly inserted; remote not pointed at device; device is off.	Ensure batteries are correctly inserted and charged. Reprogram the device using Direct Code Entry, Manual Code Search, or Automatic Code Search (Section 3.2). Ensure the remote is pointed directly at the device's IR receiver. Ensure the device is powered on.
Some functions do not work after programming.	The programmed code is a partial match; device may not support all functions via universal remote.	Try another code for your device's brand from the code list. Some advanced functions may require the original remote.
Red indicator light does not illuminate.	Batteries are dead or incorrectly inserted.	Replace batteries with new AAA batteries. Check battery polarity.
Remote turns off automatically.	Power saving function activated.	This is normal behavior if a button is pressed for more than 15 seconds (e.g., remote stuck between sofa cushions). Release the button.

7. SPECIFICATIONS

Feature	Detail
Model Number	00012307
Compatible Devices	TV, DVD, Blu-ray, VCR, Satellite Receivers, AUX, DVBT, CBL, AM (up to 8 devices)
Compatible Brands	LG, Sony, Samsung, Sharp, Panasonic, Philips, and many more.
Power Source	2 x AAA Batteries (not included)
Connector Type	Infrared
Material Type	Plastic
Product Dimensions	23 x 14 x 3.8 cm
Item Weight	130 g
Special Features	Universal, Smart TV buttons, Macro Power, Channel Punch-Through, Volume Punch-Through, Power Saving, Code Memory

8. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided with your purchase or contact your retailer. For technical support or further assistance with programming, please visit the official Hama website or contact Hama customer service directly.



Hama GmbH & Co KG

www.hama.com

© 2024 Hama GmbH & Co KG. All rights reserved.

This manual is for informational purposes only. Hama is not responsible for any errors or omissions.


Related Documents - 00012307

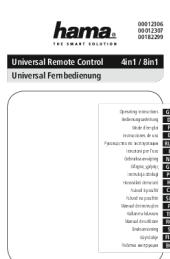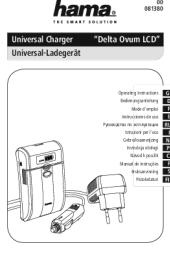	<p><u>Hama Universal Remote Control 4in1 / 8in1 Operating Instructions</u></p> <p>User manual for the Hama Universal Remote Control, models 4in1 and 8in1. Provides operating instructions, setup guide, troubleshooting, and maintenance information for controlling various AV devices.</p>
	<p><u>Hama Universal Remote Control 4in1 / 8in1 Operating Instructions</u></p> <p>User manual for the Hama Universal Remote Control models 4in1 and 8in1, providing operating instructions, setup guides, troubleshooting, and safety information.</p>
	<p><u>Hama Universal Remote Control 4in1 / 8in1 Operating Instructions</u></p> <p>Comprehensive guide for Hama Universal Remote Controls (Models 00221052, 00221054). Learn how to set up, program, and use your remote to control multiple AV devices.</p>
	<p><u>Hama Delta Ovum LCD Universal Charger - Operating Instructions</u></p> <p>This document provides comprehensive operating instructions for the Hama Delta Ovum LCD Universal Charger. It details features, safety precautions, package contents, charging procedures for various battery types (Li-ion, NiMH) and USB devices, technical specifications, and recycling information.</p>
	<p><u>Hama Universal Remote Control for Air Conditioners - User Manual</u></p> <p>User manual for the Hama Universal Remote Control (Model 00 221040), designed for air conditioning systems. Provides comprehensive instructions on setup, operation, and troubleshooting for various brands.</p>

[Hama Replacement Remote Control for Samsung TVs - Operating Instructions \(Model 00 221060\)](#)

User manual and operating instructions for the Hama replacement remote control, model 00 221060, for Samsung TVs, LCD, LED, and HDTV. Learn about setup, functions, programming, troubleshooting, and more.

Documents - Hama – 00012307

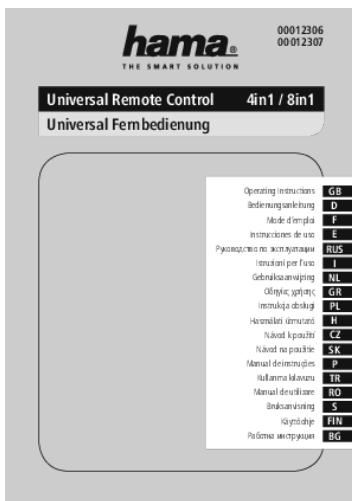

[\[pdf\] User Manual Instructions Guide](#)

4in1 8in1 Universal Remote Control Fernbedienung UniversalRemoteControl UniversalFernbedienung


Thank you for your decision a Hama product Take time and read the following instructions as Manual

Code Search 5 2 but tv dvdsat vcr shiftep guide ok menu v p exit fav setup 123 456 789 0 av smarttv
apps art nr 00012306 00012307 epg mode navod k pouziti 914jK5sPn2S nej ceny cz 4932 images eu ssl
amazon I

00012306 **00012307** Universal Remote Control Universal Fernbedienung 4in1 / 8in1

Operating Instructions GB Bedienungsanleitung D Mode d emploi F Instrucciones de uso E RUS Istruzioni per l uso I Gebruiksaanwijzing NL GR Instrukcja obslugi PL Hasznlati tmrat H Nvod k pouzit CZ Nvod na pouzitie...


lang:en **score:35** filesize: 737.63 K page_count: 96 document date: 2016-07-01

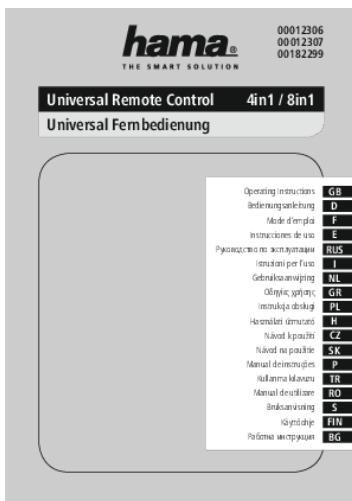

[Hama Universal Remote Control 4in1 / 8in1 Operating Instructions](#)

User manual for the Hama Universal Remote Control, models 4in1 and 8in1. Provides operating instructions, setup guide, troubleshooting, and maintenance information for controlling various AV devices.

 lang:en **score:24** filesize: 673.95 K page_count: 95 document date: 2019-11-12



[\[pdf\] User Manual Instructions Guide](#)

4in1 8in1 Universal Fernbedienung tv dvd stb sound shift epg guide ok menu v p exit fav setup 1 2 3 4 5 6
7 8 9 0 av smart apps art nr 00012306 00012307 00012306man bg cs de el en es fi fr hu it nl pl pt ro ru
sk sv tr be hama webresources article documents 00012 man |||

Universal Remote Control Universal Fernbedienung 00 012306 012307 4in1 / 8in1

Operating Instructio ... EXIT MODE V P 14 SETUP 12 3 456 789 AV SMART TV 0

APPS 13 Art.Nr.: 00012306 Art.Nr.: **00012307** AAA G Operating Instructions

Universal remote control Thank you for choosing a Hama pro...


lang:en **score:22** filesize: 1.03 M page_count: 112 document date: 2022-12-23



[Hama Universal Remote Control 4in1 / 8in1 Operating Instructions](#)

User manual for the Hama Universal Remote Control models 4in1 and 8in1, providing operating instructions, setup guides, troubleshooting, and safety information.

lang:en score:22 filesize: 1.03 M page_count: 112 document date: 2022-10-24

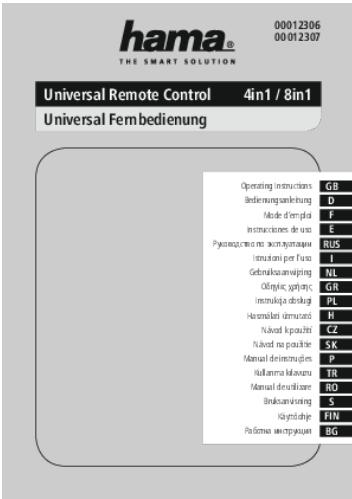


[\[pdf\] User Manual Instructions Guide](#)

User Manual Hama Universal 10cm 4 in 1 Remote Control for TV DVD STB VCR black Electronics Photo 91lypicioVfWS m media amazon images I |||

00012306 00012307 Universal Remote Control Universal Fernbedienung 4in1 / 8in1 Operating Instructions GB Bedienungsanleitung D Mode d emploi F Instrucciones de uso E RUS Istruzioni per l uso I Gebruiksaanwijzing NL GR Instrukcja obsługi PL Hasznlati tmutat H Nvod k pouzit CZ Nvod na pouzitie...

lang:en score:20 filesize: 686.78 K page_count: 95 document date: 2020-11-17

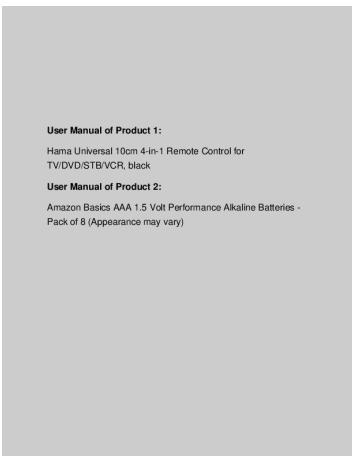

[\[pdf\] User Manual Instructions Guide](#)


User Manual Hama Universal 10 m 4 in 1 Remote Control for TV DVD STB VCR black Amazon Basics

AAA 5 Volt Performance Alkaline Batteries Pack of 8 Appearance may vary Electronics Photo

C1C7jZl2SrL media amazon images I |||

User Manual of Product 1: Hama Universal 10cm 4-in-1 Remote Control for TV/DVD/STB/VCR, black User Manual of Product 2: Amazon Basics AAA 1.5 Volt Performance Alkaline Batteries Pack of 8 Appearance may vary 00012306 **00012307** Universal Remote Control Universal Fernbedienung 4in1 / 8in1 Operat...

lang:en score:18 filesize: 4.94 M page_count: 98 document date: 0000-00-00

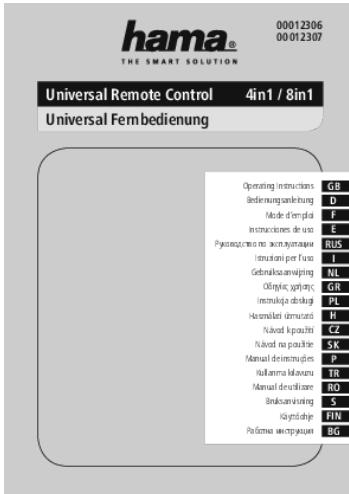


[\[pdf\] User Manual Instructions Guide](#)

ManualHama Universal remote control 4in1 buy at Digitecv1digitec ch Files 1 5 8 6 3 4 Manual |||

00012306 00012307 Universal Remote Control Universal Fernbedienung 4in1 / 8in1

Operating Instructions GB Bedienungsanleitung D Mode d'emploi F Instrucciones de uso E RUS Istruzioni per l'uso I Gebruiksaanwijzing NL GR Instrukcja obsługi PL Hasznlati tmutat H Nvod k pouzit CZ Nvod na pouzitie...
Nvod k pouzitie CZ Nvod na pouzitie...
Hasznlati tmutat H Nvod k pouzit CZ Nvod na pouzitie...

 lang:en score:18 filesize: 737.63 K page_count: 96 document date: 2016-07-01



[Hama Universal Remote Control 4in1 / 8in1 User Manual](#)

Comprehensive user manual for Hama's 4in1 and 8in1 Universal Remote Controls, covering setup, operation, troubleshooting, and maintenance. Learn how to program your remote for various AV devices.

lang:en score:17 filesize: 762.56 K page_count: 112 document date: 2021-05-10



[\[pdf\]](#)

00012307gke 300 nl hama webresources article documents 00012 gke |||

00012307 VE10 20 PAP UNIVERSAL FERNBED. 8IN1 UNIVERSAL REM.CONTR.8IN1 4 057766 021349 ...

lang:en score:16 filesize: 14.08 K page_count: 1 document date: 2018-11-15




[\[pdf\]](#)

00012307mke 300 nl hama webresources article documents 00012 mke |||

Artikel-Nr./ Item No.: Menge/ Quantity: Anmerkung en / Remark s **00012307** VE60

Stck/ Pcs.: Artikelbezeichnung/Item description: UNIVERSAL FERNBED. 8IN1
UNIVERSAL REM.CONTR.8IN1 Auftrags-Nr./ PO No.: Karton-Nr./ Carton No.: 20
PAP 4 057766 021356 ...

lang:en score:16 filesize: 26.66 K page_count: 1 document date: 2018-11-15

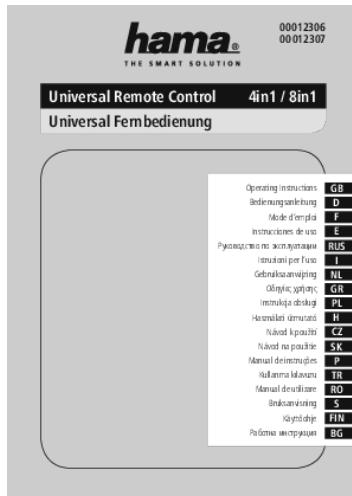


[\[pdf\] User Manual Instructions Guide](#)

hama sk návod 12307 bg cs de el en es fi fr hu it nl pl pt ro ru sv tr documents navody |||

00012306 00012307 Universal Remote Control Universal Fernbedienung 4in1 / 8in1

Operating Instructions GB Bedienungsanleitung D Mode d emploi F Instrucciones de uso E RUS Istruzioni per l uso I Gebruiksaanwijzing NL GR Instrukcja obsługi PL Hasznlati tmutat H Nvod k pouzit CZ Nvod na pouzitie...

lang:en score:12 filesize: 737.63 K page_count: 96 document date: 2016-07-01

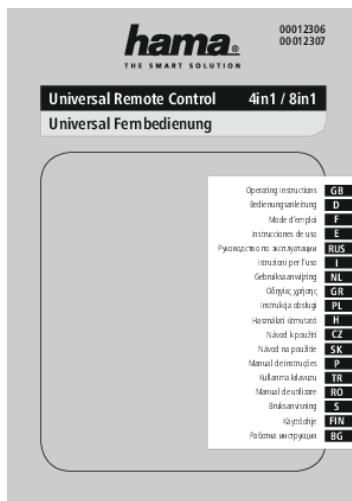

[\[pdf\] User Manual Instructions Guide](#)

Podręcznik użytkownika Hama Uniwersalny pilot 4w1 zakres 10m zdalne sterowanie 4 urządzeniami do telewizora TV 2 baterie AA 17 5x4 5x2 cm czarny Amazon pl Elektronika 91z3ZUdi2wL m media amazon images I |||

00012306 00012307 Universal Remote Control Universal Fernbedienung 4in1 / 8in1

Operating Instructions GB Bedienungsanleitung D Mode d emploi F Instrucciones de uso E RUS Istruzioni per l uso I Gebruiksaanwijzing NL GR Instrukcja obsługi PL Hasznlati tmutat H Nvod k pouzit CZ Nvod na pouzitie...

lang:en score:12 filesize: 664.8 K page_count: 95 document date: 2019-11-12



[\[pdf\] User Manual Instructions Guide](#)

PobierzInstrukcja obsługi Pilot uniwersalny HAMA 4w1 Media Expertv1mediaexpert pl products files 12 1230355 instrukcja obsługi |||

Universal Remote Control Universal Fernbedienung 00 012306 012307 4in1 / 8in1

Operating Instructio ... EXIT MODE V P 14 SETUP 12 3 456 789 AV SMART TV 0

APPS 13 Art.Nr.: 00012306 Art.Nr.: **00012307** AAA G Operating Instructions

Universal remote control Thank you for choosing a Hama pro...

lang:en score:11 filesize: 1.03 M page_count: 112 document date: 2022-12-23