#### Manuals+

Q & A | Deep Search | Upload

#### manuals.plus /

- AmazonBasics /
- AmazonBasics Heavy-Duty, Full Motion Articulating TV Wall Mount (Model PBH-991) User Manual

#### **AmazonBasics PBH-991**

# AmazonBasics Heavy-Duty, Full Motion Articulating TV Wall Mount

Model: PBH-991

#### INTRODUCTION

This manual provides detailed instructions for the safe and proper installation, operation, and maintenance of your AmazonBasics Heavy-Duty, Full Motion Articulating TV Wall Mount. Designed for 12-inch to 39-inch LED, LCD, and Flat Screen TVs, this mount offers flexibility and an optimal viewing experience. Please read all instructions carefully before beginning installation.

#### SAFETY INFORMATION

WARNING: Improper installation may result in serious personal injury or damage to equipment. If you do not understand these instructions or have doubts about the safety of the installation, consult a qualified professional.

- This mount is intended for use with televisions weighing up to 18 kg (40 lbs). Exceeding this weight limit may result in instability and potential injury.
- Ensure the wall structure can safely support the combined weight of the mount and the television.
- Do not install this product on drywall alone. It must be mounted to wood studs or solid concrete/brick walls.
- Always use a stud finder to locate the center of wood studs.
- Tighten all screws firmly but do not overtighten. Overtightening can damage the screws or the mounting surface.
- · Keep children away during installation.



This image shows the AmazonBasics full motion articulating TV wall mount in its folded position, highlighting the compact design and the integrated warning label regarding weight capacity and installation.

## PACKAGE CONTENTS

Verify that all components are present and undamaged before installation. If any parts are missing or defective, contact customer support.

- Articulating TV Wall Mount Assembly
- TV Mounting Brackets
- Wall Plate
- Bubble Level
- Installation Template
- Assorted Mounting Hardware (screws, anchors, washers)

# **Diverse Compatibility**

Fits VESA 200x200, 200x100,100x100, 75x75 mm



This image displays the complete set of installation components for the AmazonBasics TV wall mount, including a bubble level for accurate positioning, various screws and anchors, and a detailed installation template to guide the mounting process.

#### SETUP AND INSTALLATION

Follow these steps carefully for a secure installation.

# **Tools Required (Not Included):**

- Pencil
- Drill
- Drill Bits (appropriate for wall type and screw size)
- Phillips Head Screwdriver
- Stud Finder (for wood stud installation)
- · Measuring Tape

#### **Step 1: Determine Mounting Location**

Choose a location on your wall that is structurally sound and can support the weight of your TV and the mount. Use a stud finder to locate the center of two adjacent wood studs if mounting to wood. For concrete or brick

walls, ensure the wall is solid.

#### Step 2: Mark Drill Holes


Position the installation template at the desired height on the wall. Use the included bubble level to ensure it is perfectly horizontal. Mark the drill hole locations with a pencil. For wood studs, mark the center of the studs. For concrete/brick, mark the desired locations.

#### **Step 3: Drill Pilot Holes**

- For Wood Studs: Drill pilot holes into the center of the marked studs.
- For Concrete/Brick Walls: Drill pilot holes and insert the appropriate wall anchors (if included and suitable for your wall type).

## **Step 4: Mount the Wall Plate**

Align the wall plate with the drilled holes. Secure the wall plate to the wall using the provided lag bolts and washers. Tighten firmly with a wrench, ensuring the mount is level and secure.

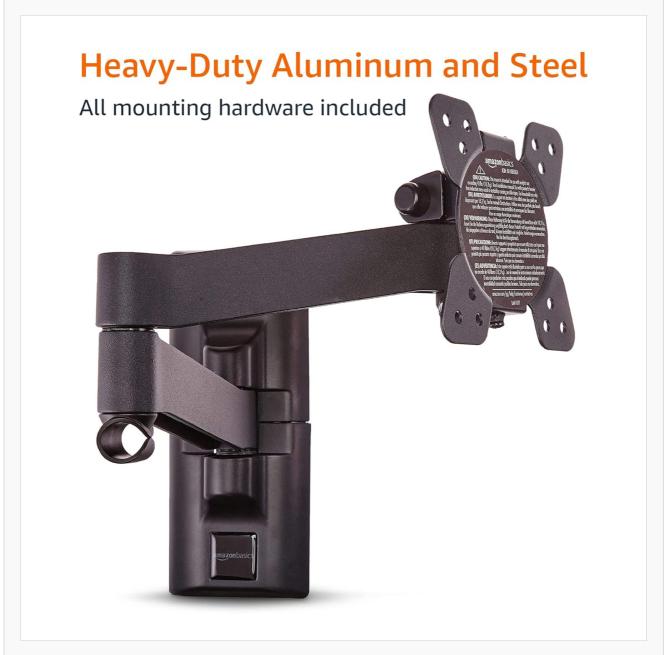

A side view of the AmazonBasics TV wall mount, illustrating its robust aluminum and steel construction. The image also indicates that all necessary mounting hardware is included for installation.

Identify the VESA mounting holes on the back of your television. Select the appropriate screws, washers, and spacers from the provided hardware kit that fit your TV's VESA pattern. Attach the TV mounting brackets to the back of your TV. Ensure the brackets are securely fastened and centered.



A diagram demonstrating the diverse VESA compatibility of the mount, fitting patterns such as 200x200, 200x100, 100x100, and 75x75 mm. It clarifies that VESA patterns correspond to the distance between the four screw holes on the back of the TV.

## Step 6: Mount TV to Wall Plate

With assistance, carefully lift the television and hook the TV brackets onto the wall plate. Ensure the TV is securely seated on the mount. Tighten any safety screws or locking mechanisms to prevent accidental dislodgement.




An example of the AmazonBasics TV wall mount installed in a home setting, securely holding a television on the wall and demonstrating its aesthetic integration and functional use.

# **OPERATING THE MOUNT (ADJUSTMENTS)**

Your full motion articulating TV wall mount allows for various adjustments to achieve the best viewing angle.

- Extension: Gently pull the TV away from the wall to extend the articulating arm. The mount can extend up to 16.1 inches (40.89 cm).
- Swivel: Rotate the TV left or right to adjust the horizontal viewing angle.
- Tilt: Loosen the tilt adjustment knobs (if present) on the TV brackets, adjust the TV to the desired vertical angle (+15 to -3 degrees), and then re-tighten the knobs to secure the position.

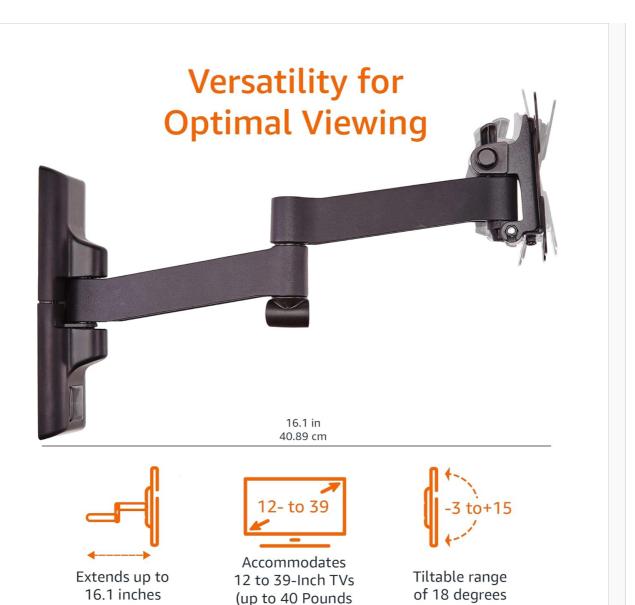

This diagram details the mount's versatility, showing it extends up to 16.1 inches (40.89 cm) from the wall, accommodates 12to 39-inch TVs (up to 40 pounds/18 kg), and offers a tiltable range of -3 to  $\pm$ 15 degrees.

(up to 40 Pounds



The AmazonBasics TV wall mount is shown fully extended, demonstrating its articulating arm capability to position the TV further from the wall for flexible viewing angles.

#### **Cable Management:**

Utilize the integrated cable management system to route and conceal cables for a neat and organized appearance. Secure cables along the articulating arm to prevent snagging during adjustments.

#### MAINTENANCE

- Periodically check all screws and bolts to ensure they remain tight and secure.
- Clean the mount with a soft, dry cloth. Avoid abrasive cleaners or solvents.
- Ensure no cables are pinched or stressed during TV adjustments.

# **T**ROUBLESHOOTING

• TV is not level: Check the wall plate installation with a bubble level. Adjust if necessary by slightly loosening and re-tightening the wall plate screws.

- **Mount feels unstable:** Re-check all mounting screws on both the wall plate and the TV brackets. Ensure the wall structure is adequate for the weight. Do not exceed the maximum weight capacity of 18 kg (40 lbs).
- **Difficulty adjusting TV:** Ensure no cables are obstructing movement. Check if any adjustment knobs (for tilt) are overtightened.

#### **SPECIFICATIONS**

Feature	Specification
Brand	AmazonBasics
Model	PBH-991
Compatible TV Sizes	12-inch to 39-inch
Maximum Weight Capacity	18 kg (40 lbs)
VESA Compatibility	75x75mm, 100x100mm, 200x100mm, 200x200mm
Tilt Range	+15 to -3 degrees
Extension from Wall	Up to 16.1 inches (40.89 cm)
Material	Alloy Steel
Product Dimensions	42.21 x 22 x 22 cm (folded)
Item Weight	1.54 kg

## **WARRANTY**

This AmazonBasics TV Wall Mount comes with a 1-year limited warranty from the date of purchase. This warranty covers manufacturing defects under normal use. For warranty claims or details, please contact customer support.

#### **CUSTOMER SUPPORT**

For assistance, troubleshooting, or warranty inquiries, please contact:

#### **Cloudtail India Private Limited**

**Customer Support Desk** 

6th & 7th Floor, Divyasree Chambers, 'B' Wing, #11, O'Shaugnessy Road, Langford Town, Bangalore,

Karnataka - 560025. Phone: 18004190416

Email: cloudtail@blubirch.com

© 2025 AmazonBasics. All rights reserved.

