

[Manuals.plus](#) /

› [We R Memory Keepers](#) /

› We R Memory Keepers Frame Punch Board Instruction Manual

We R Memory Keepers Frame Punch Board

We R Memory Keepers Frame Punch Board Instruction Manual

Model: Frame Punch Board

INTRODUCTION AND OVERVIEW

The We R Memory Keepers Frame Punch Board is a versatile tool designed for creating custom paper frames for various crafting projects. This system allows users to easily produce frames ranging from 2 inches to 12 inches, perfect for scrapbooking, card making, and other decorative applications. Its intuitive design ensures consistent and professional-looking results.

Product Features

- **Custom Frames:** Create custom paper frames quickly and easily.
- **Precision:** Features precision punches for consistent and professional results.
- **Adjustable Design:** Accommodates various sizes of photos and artwork, from 2 to 12 inches.
- **Durable Construction:** Ensures long-lasting use for repeated crafting projects.
- **Versatile:** Suitable for framing photos, artwork, and scrapbook pages.

SETUP

Before using your Frame Punch Board, ensure all components are present and undamaged. The package typically includes the punch board, an instruction sheet, and paper packaging. Remove all packaging materials.



Image: The We R Memory Keepers Frame Punch Board, showing the main unit, scoring tool, and corner punch.

Place the punch board on a stable, flat surface. Familiarize yourself with the measurement guides and the scoring and punching mechanisms.

OPERATING INSTRUCTIONS

Creating Custom Frames

1. **Determine Frame Size:** Decide on the desired outer dimensions of your frame. The board supports frames from 2 inches to 12 inches.
2. **Prepare Paper:** Cut your paper to the appropriate size for your chosen frame. The instruction sheet or the board itself will provide a guide for paper dimensions based on the desired frame size.
3. **Align and Punch First Corner:** Place the paper onto the punch board, aligning one corner with the designated guide. Use the corner punch to create the first corner cut.
4. **Score First Side:** After punching the corner, use the scoring tool to score along the guide for the first side of the frame.
5. **Rotate and Repeat:** Rotate your paper 90 degrees clockwise. Align the next corner with the guide, punch, and then score the next side. Repeat this process for all four corners of your frame.
6. **Remove Excess Paper:** Once all four sides are punched and scored, carefully remove the excess paper from the center to reveal your frame.
7. **Fold and Assemble:** Fold along the scored lines to give your frame depth. You may use adhesive to secure the folds if desired.

Your browser does not support the video tag.

Video: A demonstration of how to use the We R Memory Keepers Frame Punch Board to create custom paper frames.



Image: Close-up view of the corner punching action on the Frame Punch Board.



Image: Hands using the scoring tool to create a fold line on the paper after punching.



Image: Examples of finished paper frames created using the punch board, showcasing various sizes and designs.

MAINTENANCE

To ensure the longevity and optimal performance of your Frame Punch Board, follow these maintenance guidelines:

- **Cleaning:** Regularly wipe the surface of the punch board with a soft, dry cloth to remove paper dust and debris. Avoid using abrasive cleaners or solvents.
- **Blade Care:** The cutting blades are designed for durability. If you notice a decrease in cutting performance, ensure no paper scraps are obstructing the blade mechanism.
- **Storage:** Store the punch board in a clean, dry place away from direct sunlight and extreme temperatures. Keep the scoring tool and corner punch securely attached or stored nearby to prevent loss.

TROUBLESHOOTING

If you encounter issues while using your Frame Punch Board, consider the following:

- **Uneven Cuts:** Ensure your paper is properly aligned with the guides before punching and scoring. Apply even pressure when operating the punch and scoring tool.

- **Paper Jams:** If paper gets stuck, gently remove it. Avoid forcing the punch. Ensure you are not using paper that is too thick for the tool.
- **Dull Blades:** Over time, blades may become less sharp. While replacement blades are not typically available for this model, using appropriate paper thickness and avoiding excessive force can extend blade life.
- **Inconsistent Scoring:** Verify that the scoring tool is correctly seated in its track and that you are applying consistent pressure along the entire score line.

SPECIFICATIONS

Brand	We R Memory Keepers
Model	Frame Punch Board
Material	Paper (tool is plastic/metal)
Product Dimensions (L x W x H)	11.89" x 6.93" x 1.97"
Item Weight	0.06 Kilograms
Frame Sizes Supported	2 inches to 12 inches
Included Components	Punch Board, Instruction Sheet

WARRANTY AND SUPPORT

Warranty: The manufacturer states that warranty information is not applicable for this product. Please refer to the retailer's return policy for any issues upon purchase.

Customer Support: For further assistance or inquiries regarding your We R Memory Keepers Frame Punch Board, please visit the official We R Memory Keepers website or contact their customer service department. You may also refer to the retailer where the product was purchased for support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B01KBIIWPA>

More documents and user manuals: <https://manuals.plus/>