

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [VAXCEL](#) /

› [VAXCEL Yellowstone 56-inch Ceiling Fan User Manual \(Model FN56305BBZ\)](#)

## VAXCEL FN56305BBZ

# VAXCEL Yellowstone 56-inch Ceiling Fan User Manual

Model: FN56305BBZ

## INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your VAXCEL Yellowstone 56-inch Burnished Bronze Indoor Ceiling Fan. Please read all instructions carefully before beginning installation to ensure safe and proper use of the product. Keep this manual for future reference.



*Image: The VAXCEL Yellowstone 56-inch ceiling fan, featuring a burnished bronze finish, a wildlife-themed motor housing with moose and trees, and five reversible rosewood-dark walnut blades.*

## PACKAGE CONTENTS

Verify that all components listed below are included in your package:

- Ceiling Fan Unit (Motor Housing, Blades)
- Remote Control
- Battery (1 x 9V)
- Bulb (LED)
- Shade (Glass)

- Mounting Hardware
- Down Rod (for standard and low ceilings)



*Image: An exploded view or collection of the main components of the VAXCEL Yellowstone ceiling fan, showing the motor, blades, and light fixture.*

## IMPORTANT SAFETY INFORMATION

---

Always follow basic safety precautions when installing and operating electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- **Read all instructions:** Before installing or using the fan.
- **Electrical Disconnection:** Turn off power at the main circuit breaker or fuse box before beginning installation or performing any maintenance.
- **Qualified Electrician:** Installation should be performed by a qualified electrician if you are not familiar with electrical wiring.

- **Mounting Support:** Ensure the mounting structure can support the weight of the fan (approximately 21.2 pounds).
- **Blade Clearance:** Maintain adequate clearance between the fan blades and any obstructions.
- **Indoor Use Only:** This fan is designed for indoor use only.

## SETUP AND INSTALLATION

---

### Pre-Installation Considerations

- **Ceiling Height:** The fan can be installed using the provided down rod for low or standard ceiling heights. For higher ceilings, a longer down rod (up to 72 inches) can be purchased separately.
- **Angled Ceilings:** This fan accommodates angled or sloped ceilings up to 23 degrees.
- **Light Kit:** The fan can be installed with or without a light kit. Light kits are sold separately if not included with your specific model.

### Installation Steps (General Overview)

1. **Power Off:** Disconnect power at the circuit breaker.
2. **Mounting Bracket:** Securely attach the mounting bracket to the ceiling joist or an approved fan brace.
3. **Assemble Down Rod:** Attach the down rod to the motor housing.
4. **Hang Fan:** Carefully lift the fan assembly and hang it from the mounting bracket.
5. **Wiring:** Connect the electrical wires according to local electrical codes and the wiring diagram provided in the full instruction manual.
6. **Attach Blades:** Secure the five fan blades to the motor housing. The blades are reversible, offering Rosewood or Dark Walnut finishes.
7. **Install Light Kit (if applicable):** Attach the light kit and glass shade. Insert the LED bulb.
8. **Final Checks:** Ensure all connections are secure and the fan is properly balanced.

CUSTOMIZABLE TO FIT YOUR DECOR



STANDARD



SLOPED

MULTIPLE  
OPTIONS



SHOWN WITH DARK WALNUT  
FAN BLADES



REVERSIBLE BLADES



MULTIPLE  
OPTIONS

ROSEWOOD  
OR  
DARK WALNUT  
BLADES

*Image: An illustration demonstrating the fan's compatibility with both standard and sloped ceiling installations, alongside an image of the reversible fan blades (Rosewood and Dark Walnut sides).*

## OPERATING INSTRUCTIONS

### Remote Control Operation

The VAXCEL Yellowstone fan is equipped with a remote control for convenient operation. Ensure the included 9V battery is installed in the remote.

- **Fan Speed:** Use the remote to select one of the 3 available fan speeds.
- **Light Control:** Turn the LED light on or off, and adjust brightness if the dimmable feature is supported by your light kit and bulb.

### Pull Chain Operation

A pull chain is included for manual adjustment of fan speed, providing an alternative to the remote control.

## Reversible Air Flow

The fan features a manual reverse air flow switch, typically located on the motor housing. This allows you to change the blade direction seasonally:

- **Summer Mode:** Blades rotate counter-clockwise to push cool air down, creating a cooling effect.
- **Winter Mode:** Blades rotate clockwise to draw warm air up and distribute it evenly, reducing energy usage.



*Image: A visual representation of the fan's convenient controls, including the remote control and icons indicating 3 fan speeds, seasonal reverse mode, light on/off, and dimmable functionality.*

## MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your ceiling fan.

- **Cleaning:** Periodically clean the fan blades and motor housing with a soft, damp cloth. Avoid using abrasive cleaners that may damage the finish.

- **Blade Tightness:** Check blade screws annually to ensure they are tight. Loose blades can cause wobbling and noise.
- **Light Bulb Replacement:** Replace the LED bulb as needed. Ensure power is off before replacing.
- **Remote Battery:** Replace the 9V battery in the remote control when its range decreases or it stops functioning.

## TROUBLESHOOTING

---

Refer to the following common issues and solutions before contacting customer support.



Problem	Possible Cause	Solution
Fan does not start	No power to the fan; loose wiring; remote battery dead.	Check circuit breaker; verify wiring connections; replace remote battery.
Fan wobbles	Loose blade screws; unbalanced blades; loose mounting.	Tighten all blade screws; ensure blades are balanced (use balancing kit if necessary); check mounting bracket security.
Light does not work	Bulb loose or burnt out; wiring issue; remote battery dead.	Ensure bulb is tight; replace bulb; check light kit wiring; replace remote battery.
Remote not working	Dead battery; remote not paired (if applicable).	Replace 9V battery; refer to full manual for remote pairing instructions.

## SPECIFICATIONS

---

Feature	Detail
Brand	VAXCEL
Model Name	Yellowstone
Model Number	FN56305BBZ
Color	Burnished Bronze (Moose design)
Material	Alloy Steel, Glass (Shade)
Style	Rustic
Product Dimensions	56"L x 56"W x 18"H
Item Weight	21.2 pounds
Indoor/Outdoor Usage	Indoor
Power Source	Corded Electric
Installation Type	Rod Mount (Semi Flush Mount)
Special Features	3 Speeds, Dimmable (with compatible bulb/kit), Remote Controlled, Reversible Blades, Sloped Ceiling Compatible
Control Method	Remote, Pull Chain

Feature	Detail
Light Source Type	LED
Number of Light Sources	1
Voltage	120 Volts
Number of Blades	5
Air Flow Capacity	4887 Cubic Feet Per Minute
Batteries Required	1 x 9V (included for remote)
UPC	884656690873
Certification	ETL Listed

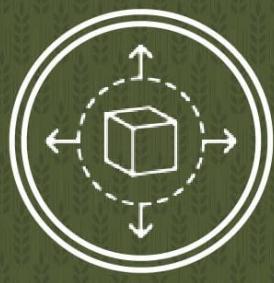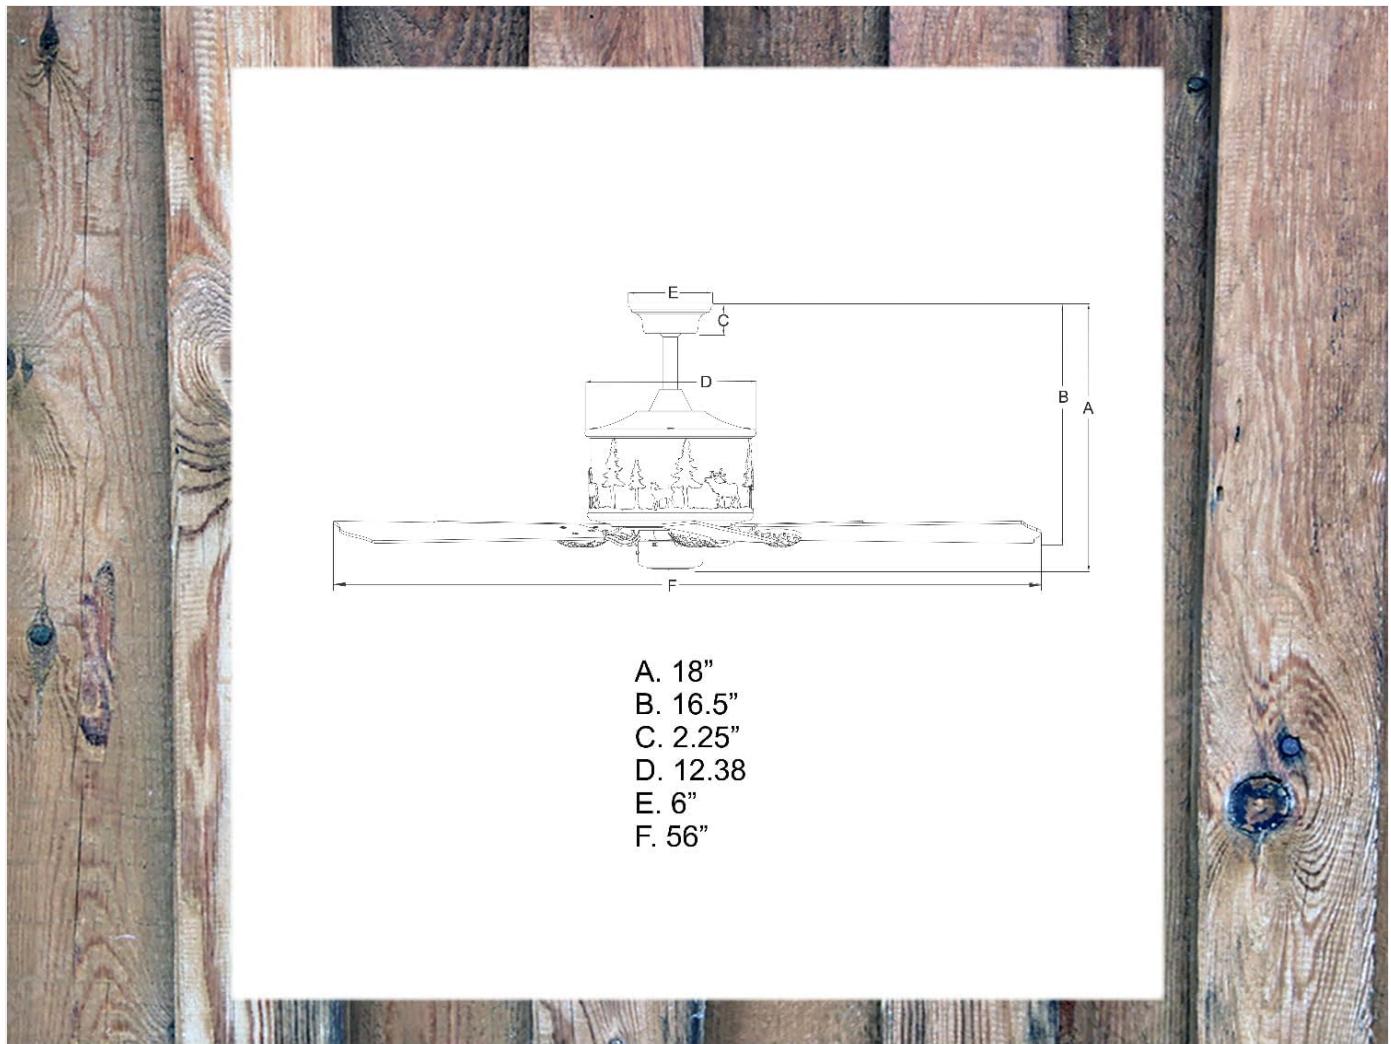

## PRODUCT DIMENSIONS

*Image: A technical diagram illustrating the precise dimensions of the VAXCEL Yellowstone ceiling fan, including overall height, width, and*

blade span.



*Image: The VAXCEL Yellowstone ceiling fan installed in a living space, accompanied by text indicating its suitability for rooms up to 20'x20' or smaller, and optimized air flow efficiency for main bedrooms, family rooms, and dining rooms.*

## WARRANTY INFORMATION

This VAXCEL product comes with a limited warranty. For specific details regarding warranty coverage, duration, and terms, please refer to the warranty card included with your purchase or contact VAXCEL customer support directly. Keep your proof of purchase for warranty claims.

## CUSTOMER SUPPORT

For further assistance, technical support, or to inquire about replacement parts, please contact VAXCEL customer service.

- **Brand:** VAXCEL

- **Website:** [Visit the VAXCEL Store on Amazon](#)
- **Model Number:** FN56305BBZ

© 2023 VAXCEL. All rights reserved.