

Unnecto U510-BLK

Unnecto Drone XS Smartphone User Manual

Model: U510-BLK

1. INTRODUCTION

Welcome to the Unnecto Drone XS user manual. This guide provides instructions for setting up, operating, and maintaining your new smartphone. The Unnecto Drone XS is a compact 3.5-inch Android smartphone featuring a 1.2 GHz processor, 4GB internal storage, and 512MB RAM, running Android 4.4 KitKat. It offers access to the Google Play Store and integrates with Google services, providing a comprehensive mobile experience.

2. PACKAGE CONTENTS

Before you begin, please verify that your package contains the following items:

- Unnecto Drone XS Smartphone
- Rechargeable Battery
- Charging Adapter
- Micro USB Cable
- Headset with Microphone

3. DEVICE LAYOUT

Familiarize yourself with the physical components of your Unnecto Drone XS smartphone.



Figure 3.1: Front, back, and side views of the Unnecto Drone XS smartphone, showing the display, cameras, and control buttons.



Figure 3.2: Rear view of the Unnecto Drone XS, highlighting the main camera, flash, and Unnecto logo.



Figure 3.3: Right side of the Unnecto Drone XS, showing the power/lock button and volume control buttons.



Figure 3.4: Left side of the Unnecto Drone XS, typically featuring the SIM/microSD card slot cover.

4. SETUP

4.1. Inserting SIM Card and Battery

To begin using your Unnecto Drone XS, you will need to install the SIM card and battery.

1. Carefully remove the back cover of the phone.
2. Locate the SIM card slot(s). Insert your GSM SIM card(s) into the designated slot(s) with the gold contacts facing down.

3. If desired, insert a microSD card (up to 32GB) into the microSD card slot for expanded storage.
4. Insert the battery into its compartment, ensuring the gold contacts align with the phone's terminals.
5. Replace the back cover, pressing gently until it clicks into place.

4.2. Charging the Battery

Before first use, fully charge the device battery. Use only the provided charging adapter and Micro USB cable.

1. Connect the Micro USB cable to the charging port on your phone.
2. Connect the other end of the Micro USB cable to the charging adapter.
3. Plug the charging adapter into a standard electrical outlet.
4. The battery indicator on the screen will show charging status. Disconnect the charger once the battery is full.

4.3. Powering On/Off

- **To Power On:** Press and hold the Power button (located on the right side of the device) until the screen lights up.
- **To Power Off:** Press and hold the Power button until the power options menu appears. Select 'Power off' and confirm.

5. OPERATING YOUR DEVICE

This section covers the fundamental operations of your Unnecto Drone XS smartphone.

5.1. Basic Navigation

- **Touchscreen:** Tap to select, swipe to scroll, pinch to zoom.
- **Home Screen:** The central hub for your apps and widgets. Swipe left or right to access additional screens.
- **Notification Panel:** Swipe down from the top of the screen to view notifications and quick settings.

5.2. Making Calls

1. Tap the 'Phone' icon on the home screen.
2. Enter the phone number using the dial pad.
3. Tap the 'Call' button to initiate the call.
4. To answer an incoming call, swipe the green phone icon to the right. To reject, swipe the red phone icon to the left.

5.3. Sending Messages

1. Tap the 'Messaging' icon.
2. Tap the 'New Message' icon (usually a plus sign or a speech bubble).
3. Enter the recipient's number or select from contacts.
4. Type your message in the text field.
5. Tap 'Send'.

5.4. Connecting to Wi-Fi

1. Go to 'Settings' > 'Wi-Fi'.
2. Toggle the Wi-Fi switch to 'On'.
3. Select your desired Wi-Fi network from the list.
4. If prompted, enter the network password and tap 'Connect'.

5.5. Using the Camera

The Unnecto Drone XS features a 3 MP rear camera and a 1.3 MP front camera.

1. Tap the 'Camera' icon on the home screen.
2. Frame your shot using the screen as a viewfinder.
3. Tap the 'Shutter' button to take a photo.
4. To switch between front and rear cameras, tap the camera switch icon.

5.6. Google Play Store

Access the Google Play Store to download and install applications, games, movies, and more.

1. Ensure you have an active internet connection (Wi-Fi or mobile data).
2. Tap the 'Play Store' icon on your home screen or app drawer.
3. Sign in with your Google account or create a new one.
4. Browse or search for apps and content.
5. Tap 'Install' to download and install your chosen app.

6. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your device.

6.1. Battery Care

- Avoid exposing the battery to extreme temperatures (hot or cold).
- Do not leave the phone charging for excessively long periods after it is fully charged.
- If the phone will not be used for an extended period, charge the battery to about 50% before storing it.

6.2. Cleaning

- Use a soft, lint-free cloth to clean the screen and body of the phone.
- Avoid using harsh chemicals, abrasive cleaners, or aerosol sprays.
- Keep ports free of dust and debris.

6.3. Software Updates

Periodically check for software updates to ensure your device has the latest features and security enhancements. Go to 'Settings' > 'About phone' > 'System updates'.

7. TROUBLESHOOTING

This section addresses common issues you might encounter with your Unnecto Drone XS.

Problem	Solution
Phone does not turn on	Ensure the battery is properly inserted and charged. Connect the charger and try again.
No network signal	Check if the SIM card is correctly inserted. Verify that mobile data is enabled in settings. Try restarting the phone.

Problem	Solution
Apps are crashing or freezing	Restart the phone. Clear the cache of the problematic app (Settings > Apps > [App Name] > Storage > Clear cache).
Slow performance	Close unnecessary background applications. Free up internal storage by deleting unused apps or moving files to a microSD card. Restart the device.
Cannot connect to Wi-Fi	Ensure Wi-Fi is enabled on the phone and the router is working. Re-enter the Wi-Fi password. Try restarting both the phone and the router.

8. SPECIFICATIONS

Detailed technical specifications for the Unnecto Drone XS (Model U510-BLK).

Feature	Value
Model Name	Drone XS
Model Number	U510-BLK
Operating System	Android 4.4 KitKat
CPU Model	1.2GHz Cortex A9 Processor
CPU Speed	1.2 GHz
RAM Memory Installed Size	512 MB
Internal Storage	4 GB
Expandable Storage	Up to 32 GB via MicroSD card
Screen Size	3.5 Inches
Display Resolution	480x320 pixels
Rear Camera	3 MP
Front Camera	1.3 MP
Connectivity Technologies	Bluetooth, Wi-Fi
Cellular Technology	GSM (Unlocked)
Audio Jack	3.5 mm
Phone Talk Time	Up to 6 Hours
Battery	1 Lithium Ion battery (included)
Product Dimensions	4.53 x 2.4 x 0.41 inches

Feature	Value
Item Weight	1 pound
Manufacturer	Parktel USA
Date First Available	August 12, 2016

9. WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries regarding your Unnecto Drone XS, please refer to the official Unnecto website or contact their customer service department. Keep your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question