

ORBITA OBI-W08580

ORBITA Siena 1 Watch Winder Instruction Manual

Model: OBI-W08580 | Brand: ORBITA

1. INTRODUCTION

Thank you for choosing the ORBITA Siena 1 Watch Winder. This device is designed to keep your automatic watch accurately wound when not being worn, ensuring its longevity and readiness for use. This manual provides essential information for the safe and efficient operation of your watch winder.



Image 1.1: ORBITA Siena 1 Watch Winder (Burl finish)

2. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the watch winder.
- Keep the watch winder away from water or excessive moisture.
- Do not expose the device to direct sunlight or extreme temperatures.
- Use only the specified power source (batteries as indicated).
- Do not attempt to disassemble or repair the unit yourself. Contact qualified service personnel.
- Keep out of reach of children.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- ORBITA Siena 1 Watch Winder Unit
- Watch Cushion

- Instruction Manual (this document)
- Batteries (if included, check packaging)

4. SETUP GUIDE

4.1. Power Source (Battery Installation)

The ORBITA Siena 1 is designed for battery operation, offering flexible placement. To install batteries:

1. Locate the battery compartment on the rear or bottom of the winder unit.
2. Open the battery compartment cover.
3. Insert the required batteries (e.g., D-cell batteries, quantity as specified on the compartment) according to the polarity indicators (+/-).
4. Close the battery compartment cover securely.



Image 4.1: Rear view with battery compartment and power switch

4.2. Inserting Your Watch

To properly place your automatic watch into the winder:

1. Open the winder's lid.

2. Gently place your watch onto the provided watch cushion. Ensure the watch is securely fitted on the cushion.
3. Insert the watch cushion with the watch into the winder's rotating mechanism. Make sure it is seated firmly.
4. Close the winder's lid.



5. OPERATING YOUR WATCH WINDER

The ORBITA Siena 1 features a simple operation:

1. After installing batteries and placing your watch, locate the power switch (refer to Image 4.1).
2. Flip the switch to the 'ON' position. The winder will begin its winding cycle.
3. The winder operates on a pre-programmed cycle, typically rotating for a period and then resting, to simulate natural wrist movement and prevent overwinding. This cycle is designed to keep most automatic watches wound.
4. To stop the winder, flip the power switch to the 'OFF' position.

Note: The specific winding program (e.g., turns per day, rotation direction) is factory set for optimal performance for a wide range of automatic watches. There are no user-adjustable settings for winding modes on this model.

6. CARE AND MAINTENANCE

- **Cleaning:** Wipe the exterior of the winder with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries when the winder's rotation becomes inconsistent or stops. Always replace all batteries at the same time with new ones of the same type.
- **Storage:** If storing the winder for an extended period, remove the batteries to prevent leakage.
- **Watch Cushion:** Ensure the watch cushion remains clean and free of debris to protect your watch.

7. TROUBLESHOOTING GUIDE

Problem	Possible Cause	Solution
Winder does not rotate.	Batteries are dead or incorrectly installed.	Check battery polarity and replace with fresh batteries.
Watch is not winding properly.	Watch is not seated correctly on the cushion. Watch requires a different winding program.	Ensure watch is secure. Consult your watch manufacturer for specific winding requirements (Turns Per Day - TPD and direction). While the Siena 1 has a fixed program, some watches may require specific settings not met by a universal winder.
Unusual noise during operation.	Internal mechanism issue.	Discontinue use and contact customer support. Do not attempt to repair.

8. PRODUCT SPECIFICATIONS

- **Model:** OBI-W08580 (Burl) / W08560 (Teak)
- **Brand:** ORBITA

- **Power Source:** Battery-powered (specific battery type and quantity typically indicated in battery compartment)
- **Winding Program:** Pre-programmed Roterwind method (fixed cycle)
- **Material:** Wood finish (Burl or Teak)
- **Capacity:** 1 automatic watch



Image 8.1: ORBITA Siena 1 in Teak (left) and Burl (right) finishes

9. WARRANTY AND SUPPORT

9.1. Warranty Information

ORBITA products are manufactured to high standards. This product is covered by a limited warranty against defects in materials and workmanship. The specific terms and duration of your warranty may vary by region and retailer. Please retain your proof of purchase for warranty claims.

9.2. Customer Support

For technical assistance, warranty service, or general inquiries, please contact your authorized ORBITA retailer or visit the official ORBITA website for contact information. When contacting support, please have your model number (OBI-W08580) and purchase date available.