



[Manuals.plus](#) /

› [Smoby](#) /

› Smoby Rallye Electric Quad 33051 User Manual

## Smoby 033051

# Smoby Rallye Electric Quad 33051 User Manual

Model: 033051 | Brand: Smoby

[Introduction](#)

[Setup](#)

[Operating Instructions](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

## 1. INTRODUCTION

Thank you for choosing the Smoby Rallye Electric Quad. This manual provides essential instructions for the safe assembly, operation, maintenance, and troubleshooting of your electric quad. Please read this entire manual carefully before assembly or use to ensure proper function and safety.

**Recommended Age:** This product is suitable for children aged 2 years and above (24 months minimum recommended by manufacturer).

**Safety Warning:** Adult supervision is required at all times. Ensure the child wears appropriate safety gear, such as a helmet, when operating the quad. Do not use near roads, steep inclines, or bodies of water.

## 2. SETUP

### 2.1. Unpacking and Assembly

Carefully remove all components from the packaging. Assembly is required. Please refer to the detailed assembly instructions provided in the separate assembly guide included with your product. Ensure all parts are accounted for before beginning assembly.



**Image 1:** Smoby Rallye Electric Quad in its packaging. This image illustrates how the product is presented, indicating that assembly is required upon unboxing.

## 2.2. Battery Connection and Initial Charge

The 6V battery and charger are included. Before first use, the battery must be fully charged. To access the battery for connection and charging, the seat must be unscrewed. Connect the battery terminals as indicated in the assembly guide. Plug the charger into a standard wall outlet and connect it to the quad's charging port. Allow the battery to charge for the recommended duration (typically 8-12 hours for the first charge, refer to the charger's instructions for exact times). Do not overcharge.

## 2.3. Pre-Operation Checks

- Ensure all screws and fasteners are securely tightened.
- Check that the wheels are properly attached and rotate freely.
- Verify that the battery is fully charged and correctly connected.
- Test the accelerator and steering for proper function before allowing a child to operate.

## 3. OPERATING INSTRUCTIONS

### 3.1. Controls

The Smoby Rallye Electric Quad is operated via a hand control for acceleration, typically located on the handlebar. Steering is managed by turning the handlebars left or right.

### 3.2. Starting and Driving

1. Ensure the child is seated comfortably and securely on the quad.
2. Instruct the child to hold the handlebars firmly.
3. To move forward, press the accelerator control. The quad has a maximum speed of 5 km/h.
4. To steer, turn the handlebars in the desired direction.
5. To stop, release the accelerator control. The quad will gradually slow down.



**Image 2:** A young child operating the Smoby Rallye Electric Quad. This image demonstrates the typical use of the quad by a child, highlighting the riding position and controls.

### 3.3. Driving Environment

The quad features 2-wheel drive, providing better traction on various surfaces. Operate the quad on flat, dry surfaces away from obstacles. Avoid uneven terrain, sand, or gravel that could impede movement or cause instability. Always supervise the child during operation.

## 4. MAINTENANCE

### 4.1. Cleaning

Clean the quad regularly with a damp cloth. Do not use abrasive cleaners or solvents. Avoid spraying water directly onto electrical components.

### 4.2. Battery Care

- Recharge the 6V battery after each use. The battery provides approximately 2 hours of autonomy.
- Do not allow the battery to fully discharge before recharging.
- If the quad will not be used for an extended period, charge the battery fully and then recharge it every 30 days to maintain battery health.

- Always disconnect the charger once the battery is fully charged.

### 4.3. Storage

Store the quad in a dry, cool place, away from direct sunlight and moisture. Ensure the battery is charged before storing for long periods.

## 5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Quad does not move.	Battery not connected or discharged.	Check battery connections. Charge the battery fully.
Quad moves slowly or loses power quickly.	Battery low or not holding charge.	Recharge the battery. If the problem persists, the battery may need replacement.
Quad makes unusual noises.	Loose parts or debris in the motor/wheels.	Inspect for loose components and remove any obstructions.
Quad is unstable during turns.	Operating on uneven surfaces or turning too sharply.	Ensure operation on flat surfaces. Instruct child to make wider, slower turns. Always supervise.

## 6. SPECIFICATIONS

**Model Number:** 033051

**Brand:** Smoby

**Material:** Plastic

**Product Dimensions (L x W x H):** 82.4 cm x 45.3 cm x 54.7 cm

**Item Weight:** 9.6 Kilograms

**Battery:** 6V (included)

**Battery Autonomy:** Approximately 2 hours

**Maximum Speed:** 5 km/h

**Drive System:** 2-wheel drive

**Recommended Age:** 2 years and up (24 months minimum)

**Assembly Required:** Yes

## 7. WARRANTY & SUPPORT

Specific warranty information is not provided within this manual. For details regarding warranty coverage, returns, or technical support, please refer to the documentation included with your purchase or contact your retailer or the manufacturer directly. Keep your proof of purchase for any warranty claims.