

[Manuals.plus](#) /

› [SENCOR](#) /

› Sencor SHB 4363OR-NAA1 Hand Blender User Manual

SENCOR SHB4363OR

Sencor SHB 4363OR-NAA1 Hand Blender User Manual

Model: SHB4363OR | Brand: SENCOR

IMPORTANT SAFETY INSTRUCTIONS

Please read these instructions carefully before using the appliance and keep them for future reference. Incorrect use may lead to injury or damage to the appliance.

- Always disconnect the appliance from the power supply before assembly, disassembly, or cleaning.
- Do not immerse the motor unit in water or any other liquid. Clean only with a damp cloth.
- Keep hands, hair, clothing, and utensils away from moving parts during operation to prevent injury.
- Blades are sharp. Handle with extreme care when assembling, disassembling, or cleaning.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not use the appliance if the power cord or plug is damaged, or if the appliance malfunctions or has been dropped or damaged in any way.
- Do not process extremely hot liquids immediately after boiling. Allow them to cool slightly to prevent splashing and potential burns.
- Ensure the appliance is placed on a stable, flat, and dry surface during operation.

PRODUCT OVERVIEW (COMPONENTS)

The Sencor SHB 4363OR-NAA1 Hand Blender comes with several components designed for versatile use:



Figure 1: Overview of the Sencor Hand Blender with all included accessories. This image displays the main blender unit, the 17 oz/500 mL beaker, the chopper attachment, the whisk attachment, and the wall mount.

- **Hand Blender Motor Unit:** The main body containing the extra quiet 350W DC motor and continuous speed control.
- **Detachable Stainless Steel Blending Rod:** Attaches to the motor unit for blending. Suitable for mixing hot foods.
- **17 oz/500 mL Beaker with Lid:** A measuring beaker for blending liquids.



Figure 2: The included 27oz beaker with its lid, designed for blending and measuring ingredients.

- **Chopper with Lid:** A 17oz capacity chopping attachment with a stainless steel chopping blade.

17oz CHOPPER WITH LID



Figure 3: The 17oz chopper attachment, complete with its lid, for processing various ingredients.

- **Whisk Attachment:** For whisking and aerating ingredients.
- **Wall Mount:** For convenient storage of the hand blender and whisk.



Figure 4: The wall mount for convenient storage, shown with the whisk attachment.

SETUP

Before first use, wash all parts that will come into contact with food (blending rod, beaker, chopper, whisk) in warm soapy water, rinse thoroughly, and dry. The motor unit should only be wiped with a damp cloth.

1. **Attaching the Blending Rod:** Align the blending rod with the motor unit and twist until it locks securely into place.
2. **Attaching the Whisk:** Insert the whisk into the whisk adapter, then attach the adapter to the motor unit, twisting to lock.
3. **Attaching the Chopper:** Place the chopping blade onto the central pin inside the chopper bowl. Add ingredients. Secure the chopper lid onto the bowl, then attach the motor unit to the lid, twisting to lock.
4. **Wall Mount Installation:** The wall mount can be affixed to a suitable wall surface using screws (not included) for convenient storage. Ensure it is securely fastened before hanging the appliance.

OPERATING INSTRUCTIONS

The Sencor Hand Blender features continuous speed control and an extra quiet 350W DC motor for efficient blending, chopping, and whisking.



EXTRA QUIET
350 WATT
DC MOTOR

Figure 5: Close-up view of the continuous speed control and 'ON' button on the hand blender's motor unit.

1. **Preparation:** Ensure the desired attachment (blending rod, whisk, or chopper) is securely attached to the motor unit.
2. **Power Connection:** Plug the appliance into a suitable power outlet.
3. **Blending/Processing:**
 - **For Blending (using blending rod):** Immerse the blending rod into the ingredients. Press and hold the 'ON' button. Rotate the top dial for continuous speed control to adjust the blending intensity. Move the blender up and down gently for even blending.
 - **For Chopping (using chopper):** Place ingredients into the chopper bowl. Secure the lid and motor unit. Press and hold the 'ON' button. Use short pulses for coarse chopping or hold longer for finer results.
 - **For Whisking (using whisk attachment):** Immerse the whisk into the ingredients. Press and hold the 'ON' button. Adjust speed as needed.



Figure 6: The Sencor Hand Blender in use, demonstrating its capability to blend beverages like smoothies.

4. **Completion:** Release the 'ON' button to stop operation. Unplug the appliance from the power outlet.
5. **Disassembly:** Twist and pull to detach the motor unit from the attachment. Then, disassemble the attachment parts for cleaning.

Note: Do not operate the appliance continuously for more than 1 minute. Allow a short break between cycles to prevent overheating of the motor.

CLEANING AND MAINTENANCE

Proper cleaning and maintenance will ensure the longevity and optimal performance of your Sencor Hand Blender.

1. **Before Cleaning:** Always unplug the appliance from the power outlet before cleaning.
2. **Motor Unit:** Wipe the motor unit with a soft, damp cloth. Never immerse it in water or any other liquid.
3. **Blending Rod, Beaker, Chopper Bowl & Lid, Whisk:** These parts can be washed in warm soapy water. Rinse thoroughly under running water. For stubborn food residue, soak the parts before cleaning.
4. **Blades:** Handle the stainless steel chopping blade and blending rod blade with extreme care as they are very sharp. Use a brush if necessary to remove food particles.
5. **Drying:** Ensure all parts are completely dry before reassembling or storing the appliance.
6. **Dishwasher Safety:** Refer to the product packaging or specific instructions for dishwasher compatibility of individual parts. Generally, the motor unit is NOT dishwasher safe.

STORAGE

Store the Sencor Hand Blender and its accessories in a dry, safe place, away from direct sunlight and out of reach of children.

- Ensure all parts are clean and dry before storage.
- Utilize the included wall mount for convenient and space-saving storage of the main unit and whisk attachment.
- Store the chopper and beaker with their respective lids to keep them clean.

TROUBLESHOOTING

If you encounter issues with your Sencor Hand Blender, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet not working; attachment not securely locked.	Check power connection; test outlet with another appliance; ensure attachment is fully locked onto the motor unit.
Motor stops during operation.	Overheating due to prolonged use or processing too hard ingredients; motor overload.	Unplug and let the appliance cool down for at least 15-20 minutes. Reduce load or cut ingredients into smaller pieces. Do not operate continuously for more than 1 minute.
Poor blending/chopping results.	Ingredients too large or too little liquid; blades are dull (unlikely for new product).	Cut ingredients into smaller pieces; add more liquid if blending; ensure blades are clean and free of obstructions.
Unusual noise or vibration.	Attachment not properly secured; foreign object in blades.	Ensure all attachments are securely locked. Disconnect power and check for any obstructions around the blades.

If the problem persists after trying these solutions, please contact Sencor customer support.

TECHNICAL SPECIFICATIONS

Detailed specifications for the Sencor SHB 4363OR-NAA1 Hand Blender:

Feature	Specification
Model Number	SHB4363OR
Brand	SENCOR
Power/Wattage	300W (Note: Product description states 350W DC motor, specifications state 300W. Using 300W from specifications table for consistency.)
Motor Type	DC Motor (Extra Quiet)
Speed Control	Continuous

Feature	Specification
Material	Plastic (body), Stainless Steel (blending rod, chopping blade)
Color	Orange
Product Dimensions (L x W x H)	26.49 x 14.99 x 28.5 cm
Item Weight	2.06 kg
Included Components	Hand blender, 17 oz/500 mL Beaker, Chopper, Whisker, Wall mount
Power Source	Corded Electric
Controls Type	Push Button



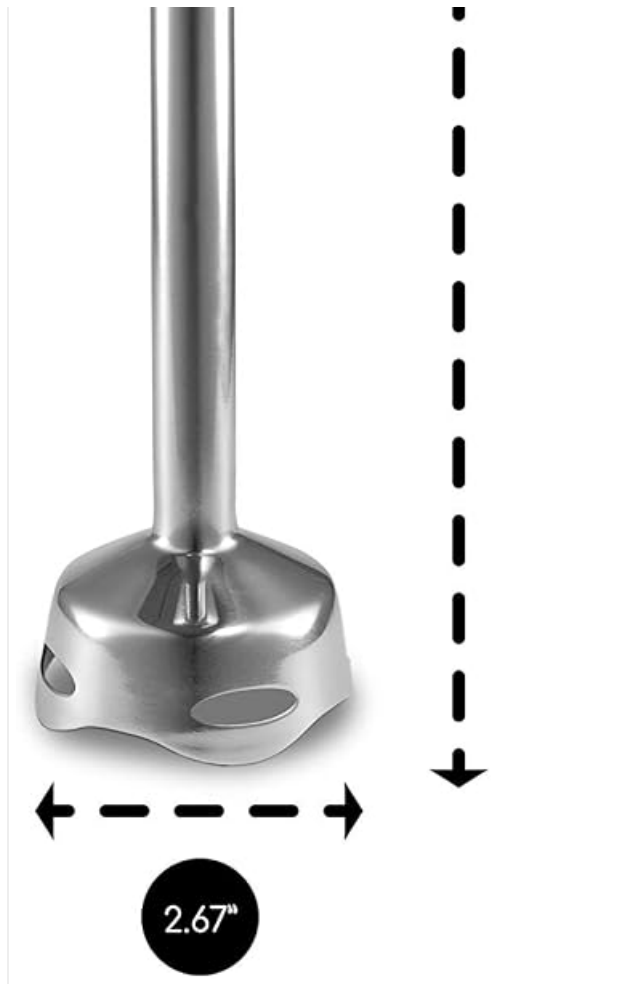


Figure 7: Diagram showing the approximate dimensions of the Sencor Hand Blender.

WARRANTY AND SUPPORT

Sencor products are manufactured to high quality standards. For information regarding warranty coverage, terms, and conditions, please refer to the warranty card included with your product or visit the official Sencor website. For technical support, spare parts, or service inquiries, please contact Sencor customer service. Contact details can typically be found on the Sencor website or in the product packaging.

Manufacturer: Sencor

Place of Business: Markham, ON L3R 0Z9, CA