

## Candy CMXW 22 DS

# Candy CMXW22DS Microwave Oven User Manual

Your comprehensive guide to operating and maintaining your Candy CMXW22DS solo microwave oven.

## 1. SETUP

### 1.1 Unpacking

Carefully remove the microwave oven from its packaging. Inspect the appliance for any signs of damage. Retain the packaging materials for future transport or storage if needed.

### 1.2 Placement

Place the microwave oven on a flat, stable surface capable of supporting its weight. Ensure there is adequate ventilation around the unit. Maintain a minimum clearance of 20 cm on the left side (where the ventilation is located) and above the unit, and 10 cm at the rear and right side for proper airflow. Do not block any ventilation openings.

### 1.3 Electrical Connection

Before plugging in the appliance, ensure that the voltage indicated on the rating plate matches your local power supply. Connect the microwave oven to a properly grounded electrical outlet. Do not use extension cords or adapters.



This image displays the front of the Candy CMXW22DS microwave oven. It features a sleek silver finish with a black door and a digital display on the right side, above a control knob and buttons.

## 2. OPERATING INSTRUCTIONS

### 2.1 Control Panel Overview

The control panel features a digital display, function buttons, and a rotary knob for setting time and selecting programs. Refer to the detailed diagram in your physical manual for specific button functions.

### 2.2 Basic Operation

To start cooking, place food in a microwave-safe container on the turntable. Close the door firmly. Use the rotary knob to set the desired cooking time and power level. Press the Start button to begin. The microwave features a "Start Express" function, allowing you to set the oven to maximum power for 30 seconds with a single button press.

### 2.3 Automatic Programs

The Candy CMXW22DS offers 40 automatic programs for various food types. Select the desired program using the control panel, and the microwave will automatically adjust cooking time and power. Consult the program list in your manual for detailed instructions on each program.

### 2.4 Defrost Function

The automatic defrost program allows you to defrost food by weight or time. Select the defrost function, input the weight of the food or the desired defrosting time, and the microwave will manage the process for optimal results.

### 2.5 Silence Function (Sound Off)

To operate the microwave quietly, activate the "Sound Off" function. This feature mutes operational beeps and alerts, providing a more peaceful cooking experience.

## 2.6 Safety Lock (Child Lock)

Activate the "Safety Lock" function to prevent accidental operation, especially by children. This feature disables the control panel, ensuring maximum safety in the kitchen.

## 3. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your microwave oven.

### 3.1 Interior Cleaning (Masterclean Cavity)

The Masterclean cavity is designed with a smoother internal surface to facilitate cleaning. After each use, wipe the interior with a damp cloth and mild detergent to remove food splatters and grease. For stubborn stains, place a bowl of water with lemon slices inside and heat for a few minutes to create steam, then wipe clean.

### 3.2 Exterior Cleaning

Clean the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents, as they may damage the finish. Ensure the ventilation openings are free from dust and debris.

### 3.3 Turntable Care

The glass turntable and roller ring can be removed for cleaning. Wash them in warm, soapy water or in a dishwasher. Ensure they are completely dry before placing them back in the microwave.

## 4. TROUBLESHOOTING

If you encounter issues with your microwave oven, refer to the following common problems and solutions:

- **Microwave does not start:**

- Check if the power cord is securely plugged into the outlet.
- Ensure the door is fully closed.
- Check your household fuse/circuit breaker.
- Deactivate the Safety Lock function if it is engaged.

- **Food is not heating:**

- Verify that the cooking time and power level are set correctly.
- Ensure the turntable is properly placed and rotating.
- Check if the food container is microwave-safe.

- **Unusual noise during operation:**

- Ensure the turntable and roller ring are correctly positioned.
- Check for any foreign objects inside the cavity.

- **Display is dim or off (ECO function):**

- The ECO function may be active, turning off LEDs to save energy. This is normal operation.

If the problem persists after attempting these solutions, please contact customer support.

## 5. SPECIFICATIONS

Feature	Detail
Brand	Candy
Model Number	CMXW 22 DS
Color	Silver Finish
Product Dimensions (L x W x H)	46.1 x 36.5 x 29 cm
Capacity	22 Liters
Power	800 Watts
Voltage	230 Volts
Material	Aluminum
Special Features	Defrost, 40 Automatic Programs, Silence Function, Safety Lock
Item Weight	11.9 Kilograms
Included Components	Turntable
Installation Type	Freestanding
Recommended Uses	Domestic

## 6. WARRANTY AND SUPPORT




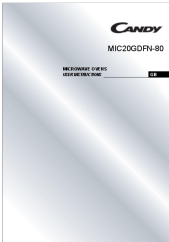 
Your Candy CMXW22DS microwave oven comes with a standard manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including warranty period and coverage details.


For technical assistance, spare parts, or service inquiries, please contact Candy customer support. You can find contact information on the official Candy website or in your product documentation. When contacting support, please have your model number (CMXW 22 DS) and serial number ready.

Additional resources, including FAQs and product registration, may be available on the Candy website.

© 2025 Candy. All rights reserved.


Related Documents - CMXW 22 DS

	<p><a href="#">Candy CMXG20DR/DS/DW Microwave Oven User Manual</a></p> <p>User instructions and safety precautions for the Candy CMXG20DR, CMXG20DS, and CMXG20DW microwave ovens. Includes operating instructions, cooking guides, and troubleshooting tips.</p>
	<p><a href="#">Candy CMW 2070DW Microwave Oven User Manual</a></p> <p>Comprehensive instruction manual for the Candy CMW 2070DW microwave oven, covering installation, operation, safety precautions, and cleaning. Includes detailed guides on various cooking functions and troubleshooting.</p>
	<p><a href="#">Candy CMGA23TNDB Microwave Oven User Manual</a></p> <p>Comprehensive user manual for the Candy CMGA23TNDB microwave oven, detailing safety, installation, operation, cooking functions, and care instructions for optimal appliance use.</p>
	<p><a href="#">Candy MIC20GDFN-80 Microwave Oven User Instructions</a></p> <p>User instructions and safety precautions for the Candy MIC20GDFN-80 built-in microwave oven. Covers installation, operation, cleaning, and troubleshooting.</p>

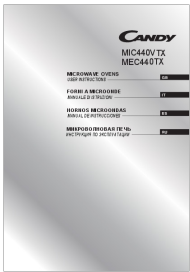 

### [Candy MIC440VTX MEC440TX Microwave Oven Instruction Manual](#)

 Comprehensive user manual for the Candy MIC440VTX and MEC440TX microwave ovens, covering safety instructions, operation, cleaning, troubleshooting, and specifications.

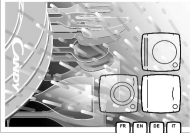

### [Manuale d'Uso e Manutenzione Lavastoviglie Candy](#)

Guida completa per l'utilizzo sicuro ed efficiente della tua lavastoviglie Candy. Include istruzioni su installazione, programmi, manutenzione e risoluzione problemi.