

[Manuals.plus](#) /

› [Lifelong](#) /

› Lifelong LLOT10 10 Liters Oven, Toaster & Griller User Manual

Lifelong LLOT10

Lifelong LLOT10 10 Liters Oven, Toaster & Griller User Manual

Model: LLOT10

1. INTRODUCTION

Thank you for choosing the Lifelong LLOT10 10 Liters Oven, Toaster & Griller. This appliance is designed for versatile cooking, including baking, grilling, and toasting. To ensure safe and efficient operation, please read this manual thoroughly before first use and retain it for future reference.



Image 1.1: The Lifelong LLOT10 Oven, Toaster & Griller, showcasing its compact design and 10-liter capacity.

2. IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.

- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversized foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
- A fire may occur if the toaster oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not place any materials other than manufacturer's recommended accessories in this oven when not in use.
- Do not place paper, cardboard, plastic, or other flammable materials in the oven.
- Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.
- Exercise extreme caution when removing tray or disposing of hot grease.
- The appliance has a heat-resistant handle for safe and comfortable use.

3. PRODUCT COMPONENTS

Your Lifelong LLOT10 Oven, Toaster & Griller comes with the following components:

- 1 x Lifelong LLOT10 Oven, Toaster & Griller Unit
- 1 x Wire Rack
- 1 x Baking Tray
- 1 x User Manual (this document)
- 1 x Warranty Card



Image 3.1: Included accessories: Bake Pan and Oven Rack, alongside the main unit.

4. SETUP AND FIRST USE

1. **Unpacking:** Carefully remove the appliance and all accessories from the packaging. Remove any protective films or stickers.
2. **Placement:** Place the OTG on a stable, heat-resistant, and level surface. Ensure there is adequate ventilation around the appliance (at least 10-15 cm clearance on all sides). Do not place it near flammable materials like curtains.
3. **Cleaning:** Wipe the interior and exterior of the oven with a damp cloth. Wash the baking tray and wire rack with warm, soapy water, rinse, and dry thoroughly.
4. **First Use (Burn-off):** Before cooking food, operate the oven empty for approximately 10-15 minutes to burn off any manufacturing residues.
 - Insert the baking tray and wire rack.
 - Set the temperature knob to 250°C.

- Set the timer knob to 15 minutes.
- A slight odor or smoke may be present during this initial operation; this is normal. Ensure the area is well-ventilated.
- Once the timer rings, turn the temperature knob to OFF and unplug the appliance. Allow it to cool completely.

5. Your OTG is now ready for use.



Image 4.1: Product dimensions for proper placement: 36.5 cm (Depth) x 29.5 cm (Width) x 20.5 cm (Height).

5. OPERATING INSTRUCTIONS

The Lifelong LLOT10 features simple knob controls for temperature and timer settings.

5.1 Control Panel Overview



Temperature Control Knob

Adjust the temperature from 100°C~250°C

30 Minute Timmer Knob

With stay on function & ready bell ring

Image 5.1: Close-up of the control panel, showing the Temperature Control Knob and 30 Minute Timer Knob.

- **Temperature Control Knob:** Located at the top, this knob allows you to adjust the internal oven temperature from 100°C to 250°C.
- **Timer Knob:** Located at the bottom, this knob sets the cooking duration up to 30 minutes. It includes an "Off" position and a "Stay On" function. A bell rings when the timer completes.
- **Power Indicator Light:** Illuminates when the oven is operating.

5.2 General Operation

1. **Prepare Food:** Place your food on the baking tray or wire rack.
2. **Insert Tray:** Carefully slide the tray or rack into the desired slot inside the oven.
3. **Set Temperature:** Turn the Temperature Control Knob to your desired cooking temperature (100°C - 250°C).
4. **Set Timer:** Turn the Timer Knob to the desired cooking time (up to 30 minutes). The power indicator light will illuminate. For continuous operation, turn the timer past the 30-minute mark to the "Stay On" position. Remember to manually turn it off when done.

5. **Monitor Cooking:** The tempered glass door allows you to monitor your food without opening the oven.
6. **Completion:** When the set time elapses, the timer will ring, and the oven will automatically shut off (unless set to "Stay On").
7. **Remove Food:** Using oven mitts, carefully remove the hot tray or rack from the oven.
8. **Cool Down:** Allow the oven to cool completely before cleaning or storing.



Image 5.2: The 10-liter capacity can accommodate a 6-inch pizza or 4 slices of toast.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your appliance.

1. **Always Unplug:** Before cleaning, always unplug the oven from the power outlet and allow it to cool completely.
2. **Exterior Cleaning:** Wipe the exterior surfaces with a damp cloth and mild detergent. Do not use abrasive cleaners or scourers.

3. **Interior Cleaning:** Wipe the interior walls with a damp cloth. For stubborn stains, a non-abrasive cleaner designed for oven interiors can be used. Ensure all cleaner residue is removed.
4. **Accessories:** The baking tray and wire rack can be washed in warm, soapy water. Rinse thoroughly and dry completely before placing them back in the oven.
5. **Crumb Tray:** The crumb tray (if removable) should be cleaned regularly to prevent grease buildup and potential fire hazards.
6. **Do Not Immerse:** Never immerse the main oven unit, cord, or plug in water or any other liquid.

7. TROUBLESHOOTING

If you encounter issues with your Lifelong LLOT10 OTG, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in; power outlet malfunction; timer not set.	Ensure the power cord is securely plugged into a working outlet. Set the timer knob to a desired cooking time or "Stay On".
Food is not cooking evenly.	Incorrect temperature/time; food placed incorrectly; uneven heat distribution.	Adjust temperature and time as per recipe. Ensure food is centered on the rack. For some items, rotating the tray halfway through cooking may help.
Smoke or burning smell during first use.	Manufacturing residues burning off.	This is normal for first use. Ensure good ventilation. If it persists after initial burn-off, contact customer support.
Timer does not reduce once set.	Mechanical timer design.	This model's timer knob does not have a traceback feature. To stop cooking early, turn the temperature knob to OFF and unplug the appliance.
Exterior gets hot during operation.	Normal operation for ovens.	This is expected. Always use oven mitts and avoid touching hot surfaces. Ensure adequate clearance around the oven.

8. SPECIFICATIONS

Feature	Detail
Brand	Lifelong
Model Number	LLOT10
Capacity	10 Liters
Wattage	1000 Watts
Product Dimensions (D x W x H)	36.5D x 29.5W x 20.5H Centimeters
Item Weight	3400 Grams
Color	Black
Material Type	Stainless Steel

Feature	Detail
Door Material Type	Tempered Glass
Control Type	Knob Control
Temperature Range	100-250 Degrees Celsius
Special Features	Adjustable Thermostat, Automatic Shut-Off, Cool Touch Exterior, Temperature Control, Timer
Country of Origin	China

9. WARRANTY AND SUPPORT

Your Lifelong LLOT10 Oven, Toaster & Griller comes with a manufacturer's warranty and dedicated customer support.

- **Warranty:** 2-year manufacturer's warranty. Please refer to the included warranty card for full terms and conditions.
- **Manufacturer & Importer:** Imported and Marketed by Lifelong Online Retail Private Limited.
- **Contact Information:**
 - Address: 5th Floor, Unit No. 508, DLF South Court, Saket District Center, Saket New Delhi, India - 110017
 - Telephone: [+91 9711558877](tel:+919711558877)
 - Email: customercare@lifelongonline.com
- For service or support, please have your model number (LLOT10) and proof of purchase ready.

