

[Manuals.plus](#) /

› [Scosche](#) /

› Scosche BT102 Bluetooth Wireless Earbuds User Manual

Scosche BT102-XWSP2

Scosche BT102 Bluetooth Wireless Earbuds User Manual

Model: BT102-XWSP2 | Brand: Scosche

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your Scosche BT102 Rechargeable Bluetooth Wireless Earbuds. Designed for wireless audio streaming, these earbuds feature an in-line microphone, music control buttons, and noise-isolating ear cushions, offering a seamless audio experience. The IPX4 rating ensures protection against sweat and splashes, making them suitable for various activities.

PACKAGE CONTENTS

Please verify that all items are present in your package:

- Scosche BT102 Bluetooth Wireless Earbuds
- Micro USB Charging Cable
- Multiple Sizes of Noise Isolating Ear Cushions
- Lapel Clip

PRODUCT OVERVIEW

Familiarize yourself with the components of your Scosche BT102 earbuds.



Figure 1: Scosche BT102 Bluetooth Wireless Earbuds. This image displays the overall design of the earbuds, featuring two black earpieces connected by a cable, with a small rectangular control module located on the cable.



Integrated Mic and Music Controls



Bluetooth 4.2



Lapel clip included

Figure 2: In-line Control Module and Features. This image highlights the control module with its integrated microphone and music control buttons (+, call, -). It also shows the Bluetooth 4.2 logo and an included lapel clip for securing the cable.



IPX4 Rating Sweat and Dust Proof



Figure 3: IPX4 Water Resistance. This image illustrates the earbuds' IPX4 rating, showing water droplets on the earpieces, signifying their resistance to sweat and splashes.

CHARGING THE EARBUDS

Before first use, fully charge your earbuds. A full charge takes approximately 3 hours.

1. Locate the Micro USB charging port on the in-line control module.
2. Connect the Micro USB end of the charging cable to the earbuds and the USB-A end to a compatible USB power source (e.g., wall adapter, computer USB port).

3. The LED indicator on the control module will flash red when the battery is low and turn solid red to indicate that the battery is charging.
4. Once fully charged, the LED indicator will turn solid blue. Disconnect the charging cable.

SETUP: BLUETOOTH PAIRING

Follow these steps to pair your Scosche BT102 earbuds with your Bluetooth-enabled device.

1. **Power On:** Press and hold the multi-function button (usually the center button on the in-line control) until the LED indicator begins to flash repeatedly blue. This indicates the earbuds are in pairing mode.
2. **Activate Bluetooth:** On your smartphone or other audio device, enable Bluetooth.
3. **Search for Devices:** Scan for available Bluetooth devices. You should see "Scosche BT102" or a similar name appear in the list.
4. **Connect:** Select "Scosche BT102" from the list to initiate pairing.
5. **Confirmation:** Once successfully paired, the LED indicator will flash blue once every second. The earbuds are now ready for use.

The earbuds utilize Bluetooth 4.2 technology and can maintain a stable connection up to 33 feet (10 meters) from your device.

OPERATING INSTRUCTIONS

The in-line control module provides easy access to music playback and call management.

Music Control:

- **Play/Pause:** Press the multi-function button once.
- **Next Track:** Press and hold the '+' button.
- **Previous Track:** Press and hold the '-' button.
- **Volume Up:** Short press the '+' button.
- **Volume Down:** Short press the '-' button.

Call Management:

- **Answer/End Call:** Press the multi-function button once during an incoming call or active call.
- **Reject Call:** Press and hold the multi-function button during an incoming call.
- **Redial Last Number:** Double-press the multi-function button when not on a call.

The integrated microphone allows for hands-free calling.

MAINTENANCE AND CARE

Proper care will extend the lifespan of your earbuds.

- **Cleaning:** Use a soft, dry cloth to wipe the earbuds. For ear cushions, remove them and clean with a mild soap solution, then rinse and dry thoroughly before reattaching.
- **Water Resistance:** The earbuds are IPX4 rated, meaning they are resistant to sweat and splashes. Do not submerge them in water or expose them to heavy rain.
- **Storage:** Store the earbuds in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery:** To preserve battery life, charge the earbuds regularly, even if not in frequent use. Avoid fully depleting the battery for extended periods.

TROUBLESHOOTING

If you encounter issues with your earbuds, refer to the following common solutions:

Problem	Possible Cause	Solution
Earbuds do not power on.	Low battery.	Charge the earbuds for 3 hours.
Cannot pair with device.	Earbuds not in pairing mode; Bluetooth off on device; device too far.	Ensure earbuds are flashing blue rapidly (pairing mode). Turn Bluetooth on your device. Move device within 33 feet (10 meters) of earbuds. Forget previous pairings on your device and try again.
No sound or distorted sound.	Volume too low; earbuds not connected; audio source issue.	Increase volume on both earbuds and connected device. Re-pair the earbuds. Check if the audio is playing correctly from the source device.
Battery drains quickly.	Normal wear and tear; continuous high volume use.	Battery life is approximately 3 hours of continuous use. Ensure earbuds are fully charged. Reduce volume if possible.

SPECIFICATIONS

Feature	Detail
Model Name	BT102-XWSP2
Connectivity Technology	Wireless
Wireless Communication Technology	Bluetooth
Bluetooth Version	4.2
Bluetooth Range	33 Feet (10 meters)
Battery Life	3 Hours (playback)
Charging Time	3 Hours
Water Resistance Level	IPX4 (Sweat and Splash Resistant)
Item Weight	1.44 ounces (approx. 0.09 pounds)
Special Features	Microphone Included, Noise Isolation
Headphones Jack	Micro USB (for charging)
Ear Placement	In Ear

WARRANTY AND SUPPORT

Your Scosche BT102 earbuds come with a **3-year warranty**, protecting against defects in materials and workmanship under normal use.

For technical support, warranty claims, or further assistance, please contact Scosche customer service. Visit the official Scosche website for contact information and additional resources.

Scosche Official Website: www.scosche.com

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

My Scosche BT102 earbuds are speaking the wrong language. How do I make them speak English?

The official manual for the Scosche BT102-XWSP2 does not explicitly list a button combination for changing the voice prompt language. However, many Bluetooth earbuds using similar chipsets allow you to toggle the language (usually...

[Read full answer](#)