

[Manuals.plus](#) /

› [Citizen](#) /

› Citizen Eco-Drive CA0621-05L User Manual

Citizen CA0621-05L

Citizen Eco-Drive CA0621-05L User Manual

Model: CA0621-05L | Brand: Citizen

INTRODUCTION

This user manual provides comprehensive instructions for the Citizen Eco-Drive CA0621-05L watch. Designed with Citizen's innovative Eco-Drive technology, this timepiece is powered by any light source, eliminating the need for battery replacement. It features a durable stainless steel case, a comfortable calfskin strap, and a sophisticated chronograph function, making it a reliable and stylish accessory for daily wear.





Image: Front view of the Citizen Eco-Drive CA0621-05L watch, showcasing its silver-tone stainless steel case, navy and black dial with silver-tone hands and hour markers, and brown calfskin strap with white stitching.

Key Features

- **Eco-Drive Technology:** Powered by light, never needs a battery.
- **1/5 Second Chronograph:** Measures up to 60 minutes for precise timing.
- **12/24 Hour Time Display:** Offers versatile timekeeping options.
- **Date Display:** Convenient window for the current date.
- **Luminous Hands and Markers:** Ensures readability in low-light conditions.
- **Mineral Crystal:** Durable and scratch-resistant watch face.
- **100 Meters Water Resistant:** Suitable for swimming and snorkeling, but not diving.
- **Silver-Tone Stainless Steel Case:** Robust and elegant casing.
- **Calfskin Strap:** Comfortable and stylish brown leather band.

Setup and Initial Operation

1. Charging the Eco-Drive

Your Citizen Eco-Drive watch is powered by light. To ensure optimal performance, expose the watch face to a light source (natural or artificial) regularly. A full charge can last for several months in the dark. Avoid prolonged storage in dark places to prevent the watch from stopping.

2. Setting the Time and Date

1. Pull the crown out to the second click position. The second hand will move to the 0-second position.
2. Rotate the crown to set the hour and minute hands. Ensure the 12/24 hour hand is also set correctly.
3. Push the crown back to the normal position to start the watch.
4. To set the date, pull the crown out to the first click position. Rotate the crown to adjust the date. Push the crown back to the normal position when done.



Image: Detailed diagram of the watch face, indicating the 1/5-second chronograph, 12/24-hour time sub-dial, and the date display window.

OPERATING INSTRUCTIONS

Using the Chronograph

The 1/5 second chronograph can measure up to 60 minutes. The large second hand functions as the chronograph second hand when activated.

1. **Start/Stop:** Press the upper button (A) to start the chronograph. Press it again to stop.
2. **Reset:** While the chronograph is stopped, press the lower button (B) to reset all chronograph hands to the 0 position.

Water Resistance

This watch is water resistant to 100 meters (330 feet). This means it is suitable for showering, swimming, and snorkeling. However, it is not recommended for scuba diving. Always ensure the crown is pushed in completely before exposing the watch to water.



Image: Side profile of the watch, illustrating the position of the crown and the two chronograph pushers (A and B).

MAINTENANCE AND CARE

- **Cleaning:** Wipe the watch case and crystal with a soft, dry cloth. For the leather strap, avoid excessive moisture and

harsh chemicals.

- **Light Exposure:** To maintain charge, expose your Eco-Drive watch to light regularly. Avoid covering the watch face with clothing for extended periods.
- **Temperature:** Avoid exposing the watch to extreme temperatures (below 14°F / -10°C or above 140°F / 60°C) or sudden temperature changes.
- **Chemicals:** Keep the watch away from solvents, detergents, perfumes, and cosmetics, as they may damage the case, strap, or gaskets.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch has stopped or is running irregularly.	Insufficient light exposure (low charge).	Expose the watch to bright light for several hours. For a full charge, refer to the charging guidelines.
Date changes at noon instead of midnight.	AM/PM setting is incorrect.	Advance the time by 12 hours.
Chronograph hands do not reset to zero.	Impact or magnetic interference.	Perform a chronograph zero-position correction. Refer to the full user manual for detailed steps.

SPECIFICATIONS

Feature	Detail
Model Number	CA0621-05L
Movement	Eco-Drive (Light-Powered Quartz)
Case Material	Stainless Steel
Band Material	Calfskin Leather
Crystal Type	Mineral Crystal
Water Resistance	100 Meters (330 Feet)
Chronograph	1/5 Second, measures up to 60 minutes
Functions	Time (Hour, Minute, Second), Date, 12/24 Hour Time
Product Dimensions	4.72 x 4.72 x 4.72 inches; 2.61 ounces

WARRANTY AND SUPPORT

The Citizen Eco-Drive CA0621-05L watch comes with a five-year limited manufacturer's warranty. For detailed warranty information, service inquiries, or to download the complete user manual, please visit the official Citizen Watch website or refer to the provided documentation.

For further assistance, you may also refer to the official user manual PDF [Citizen User Manual \(PDF\)](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question