

[Manuals.plus](#) /

› [Cutex](#) /

› Cutex 4C-337G Electric Foot Control Pedal Instruction Manual for Simplicity and Singer Sewing Machines

Cutex 4C-337G

Cutex 4C-337G Electric Foot Control Pedal Instruction Manual

For Simplicity and Singer Sewing Machines

1. INTRODUCTION

This manual provides comprehensive instructions for the proper installation, operation, and maintenance of your Cutex 4C-337G Electric Foot Control Pedal. Please read this manual thoroughly before use to ensure safe and efficient operation of your sewing machine.

2. PRODUCT OVERVIEW

The Cutex 4C-337G is an electric foot control pedal designed to provide variable speed control for compatible portable sewing machines. It allows for hands-free operation, enabling precise control over stitching speed.



Image 1: The Cutex 4C-337G Electric Foot Control Pedal. This image shows the light gray foot pedal with "ELECTRONIC" printed on the top surface, connected to a black electrical cord ending in a two-prong plug.

3. COMPATIBILITY

This foot control pedal (Part # 4C-337G) is compatible with a wide range of portable sewing machines. Please verify your machine's model number against the list below:

- **Babylock models:** BL8800
- **Bernina models:** H70, 740E
- **Euro-Pro models:** 9101, 9105, 9106, 9110, 9120, 9125, 9130, 9136
- **Husqvarna Viking models:** Huskystar C-10, C-20, ER10
- **Pfaff models:** 200C
- **Simplicity models:** SA2400L, SW240
- **Singer models:** 8090, 910, 9920, 9940, 9960 Quantum Stylist, XL3400 Quantum White: 750, 2999, 3100

If your sewing machine model is not listed, please consult your machine's manual or contact the manufacturer to confirm compatibility before use.

4. SETUP

1. **Power Off:** Ensure your sewing machine is turned off and unplugged from the electrical outlet before connecting the foot pedal.
2. **Locate Port:** Identify the foot pedal port on your sewing machine. This is typically a round or oval-shaped receptacle.
3. **Connect Pedal:** Carefully insert the plug of the Cutex 4C-337G foot pedal into the designated port on your sewing machine. Ensure a snug and secure connection. Do not force the plug.
4. **Position Pedal:** Place the foot pedal on the floor in a comfortable and stable position where you can easily operate it with your foot.
5. **Power On:** Once the pedal is securely connected, plug your sewing machine back into the electrical outlet and turn on the machine's power switch.

Note: Always ensure the sewing machine is stable and on a flat surface before operation.

5. OPERATING INSTRUCTIONS

The foot control pedal allows you to regulate the speed of your sewing machine. The harder you press the pedal, the faster the machine will sew.

1. **Start Sewing:** With your sewing machine threaded and ready, gently press down on the foot pedal. The machine will begin to sew at a slow speed.
2. **Adjust Speed:** Increase pressure on the pedal to increase the sewing speed. Release pressure to slow down.
3. **Stop Sewing:** Fully release the foot pedal to stop the sewing machine.

Practice using the pedal to achieve smooth and consistent speed control, especially when working on intricate details or starting and stopping stitches.

6. MAINTENANCE

To ensure the longevity and proper function of your foot control pedal, follow these simple maintenance

guidelines:

- **Cleaning:** Wipe the pedal surface with a soft, dry cloth to remove dust and debris. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** When not in use, store the pedal in a clean, dry place, away from direct sunlight and extreme temperatures. Avoid coiling the cord too tightly.
- **Inspection:** Periodically inspect the cord and plug for any signs of damage, such as fraying or exposed wires. If damage is found, discontinue use immediately and replace the pedal.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Pedal does not respond.	• Not properly connected. • Sewing machine not powered on. • Incorrect pedal for machine.	• Ensure pedal plug is fully inserted into the machine's port. • Verify the sewing machine is plugged into an outlet and its power switch is ON. • Check the compatibility list in Section 3.
Machine runs at full speed only.	• Pedal malfunction.	• Discontinue use and contact support for replacement.
Intermittent operation.	• Loose connection. • Damaged cord/plug.	• Ensure all connections are secure. • Inspect cord and plug for damage. Replace if necessary.

If troubleshooting steps do not resolve the issue, please contact customer support.

8. SPECIFICATIONS

- **Part Number:** 4C-337G
- **Product Type:** Electric Foot Control Pedal
- **Compatibility:** Refer to Section 3 for a detailed list of compatible sewing machine models.
- **Brand:** Cutex
- **ASIN:** B01KVVZR82
- **First Available Date:** May 7, 2020

9. WARRANTY AND SUPPORT

Specific warranty information for the Cutex 4C-337G Electric Foot Control Pedal is typically provided at the point of purchase or within the product packaging. Please retain your proof of purchase for warranty claims.

For technical support, troubleshooting assistance beyond this manual, or warranty inquiries, please contact the retailer or manufacturer directly. Contact information can usually be found on the product packaging or the official Cutex website.

